

Taski 350B Trouble Shooting Guide

Malfunction	Possible causes	Troubleshooting
Machine does not run	Battery disconnection socket unplugged.	• Insert the disconnected charger jack. • Switch on the machine
	Batteries not charged or insufficiently charged (Switch on: red battery indicator is displayed).	• Check • Completely recharge the battery.
Brush does not turn	The machine has been overloaded, causing the overcurrent protection to be tripped.	• Release the drive switch and press again • If necessary, switch the machine on again.
Foam or liquid leaking from the machine	Float malfunction	• Turn off the suction unit.
		• Check that the float is functioning correctly.
		• Product has been used that is unsuitable for the scrubber dryer.
Poor vacuum performance Floor remains wet Soiled solution not picked up	The float closes the inlet opening at the suction unit (overfilling protection for recovery tank).	• Check that the recovery tank is not full • Check that the float is functioning correctly.
	Hose or nozzle blocked e.g. by pieces of wood or residual material.	• Remove the blockage.
	The blades do not adjust well to the floor consistency.	• Clean the squeegee
	Worn blades	• Change/turn the blades.
	Dirt sieve full (yellow)	• Remove the dirt sieve
		• Rinse the dirt sieve under running water.
Output of cleaning solution insufficient	Solution tank empty	• Fill the solution tank
	Solution tank filter blocked.	• Clean solution tank filter.
	Water distributor blocked.	• Clean the water distributor.