


Replacing the Beacon Light

Remove the 3mm hex screws that secure the Beacon Light.

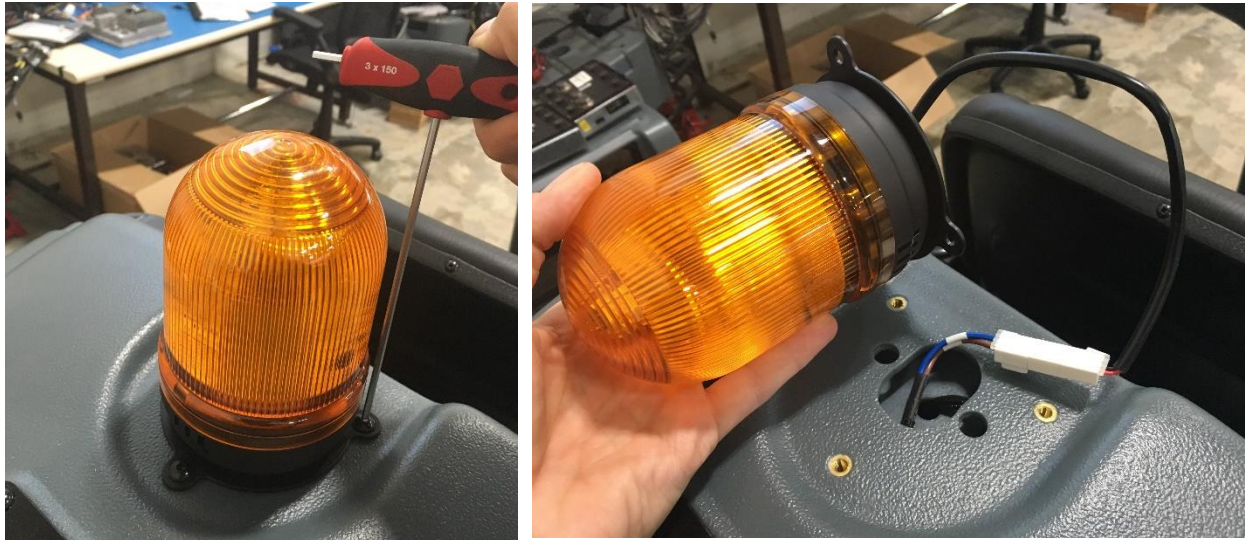

This can be swapped out simply by connecting a new component. Once connected, tuck the extra wiring back into the scrubber cavity. Secure the Beacon Light using the three 3mm screws.