

Motor Amplifier Replacement



Turn off the unit and disconnect the red battery coupling



Remove the six 5mm screws indicated below



Remove the front cover and place it to the side.

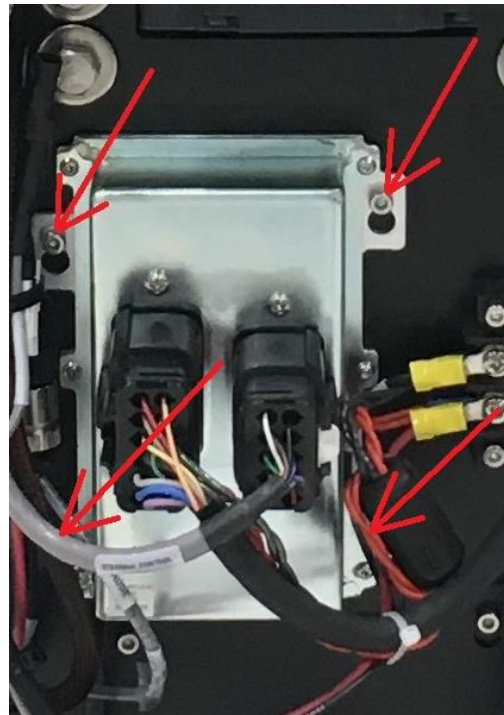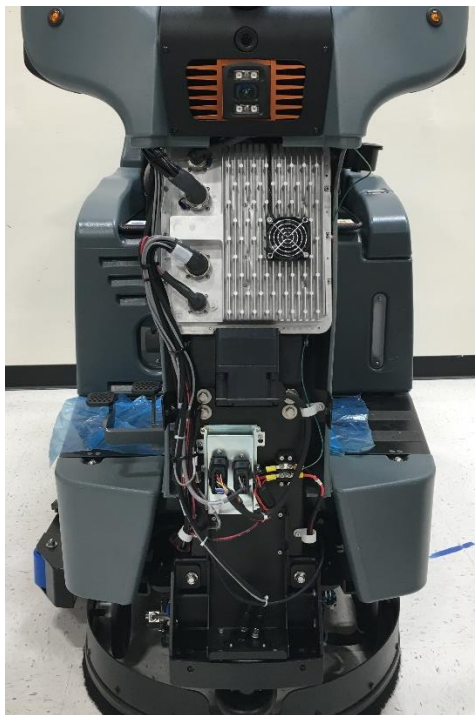

Loosen the four 3 mm hex screws above the eyelets, decouple the two black plugs and remove the Motor Amplifier

Connect the new Motor Amplifier, reassemble the front cover, reconnect the red battery coupling and power on the unit.