

Replacing the Solenoid


Power on the machine, press the one touch button, followed by the vacuum button, to lower the scrub deck and turn off the vacuum. Power off the machine.




Remove the right side squeegee and right side brush.




Locate the solenoid cable bundle and unplug the spade connectors on the solenoid valve.

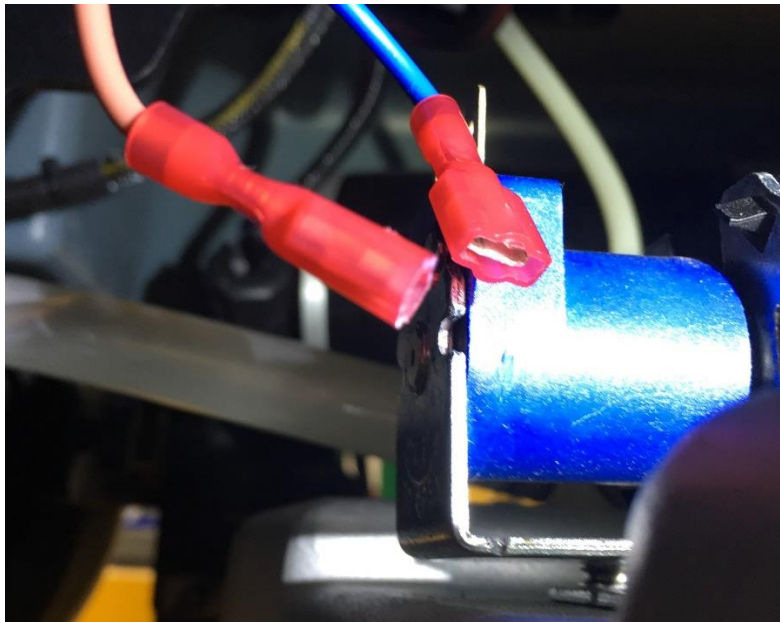

If the solenoid valve needs to be removed, the clean water tank must first be emptied. Any zip ties coupled to the solenoid will need to be removed, the two hose clamps loosened and the hoses disconnected from the solenoid body.

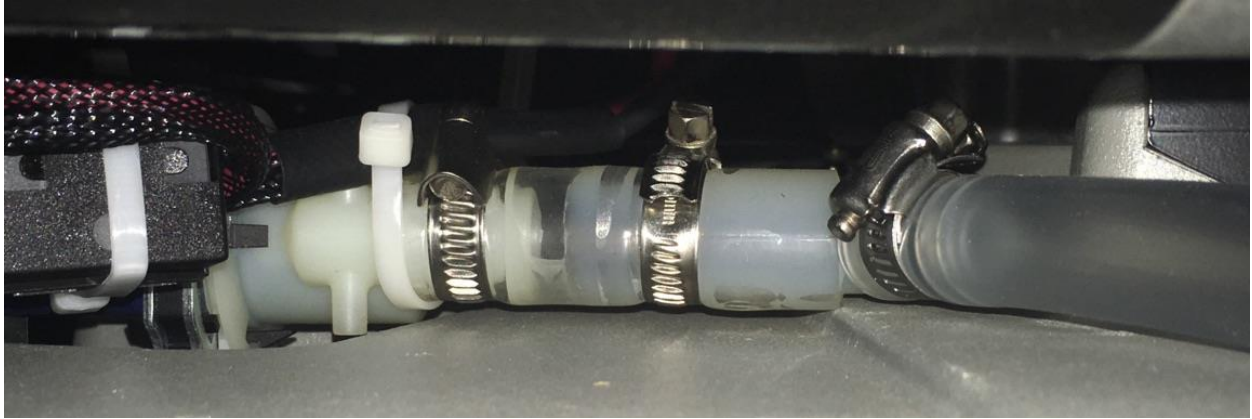

Remove the two Phillip head screws that secure the solenoid to the scrubber. A right angled screw driver may be needed.

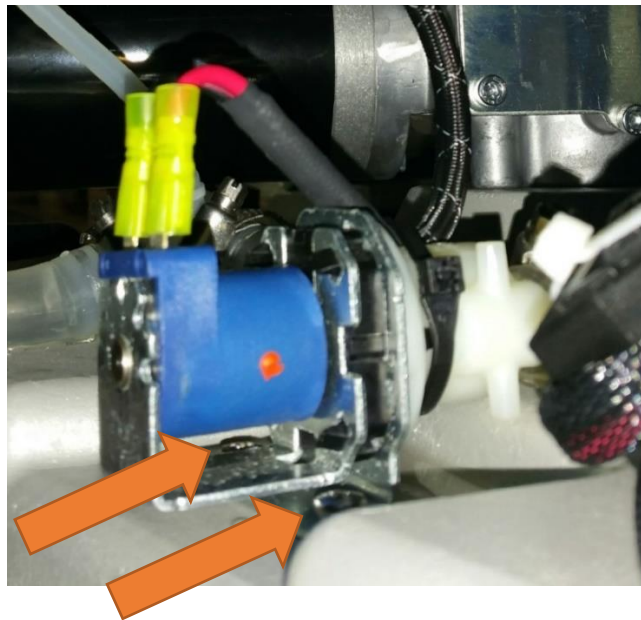

Be sure to reconnect the solenoid to the scrub deck by securing the two screws, re-secure all the plumbing and reconnect the spade connectors. Polarity does not matter.