




LOW SPEED FLOOR MACHINES

OWNERS MANUAL

IMPORTANT: READ OWNERS MANUAL CAREFULLY

Please fill out & return your warranty card !

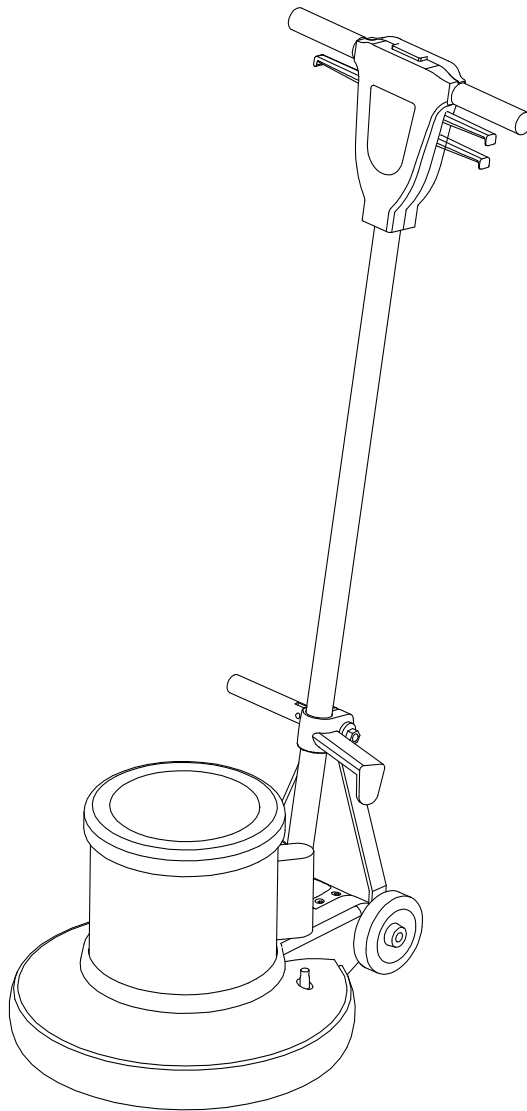

MODEL # **6UFR4** **6UFR5**

Manufactured for Dayton Electric Mfg. Co.,
Niles, IL 60714 USA
For Repair Parts, Call 1-800-323-0620

REV.02(10-2012)
VF41055MC

TABLE OF CONTENTS

Safety Precautions	3
Machine Operation	4
Machine Maintenance & Storage	4
Handle Release Assembly Instructions	5
Parts Lists	6-9
Wiring Diagram	10

Please read and save these instructions. Read carefully before attempting to assemble, install, operate or maintain the product described. Protect yourself and others by observing all safety information. Failure to comply with instructions could result in personal injury and/or property damage! Retain instructions for future reference.


Dayton® Low Speed Floor Machines

SAFETY PRECAUTIONS

⚠ WARNING

This machine must be grounded!

Grounding provides a path of least resistance for electrical current. To reduce the risk of electrical shock should the machine malfunction, the machine has a special grounding plug. Don't remove the ground pin under any circumstance!

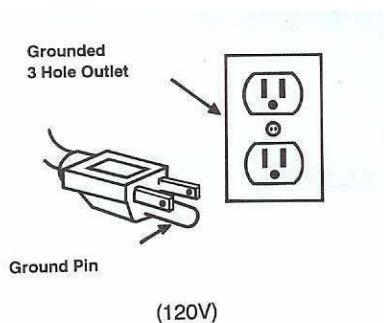

This machine is intended for commercial use. It is constructed for use in an indoor environment and is not intended for any other use. Use only recommended accessories.

All operators shall read, understand and exercise the following safety precautions:

1) Do not operate machine:

- Unless trained and authorized.
- Unless you have read and understand operators manual.
- In flammable or explosive areas.
- With damaged cord or plug.
- If not in proper operating condition.
- In outdoor areas.
- In standing water.
- With the use of extension cords.

2) Before operating machine:

- Make sure all safety devices are in place and operate properly.

3) When using machine:

- Only use approved pads.
- Do not run machine over cord.
- Do not pull machine by cord or plug.
- Do not pull cord around sharp edges or corners.
- Turn power switch to "off" prior to unplugging machine.
- Do not unplug by pulling on the cord.
- Do not stretch cord.
- Do not handle plug with wet hands.
- Keep cord away from heated surfaces.
- Report machine damage or faulty operation immediately.

4) Before leaving or servicing machine:

- Turn off machine.
- Unplug cord from outlet.

5) When servicing machine:

- Unplug cord from outlet.
- Use manufacturer supplied or approved replacement parts.

⚠ WARNING

To avoid electrical shock, please

Replace the power cord immediately if any damage is being detected. The replacement must be performed only by an authorized person.

Operation of Low Speed Floor Machines

⚠ WARNING

Read operators manual thoroughly prior to operating or servicing this machine.

GENERAL USE

1. Remove any obstructions or other obstacles in the area which is to be cleaned.
2. Place the handle in the upright position and tilt machine back until handle rests on the floor.

⚠ WARNING

Be sure the machine is not plugged into an outlet.

3. Attach the pad driver or brush to the machine by placing the clutch plate over the gearbox hub and turning the driver or brush 1/4 turn.
4. Place machine back into its upright position.
5. Plug power cord into a grounded outlet.

⚠ WARNING

Never use an extension cord in conjunction with the standard power cord.

6. The handle height may be adjusted by lifting up the compression handle which is located on the right side of the handle tube about 1 foot about floor level. Release the compression handle and adjust handle to safe operating height, then push back down to the compression handle to lock the handle in operating position.
7. To start the machine, press the cord safety button on the top of the upper switch housing, and then squeeze either of the operating triggers. (The safety button must be depressed prior to squeezing the operating triggers.)
8. When the machine is in operation, both hands should be placed on the switch housing (upper handle).

9. To stop the machine at any time, simply release the operating triggers and the machine will stop automatically.

MAINTENANCE

To keep the machine performing well for many years, please follow the following maintenance procedures.

⚠ WARNING

Always confirm that the machine is unplugged prior to performing any maintenance or repairs.

1. Unplug machine as soon as you are done using it.
2. Clean the outside of the machine with a mild cleaner.
3. Check power cord for any damage. If damage is detected, replace power cord immediately.
4. Lubricate wheels with a water resistant lubricant once a month.
5. Check machine for loose or missing nuts and bolts, and replace as necessary.
6. If the machine is used in a dusty environment, you may remove the motor cover and blow the motor clean with compressed air. This will ensure proper ventilation, and allow the motor to run cooler.


STORAGE

1. Unplug machine from power source and wrap cord on handle.
2. Tilt machine so the pad is not touching the floor.
3. Store machine in upright position and in a dry area.

Handle Release Assembly Instructions

STEP # 3

- 1) Make sure actual cord wrap faces to the left of the machine when you are standing behind it.
- 2) Assemble hardware in the following order: spacer, left handle bracket, nylock nut. (do not over tighten nylock nut, Only tighten it enough to hold handle in place when compression lever is in down position)

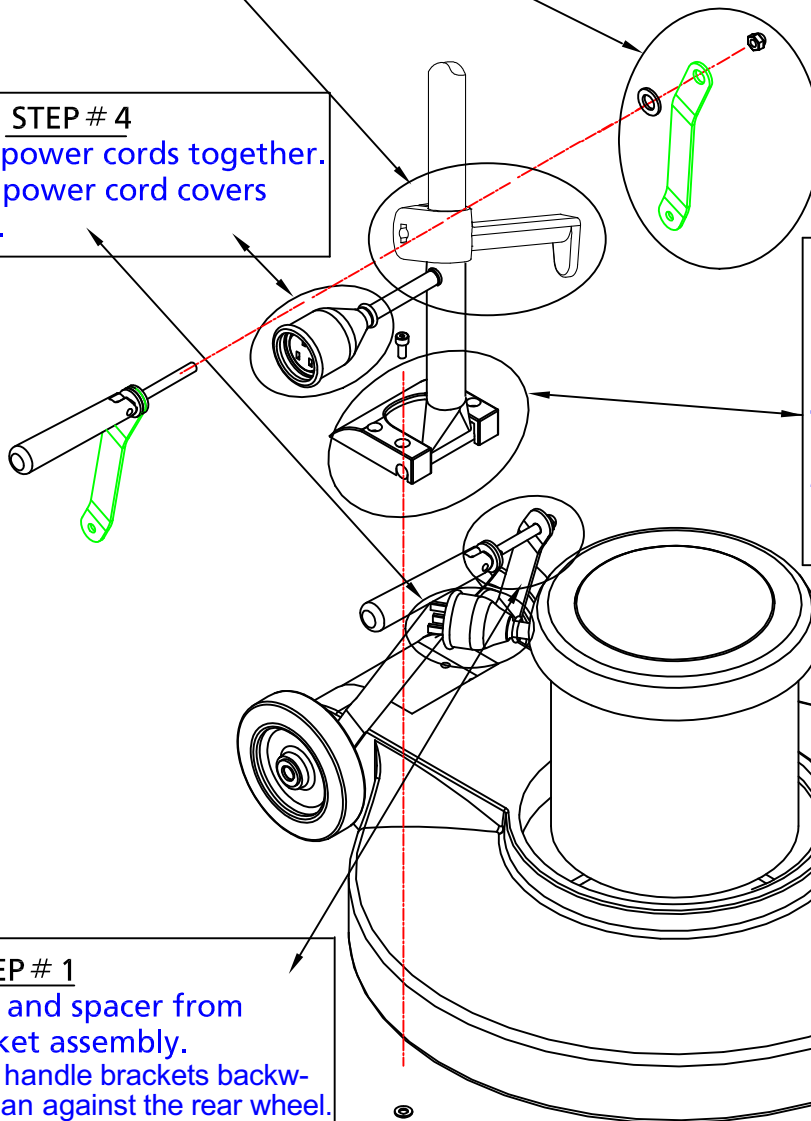

- ## STEP # 4
- 1) Connect power cords together.
 - 2) Connect power cord covers together.


STEP # 2

- 1) Remove handle clamp blocks with 5mm hex head.
- 2) Place handle assembly into handle clamp blocks
- 3) Re-attach the blocks to the base with 5mm hex head.

STEP # 1

- 1) Remove nut and spacer from handle bracket assembly.
- 2) Push the two handle brackets backward so they lean against the rear wheel.


HANDLE ASSEMBLY

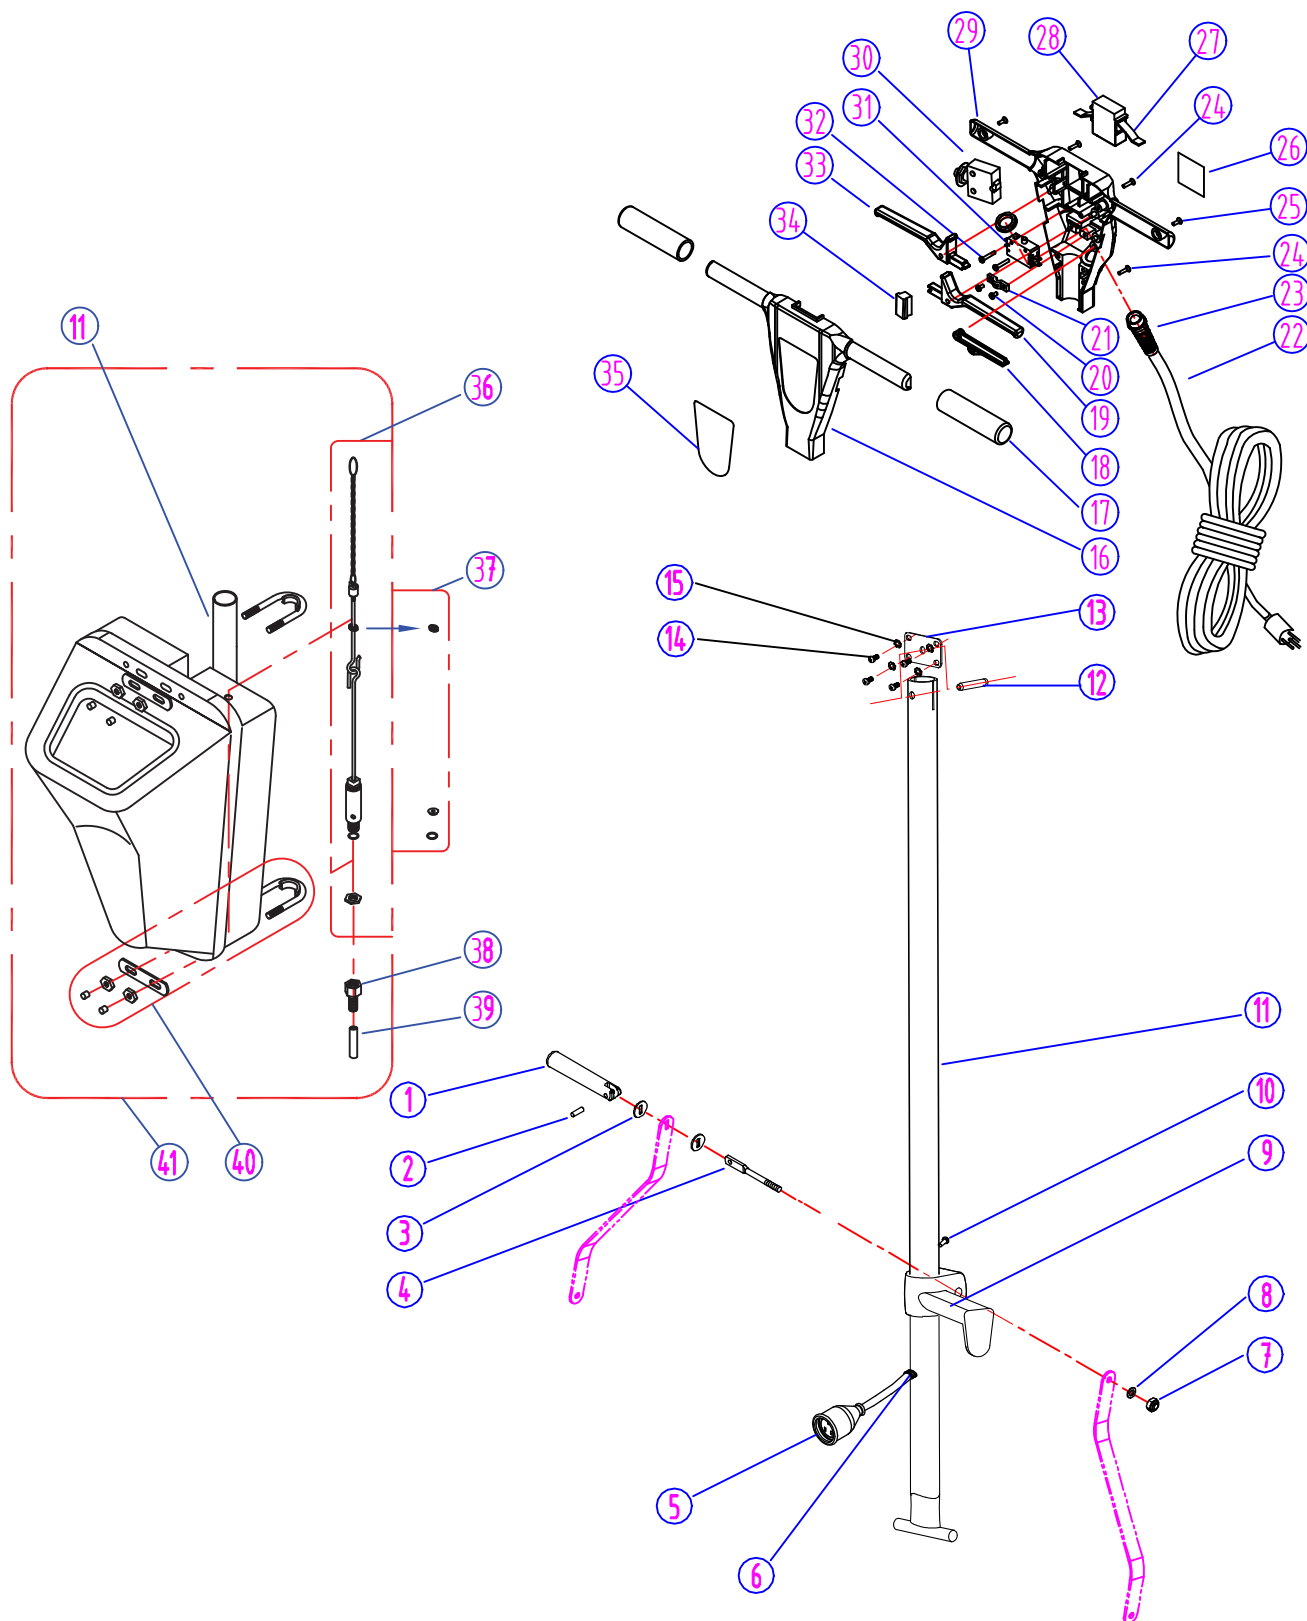

Operating Instructions & Parts Manual 4NEJ8/4NEJ9 Low Speed Floor Machines

DIA NO	PART NUMBER	DESCRIPTOIN	NO REQ'D
1	VF30016	HANDLE RELEASE	1
2	VF30017	SCREW	1
3	VF30018	WASHER,PLAIN	2
4	VF300152	BOLT HANDLE RELEASE	1
5	VF45125	CORD,HANDLE	1
	AS41901	PLUG PROTECTOR,SMALL MALE	1
6	VF50120	GROMMET	1
7	VF13504	NUT,LOCK,M10	1
8	VF30027	WASHER,PLAIN	1
9	VF300141	CORD WRAP BLOCK	1
10	VF13493	SCREW,M6X10	1
11	AS312206B	TUBE	1
12	VF13570	PIN	1
13	VF40169	CONNECTION PLATE	1
14	VF14222	SCREW,M5X12	4
15	VF13604	TEETH WASHER,M5	4
16	AS312209	FRONT COVER	1
17	VF48310	HANDLE GRIP	2
18	AS220065	LEVER,SOLUTION	1
19	AS220045	LEVER,LEFT,SWITCH	1
20	VV13661	SCREW,M4X12	2
21	VF48309	CLAMP BLOCK	1
22	VF45119	CORD,POWER SUPPLY	1
23	AS22009	STRAIN RELIEF,CORD	1
24	GT13009	SCREW,M5X30	5
25	GT13008	SCREW,M5X20	2
26	VF41194TP	SERIAL TAG 17 "	1
	VF41004TP	SERIAL TAG 20 "	1
27	GV40218	SPRING,SAFETY BUTTON	1
28	GV40209	SAFETY BOTTON	1
29	AS312209	REAR COVER	1
30	VF99010C	BREAKER, CIRCUIT, 17A / A-0701H5	1
31	VF44203	SWITCH ASSY	1
32	VF14212	SCREW,M3X25	2
33	AS220055	LEVER,RIGHT,SWITCH	1
34	AS312203	COVER	1
35	GV40226B	LABEL,FRONT COVER	1
36	VF40200	VALVE ASSY KIT	1
37	VF40001	TANK SEAL KIT	1
38	VF40132	BARB HOSE	1
39	VF40139	HOSE SOLUTION	1
40	VF40000	TANK MOUNTING KIT	1
41	MF-VF001	SOLUTION TANK	1

BASE ASSEMBLY

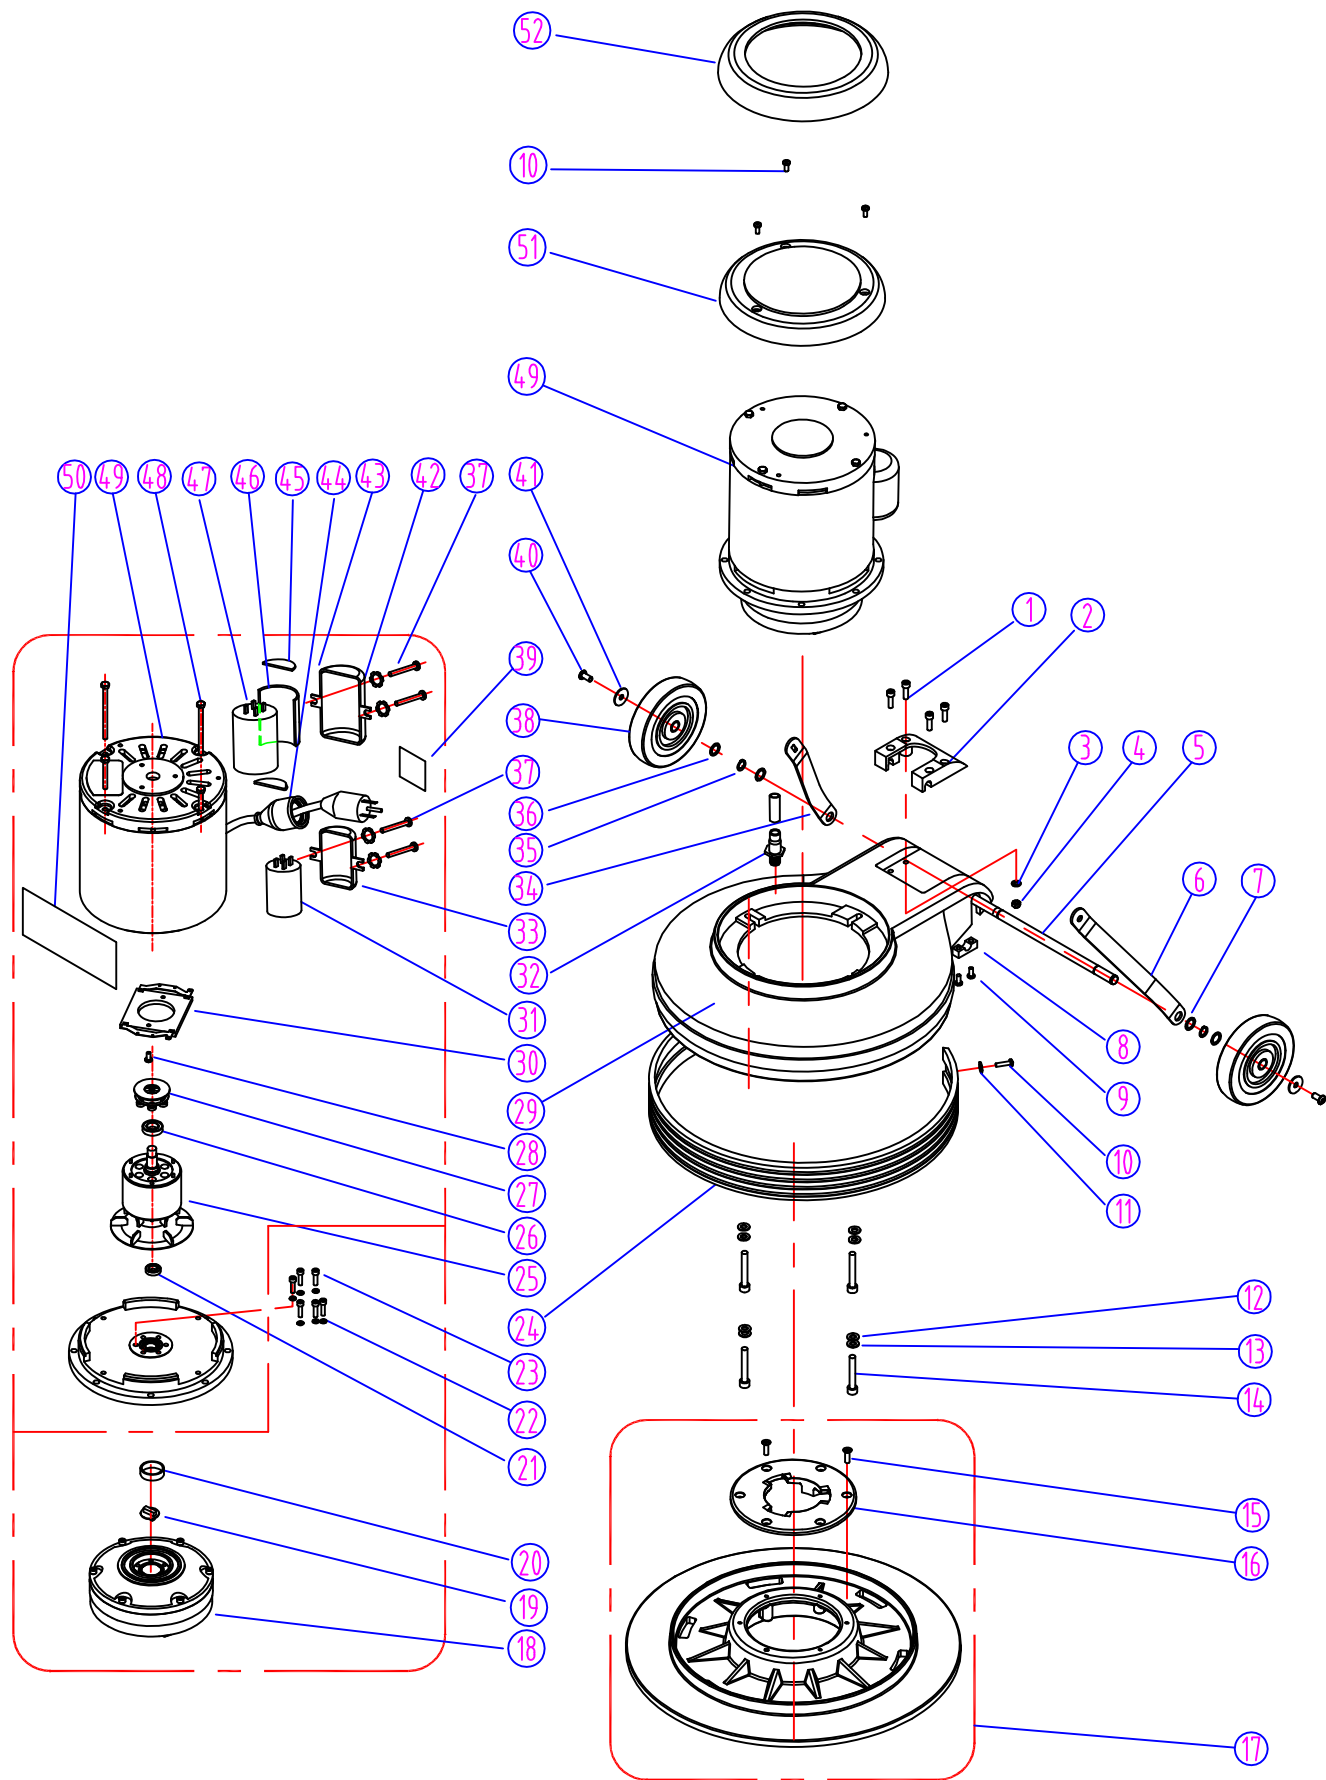

Operating Instructions & Parts Manual 6UFR4/6UFR5 Low Speed Floor Machines

DIA NO	PART NUMBER	DESCRIPTION	NO REQ'D
1	GT13080	SCREW, M6 X 30	4
2	AS312201TP	PLATE,HANDLE GUIDE	1
3	GT13030	WASHER, PLAIN, M6	4
4	VF13502	NUT, LOCK, M6	4
5	VF30026	AXLE	1
6	VF30020	BRACKET, LEFT HANDLE	1
7	VV20274	WASHER, PLAIN, M13	4
8	GV40235	CLAMP BLOCK, AXLE	2
9	VV13621	SCREW, SELF-TAPPING, ST, M5 X 20	4
10	VA13474	SCREW, M5 X 16	5
11	VF13474A	WASHER, PLAIN, M5	4
12	VF13524	WASHER, PLAIN, M8	4
13	VF13519	WASHER, LOCK, M8	4
14	GT13016	SCREW, M8 X 55	4
15	MF-VF002-4A	SCREW, SELF-TAPPING, 1 / 4"-1"	6
16	MF-VF002-2	CLUTCH PLATE	1
17	MF-VF021	PAD HOLDER, 16"	1
	MF-VF022	PAD HOLDER, 19"	1
18	VF999802B	GEAR BOX	1
19	VF99021	COUPLER	1
20	MT01102	SLEEVE	1
21	VF999821	BEARING,6002 LLU	1
22	VV13601	WASHER, LOCK, M5	6
23	VV13636	SCREW, M5 X 30	6
24	AS312101	BUMPER, 17"	1
	AS312204	BUMPER, 20"	1
25	YLQ19200	ROTOR WITH FAN ASSY	1
26	YCQ10501	BEARING, 6203 RZ	1
27	YCQ12301	CENTRIFUGAL SWITCH	1
28	VV20509	SCREW, M5 X 10	2
29	VF40101TP	FRAME,17"	1
	VF40100TP	FRAME,20"	1
30	YCQ12302	STATIONARY SWITCH	1
31	VF999854	RUN CAPACITOR, 50uF / 370V	1
32	VF40152	HOSE BARB	1
33	YLQ14601	MOUNTING FRAME (SMALL), CAPACITOR	1
34	VF30019	BRACKET, HANDLE, RIGHT	1
35	VF13520	WASHER, LOCK	2
36	VF50119	WASHER, PLAIN, M12	2
37	VF14214	SCREW, M5 X 8	4
38	VF48202	WHEEL, 5"	2
39	VF40994	LABEL, READ MANUAL	1
40	VF44012	SCREW, M6 X 12.7	2
41	VF13666	WASHER, M6	2
42	VF13604	WASHER, LOCK, EXTERNAL TOOTH	4
43	YCQ10615	MOUNTING FRAME (BIG), CAPACITOR	1
44	AS41902	PLUG PROTECTOR, LARGE FEMALE	1
45	YCQ10414	CLEAR COVER	4
46	YCQ10416	CAPACITOR WRAP	2
47	VF999805	START CAPACITOR (BIG), 400-450UF / 150V	1
48	YLQ17507	BOLT ASSEMBLY	4
49	VF999787	MOTOR, 110V, 1.5HP	1
50	VF44003	LABEL, MOTOR	1
51	VF44001TP	TOP COVER, MOTOR	1
52	VF47023	BUMPER	1

Wiring Diagram

