

Replacing the UI Screen


Power off the unit and disconnect the red battery coupling.



Remove the six screws indicated below:



Remove the front cover and place it to the side. Turn the top touchscreen trunk counter-clockwise to decouple it from the BCM.

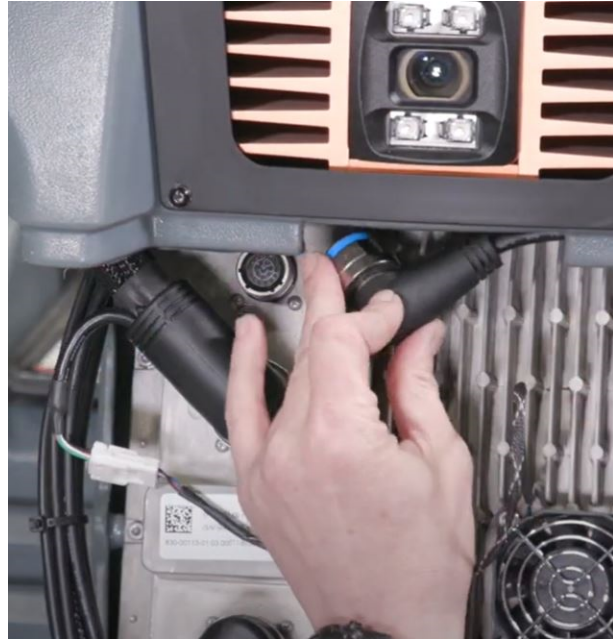

Remove the five 3 mm hex bolts from the touchscreen cover.



Lift the touchscreen up using a flathead screwdriver. Pull the cable up and through the steering column.



Install the new touchscreen and feed the cable back through the steering column. Reconnect the touchscreen trunk to the BCM, Reconnect the red battery coupling and power on the unit.

NOTE: It is no longer recommended to have the touchscreen cover. It can cause static electricity and can damage the touchscreen. After you remove it, you can dispose of it.