

Replacing the Front Camera

Power down the machine and disconnect the red battery coupling.
Remove the six 2.5 mm hex screws that secure the top black cover.
Remove the top black cover.



Unscrew the M12 connector and remove the two 2.5mm hex screws to free the front camera.



Reverse your steps to install new front 2D camera.