


Removing the Rear Start/Stop Button

Remove the four hex screws on the perimeter of the rear Start/Stop Button plate.




Use a slotted screw driver to lift the connector on the rear of the button hardware. Slip it under the plastic lip and gently rotate clockwise, as shown.



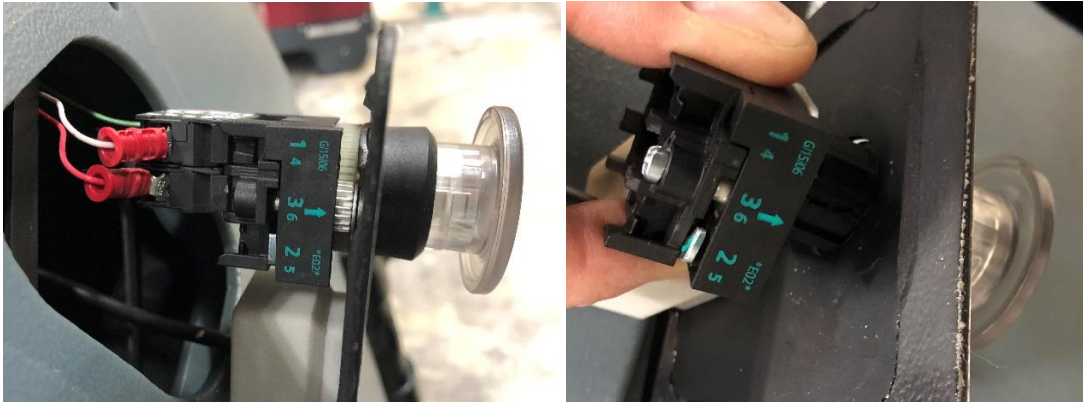

Use a slotted screwdriver to slide over the release lever.

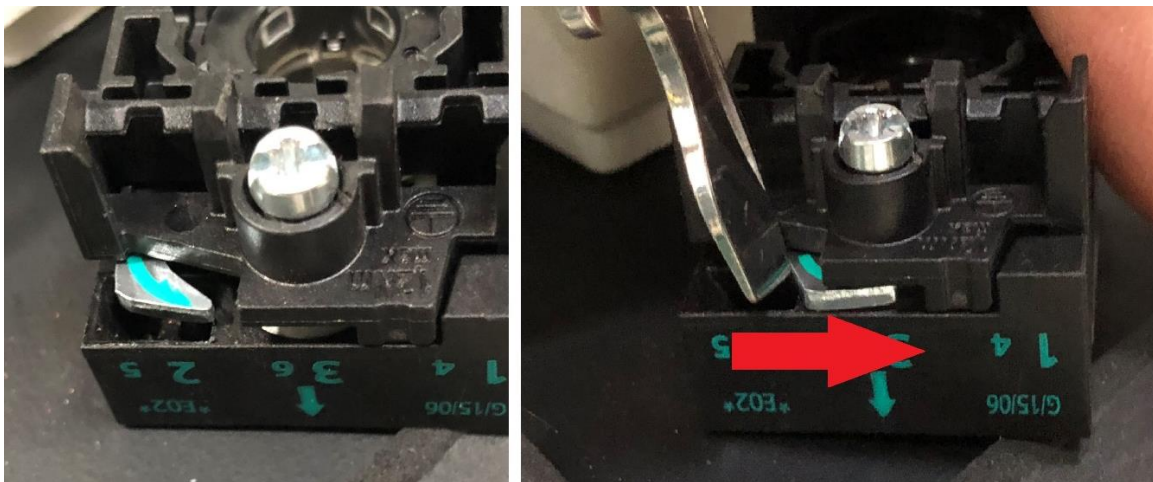

The two pieces should separate, allowing removal. To reassemble, push together to snap connect.

