


How to Read Kinetek Error Codes

1. Locate the red light in the bottom right of the controller.
2. If the light is flashing the controller has an error and it will blink in a series of fast flashes and then slow flashes. Count the flashes and see the table below to get the hex code.
3. See next pages for the error table to find out what is wrong with your machine.

Example: 4 fast and 10 slow would be code 4A

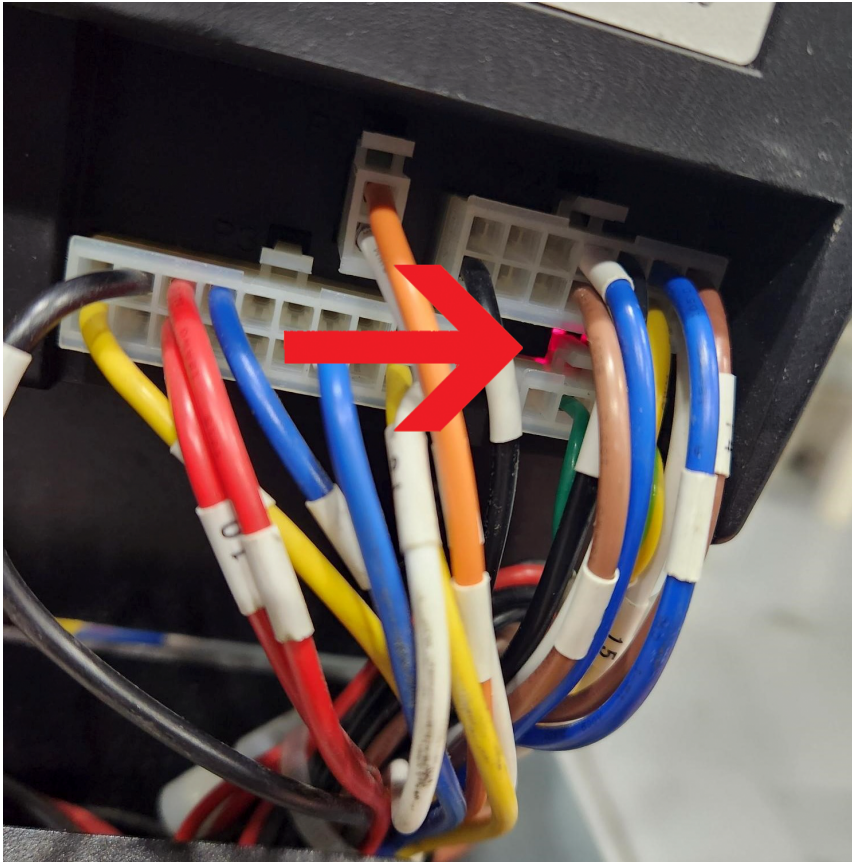

Flashes	Code
0	0
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
10	A
11	B
12	C
13	D
14	E
15	F