

Locating the Scrubber Horn


Power on the machine, press the one touch button, followed by the vacuum button, to lower the scrub deck and turn off the vacuum. Power off the machine.




Remove the right side squeegee and right side brush.



The horn cabling is in the same bundle as the solenoid wires. Tracing the wires, as shown below, will lead to the horn indicated by the red arrow.

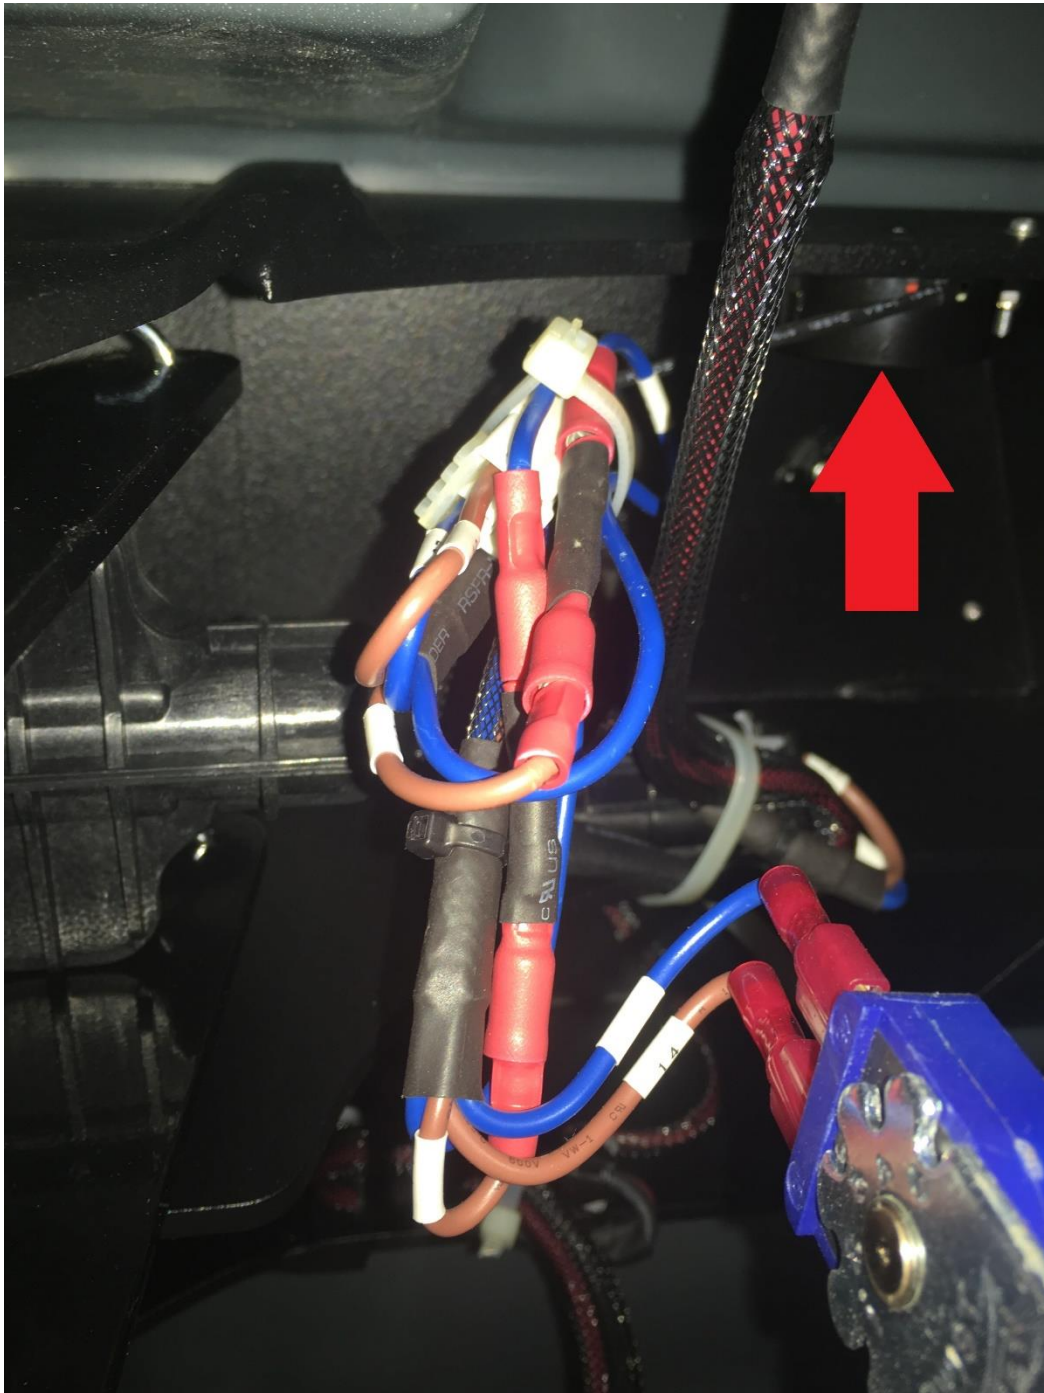

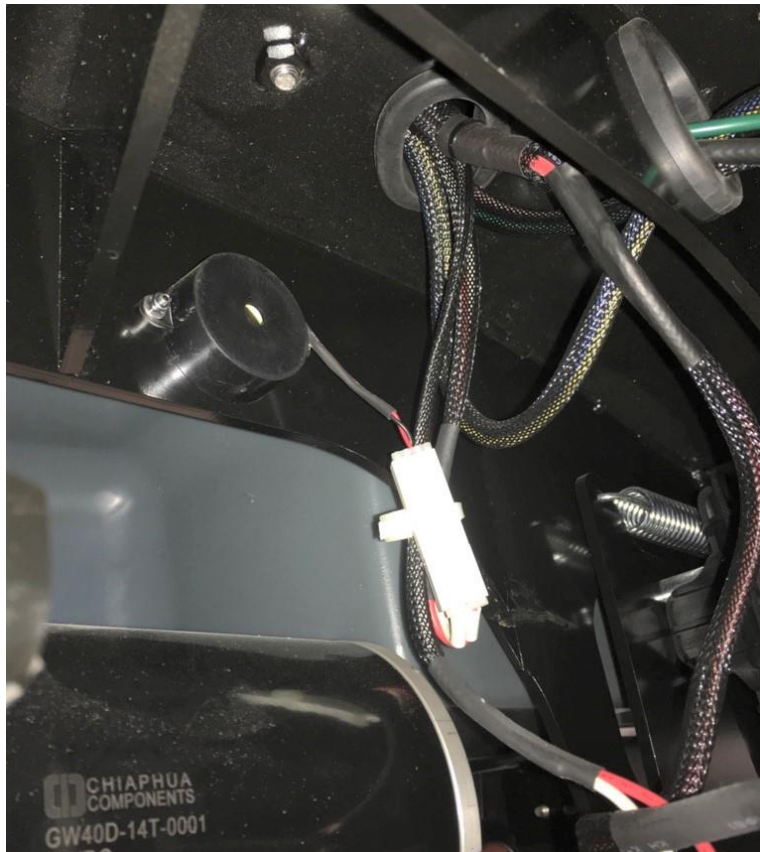

A piece of tape may be placed over the speaker hole to muffle the loud tone. Due to safety concerns, be sure to not muffle the volume too much.

