

Disconnect Drive Motor

1. Locate the drive motor on the underside of the machine.
2. Disconnect the drive motor connection.
 - You should now be able to easily move the machine manually.

