



INSTRUCTION BULLETIN

No. 9014333
Machine: M17 / T17 /
M20 / T20 / M30
Published: 09-2016
Rev. 00

NOTE: DO NOT DISCARD the Parts List from the Instruction Bulletin. Place the Parts List in the appropriate place in the machine manual for future reference. Retaining the Parts List will make it easier to reorder individual parts and will save the cost of ordering an entire kit.

NOTE: Numbers in parenthesis () are reference numbers for parts listed in Bill of Materials.

Installation instructions for **kit number 9014285**


SYNOPSIS:

This kit contains the parts needed to replace a rear squeegee caster wheel assembly on T17 / T20 / M17 / M20 / M30 machines.

Please follow step-by-step instructions.

SPECIAL TOOLS / CONSIDERATIONS: NONE

(Estimated time to complete: 30 minutes)

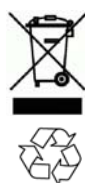

PROTECT THE ENVIRONMENT

Please dispose of packaging materials, used machine components such as batteries and fluids in an environmentally safe way according to local waste disposal regulations.

Always remember to recycle.

PREPARATION:

1. Turn on the machine, completely raise the rear squeegee from the floor, turn off the machine, set the parking brake, and remove the key.

FOR SAFETY: Before leaving or servicing machine, stop on level surface, turn off machine, set parking brake, and remove key.

2. Disconnect the vacuum hose from the squeegee assembly and remove the squeegee assembly from the machine. Set the squeegee assembly and all mounting hardware aside.

INSTALLATION:

1. Remove the existing rear squeegee wheel assembly from the machine. Discard the existing rear squeegee wheel assembly and hardware. (Fig. 1)
2. Use the hardware provided with the new rear squeegee wheel assembly (1) to install the rear squeegee wheel assembly onto the squeegee caster pivot. Be sure there is no side to side movement of the rear squeegee wheel assembly in the squeegee caster pivot. Also be sure the rear squeegee wheel assembly spins freely in the squeegee caster pivot. (Fig. 1)
3. Connect the grease gun to the rear squeegee wheel assembly (1) zerk and pump the grease gun two times to apply grease into the rear squeegee wheel assembly. (Fig. 1).
4. Reinstall the rear squeegee assembly onto the machine and reconnect the vacuum hose to the rear squeegee assembly.

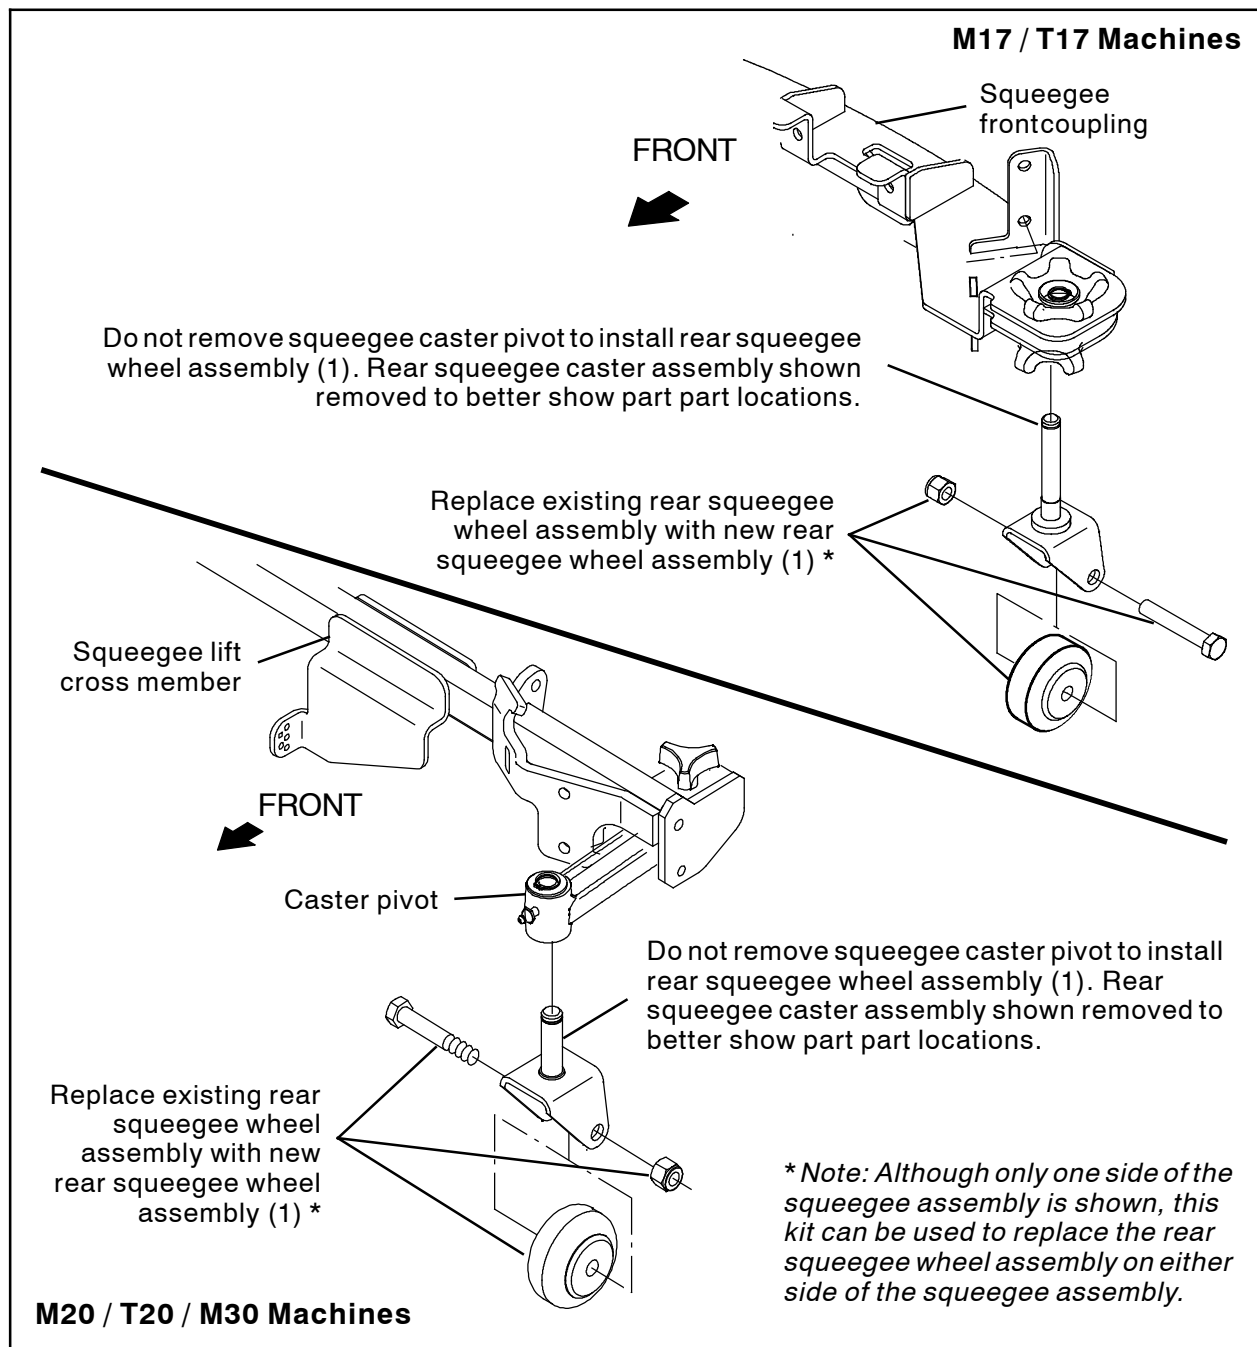


FIG. 1

Bill of Materials for Caster Kit, Rear Squeegee, AM - 9014285

Ref.	Tennant Part No.	Description	Qty.
1	1219758	Wheel Assy, 03.0d 1.38w 0.500b	1

TENNANT COMPANY
P. O. Box 1452
Minneapolis, MN 55440-1452