


- Part number 206-3222 is the switch that engages the scrub brush motor. The switch is located near the machine down pressure lever lock on the support bracket.
- The switch is activated when the lever is released and the scrub head is lowered to the floor. It is deactivated when the lever is moved into the locked/transport position.

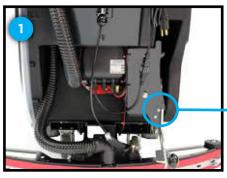

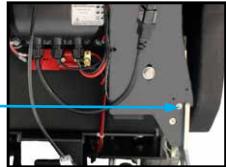



- This lever is most often actuated by the operators foot. The most common reason for replacing the switch is because of damage due to operator error or machine handling.
- Please also note that machines should not be tilted backwards for any reason which could cause damage to this switch as well as the squeegee assembly, casters and other components on rear of machine.

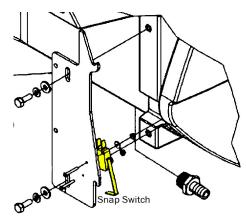



Snap Switch
Part # 206-3222