

## OPERATION

---

- c) Turn on the **heater** if hotter solution is desired.  
**NOTE: The pump must be ON when the heater is ON.**
- d) **Turn ON the vacuum switch.** You may now begin the cleaning process.
- 7. Depressing the **valve trigger** on the wand will allow the solution water to flow.
- 8. Foaming may occur as dirty solution is recovered. Excessive foaming can be counteracted with liquid defoamer (follow the chemical manufacturers directions). **Do not allow foam to rise into or near the float assembly in the recovery tank.** Use defoamer or empty and flush the recovery tank.
- 9. When finished cleaning, **turn off the heater, vacuum and pump switches.**
- 10. Always **drain the recovery tank** after each use; simply pull the plug from the tote hose on the back of the tank and drain. Dispose of the recovered water properly.
- 11. To **drain the solution tank**, attach the optional drain or “pump out” hose (part number 204172) to the accessory quick connect on the front of the machine. Place the open end of the hose into a bucket and turn on the pump switch. When empty, turn off the pump switch and remove the hose from the quick connect.
- 12. **All switches should now be OFF**, unplug the power cord(s) from the electrical outlet before doing any clean-up.
- 13. **After each use clean the cover, float assembly and gasket.** Do not reinstall the cover until the next use, this will allow the recovery tank to dry out.

## SERVICING

---

The DELUXE 15 extractors are designed and manufactured to provide years of trouble free service with a minimum of maintenance and service. The following recommendations are intended to assist the operator and Service Technician in performing routine maintenance.

Failure to follow these recommendations can result in damage to your machine and diminished performance.

**Warning: Always unplug your machine before performing any service. Severe personal injury could result if the electrical power is not disconnected.**

- 1. **Always follow through with the recommended prestart-up checks** found in the Preparation and Operation section of this manual.
- 2. **Store your machine in a dry, protected area.** Do not expose this machine to rain, standing water or freezing temperatures.
- 3. **We recommend a good, thorough cleaning after each use.**
  - a) Clean the cover, float assembly and gasket.
  - b) Clean out the recovery tank with fresh water making sure all deposits or debris are removed.
  - c) Check and clean the inlet strainer in the solution tank periodically with clean water. Make sure the strainer is properly in place to protect the pump.
  - d) Wipe the machine down with a damp cloth.
- 4. **The jet tips and strainer/check valves on the wand will need cleaning after repeated use.** First remove the jet caps, then the jet tips and strainer/check valves. Soak them in vinegar until visible deposits are dissolved, then scrub with a soft bristle brush. Reassemble.  
  
Jet tips and strainer/check valves should be replaced once a year because they tend to erode under extended use.
- 5. **AN AUTHORIZED SERVICE CENTER SHOULD PERFORM SERVICE TO THE PUMP AND VACUUM MOTOR.** The tank is hinged to provide easy access to the internal components.  
  
Additional service information is available from your local Pacific Distributor or through our Technical Service Department.