

Read All Instructions Before Using This Machine

When using an electrical appliance, basic precautions should always be followed.

WARNING - To reduce the risk of fire, electric shock or injury:

1. Do not leave appliance plugged in. Unplug from outlet when not in use and before servicing.
2. **WARNING: ELECTRIC SHOCK COULD OCCUR IF USED OUTDOORS OR ON WET SURFACES.**
3. Do not allow to be used as a toy. Close attention is necessary when used by or near children.
4. Use only as described in this manual. Use only manufacturer's recommended parts.
5. Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, follow warranty instructions and contact an approved service center.
6. Do not pull or carry by cord, do not use cord as a handle, do not close a door on cord, or do not pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
7. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
8. Do not handle plug or appliance with wet hands.
9. Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair and anything that may reduce air flow.
10. **Keep hair, loose clothing, fingers and all parts of body away from openings and moving parts.**
11. Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
12. Turn off all controls before unplugging.
13. Use extra care when cleaning on stairs as a hand held machine.
14. Always wear safety equipment and appropriate clothing when operating the machine to protect from hot water.
15. Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
16. Connect to a properly grounded outlet only.
17. Do not attempt to service the unit while appliance is plugged in.
18. **Do not use without filters in place.**