

TROUBLE SHOOTING:

IF THIS OCCURS

CHECK THIS

NO SPRAY	Solution tank is empty. Clogged spray tip. Pump not running or not primed. Valve on wand not operating.
PUMP DOES NOT RUN	Check the brushes in the pump motor. Replace if necessary. No power to pump. Test the Motor Speed Control Circuit Board and potentiometer.
LOW SUCTION	Debris is plugging cleaning tool or vacuum hose. Drain gate is not completely closed, or seals are damaged. Vacuum dome is not seated or is damaged.
NO SUCTION	No power to motor. Test the Electronic Float. Test the switch. Test the vacuum motor. Test the Vacuum Circuit Board.
LOW HEAT	Spraying too long. Try spraying for 12-15 seconds, or about three strokes. Heat exchanger needs to be flushed. Wrong tool being used. Too much water passing through. Longer hose or larger diameter hose, than standard.
NO HEAT	Heat is not turned on. Either the green light must be on or the bypass switch must be turned on. No power in the wall outlet - check to see if the breaker has tripped. No power to the bypass switch - check wiring for 'opens.' No power out of bypass switch, follow troubleshooting steps to isolate the problem. Call your distributor for additional help.

If you can not solve the problem from this chart, contact the distributor from whom you purchased your machine

SPECIFICATIONS:

Rotomolded Body:	Lifetime Warranty
Vacuum:	Two 5.7", 3-stage
VAC Shutoff:	Electronic
Pump:	Positive displacement, fully adjustable 0-500 psi
Waterlift:	100" -- 170 CFM
Heat:	Adjustable to 212° F
Heater:	2000 Watts
Wand:	Stainless steel, double bend, twin tip
Weight:	110 lbs.
Dimensions:	24W x 28L x 41H (inches)