

2. Remove solution & vacuum hose



3. Lift up drain valve lever to empty solution tank.



MACHINE MAINTENANCE

To keep machine in good working condition, simply follow machine's daily and weekly maintenance procedures. Check and relief valves should be replaced annually.

FOR SAFETY: When servicing machine, unplug cord from wall outlet.

DAILY MAINTENANCE

1. Empty and rinse out solution tank thoroughly.
2. Wipe off power cord and check for damage, replace if necessary. Coil cord neatly after use.
3. Clean machine with an all purpose cleaner and damp cloth.

WEEKLY MAINTENANCE (EVERY 20 HOURS OF OPERATION)

1. Flush solution system with Mytee system maintainer to dissolve normal chemical buildup.
 - a. Pour 7.5L (2 gal) of hot water 60°C (140°F) into solution tank. Add Mytee system maintainer according to mixing instructions on bottle

FOR SAFETY: When using machine, follow mixing and handling instructions on chemical containers.

- b. Operate machine for one minute.
- c. Shut off machine and allow remaining solution to break down chemical buildup overnight.
- d. Next day, spray out remaining solution and flush system with 11L (3gal) of clean water.

2. Inspect vacuum hoses for holes and loose cuffs.

3. Inspect spray pattern for clogging. If clogged, remove spray tips and soak them in a recommended liquid neutralizer for up to six hours. To remove spray tip, twist spray tip body counter-clockwise. Do not use pointed objects to unplug tips, damage will occur.

4. Lubricate wheels with water resistant oil.

5. Inspect machine for water leaks and loose hardware.

6. Remove float shut-off screen from recovery tank and clean.

NOTE: The float shut off screen is not glued on. Simply pull it off.

