


5.2 Upper part

5.2.3 Removing of tank cover

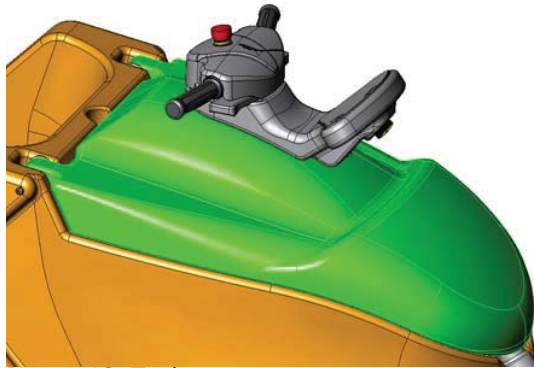

Picture 13: Tank cover

CAUTION

If the hose (02/101) has to be removed, it has to be done from the inside of the tank cover (Refer to picture 14).



Picture 14: Tank cover hose

- Remove the dashboard according to the chapter REMOVING OF DASHBOARD AND COVER.
- Disconnect the patch, emergency loop and ground cable at the dashboard.
- Open tank cover (02/102).

05.18.20 upper part - tank cover - XP_V1.00.fm

- Remove the vacuum motor according to the chapter REMOVING OF VACUUM MOTOR.
- Disconnect wires to the connection block (02/112).
- Thread out the cables from the control group.
- Pull out the hose from the tank cover.
- Remove the hinge bolts (02/135) and distance disc (02/122).
- Remove tank cover (02/102).
- According to what you need to exchange, remove the existing parts from the tank cover and place it on the new one.

05.18.20 upper part – tank cover – XP_V1.00.fm

5.2 Upper part

5.2.4 Mounting of tank cover



Picture 15: Tank cover

(Drilling of hole for tank cover axle)

⚠ CAUTION


Assemble the tank cover locking bow (02/118) at the end of this sequence.

- Position the tank cover correctly on the tank.

⚠ CAUTION

Make sure that the sealings are nicely positioned.

- Drill the hole for the tank axle without pressing the tank cover down onto the tank (drill with 12 mm).
- Mount the two hinge bolts.
- Position the distance disc (02/122).

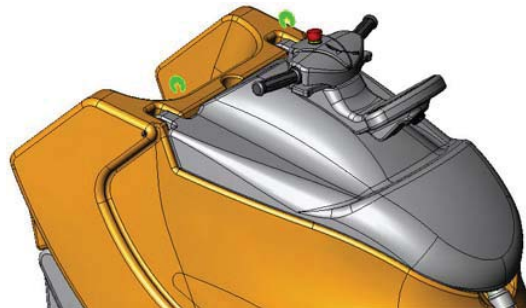

Picture 16: Distance disc

05_18.20 upper part - tank cover - XP_V1.00.fm

⚠ CAUTION

Make sure that the tank cover is positioned in the centre of the tank.

- Open tank cover.
- Mount the hose onto the tank cover.
- Thread in the cables to the control group.

⚠ CAUTION

Protect the communication cable connector with tape to prevent damages.

- Connect wires to the connection block (02/112).
- Mount the vacuum motor according to the chapter MOUNTING OF VACUUM MOTOR.
- Close tank cover.
- Connect the patch, emergency loop and ground cable at the dashboard.
- Mount the dashboard according to the chapter MOUNTING OF DASHBOARD AND COVER.

Remarks

Ensure that the cables are positioned that way, that they can not be squeezed by the tank cover.

Adjustment

Adjust the tank cover lock and ensure a proper opening and closing of the tank cover.

05.18.20 upper part – tank cover – XP_V1.00.fm