



Parts and Instruction Manual

MR1500/MR2000 Series

Mirage Burnisher

Model Nos. MR1500-115, MR1500-220, MR2000-115, MR2000-220

Specifications:

Models	Mirage 1500	Mirage 2000
Head size	20" Head	20" Head
Head Speed	1500 RPM	2000 RPM
Motor	1.5HP 66 Frame DC Rectified Motor, Belt Driven	1.5HP 66 Frame DC Rectified Motor, Belt Driven
Brush Cover	Black Powder Coated	Black Powder Coated
Weight	96 lbs.	96 lbs.
Handle Grips	Anti-fatigue Handle Grips	Anti-fatigue Handle Grips
Power Cord	75'	75'
Amperage Draw	15 Amps	15 Amps
Warranty	2 year	2 year
Shipping Weight	108 lbs.	108 lbs.
Shipping Dimensions	54"h x 31"L x 22.5" W	54"h x 31"L x 22.5" W

Table of Contents

INSPECTION.....	4
SAFETY INSTRUCTIONS.....	5
GROUNDING	7
MAINTENANCE	8
WIRING	12
HANDLE-ALL MODELS	14
HANDLE-BOM	15
MR1500-115	16
MR1500-115 BOM.....	17
MR1500-220	18
MR2000-115	20
MR2000-220.....	22
Warranty	24

UNPACKING YOUR NEW BURNISHER:

When your package is delivered, check the carton carefully for signs of rough handling. If your BURNISHER is damaged, notify the carrier immediately and request an inspection. Be sure to keep the carton, packing inserts, packing lists and carrier's receipt until the inspector has verified your claim.

MINUTEMAN's liability ceases when the carrier picks up the shipment. However, our customer service staff will be happy to furnish any information needed in connection with the claim and will attempt to expedite a resolution.



PLEASE READ BEFORE OPERATING YOUR NEW BURNISHER:

Read the manual carefully and completely before attempting to operate the unit. This manual has important information for the use and safe operation of the machine. Keep this manual handy at all times.

This equipment has been engineered and manufactured to provide excellent performance and service. To ensure that your equipment will continue to perform as intended:

- Maintain equipment regularly- following the suggested maintenance schedule provided.
- Use only original MINUTEMAN parts when servicing.
- Operate equipment with care.

If additional information is needed, please contact:
MINUTEMAN INTERNATIONAL 630- 627-6900

All information and specifications printed in the manual are current at the time of printing, however because of MINUTEMAN's policy of continual product development, we reserve the right to make changes at any time without notice.

FAILURE TO COMPLY WITH THE FOLLOWING WARNINGS AND INSTRUCTIONS WILL VOID THE WARRANTY.

WARNING!

- Do not operate the machine unless trained and authorized.
- Do not allow children or untrained adults to operate this machine.
- Do not leave the machine when plugged in. Unplug from the outlet when not in use before servicing and when changing the brushes or pads.
- Use indoors only.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Do not bypass or defeat the safety lock-out lever.
- The machine was designed for use as per instruction and recommendations written in this manual.
- Any deviation from its proper use or purpose and the consequential damage that may occur is the sole responsibility of the end user.
- Do not use with damaged cord or plug. If the machine is not working as it should or it has been dropped, damaged, left outdoors or dropped into water, return it to an authorized service center.
- Do not pull or carry by cord, use cord as handle, close a door on the cord or pull cord around sharp edges or corners. Do not run machine over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Make sure the machine is plugged into an electrical outlet with the same voltage and frequency rating as shown on the nameplate of the machine. Do not attempt to plug a 115-volt machine into a 230-volt outlet.
- Do not immerse or use this machine in standing water. Such use can cause electric shock.
- Keep the electrical supply cord from contacting the rotating brush or drive block.
- Do not expose machine to freezing temperatures.
- To avoid electric shock, do not expose the unit to rain.

Store indoors only.

- Connect to a properly grounded outlet only. See **Grounding Instructions**.
- Turn off all controls before unplugging.
- When using an extension cord use a 3 conductor grounding cord 12 gauge wire or heavier.
- Do not put any object into openings. Do not use with any opening blocked. Keep free of dust, lint, hair and anything that may reduce air flow.
- Do not operate machine in flammable or explosive areas.
- All servicing of MINUTEMAN equipment should be performed by a MINUTEMAN authorized service center.
- Keep hair, loose clothing, fingers and all parts of body away from openings and moving parts.
- Use extra care when cleaning near stairs.
- To reduce the risk of fire use only commercially available floor cleaners and waxes intended for machine application.
- Risk of explosion - Electrical motors and components can cause an explosion when operated near volatile materials and vapors. Do not use this machine near flammable materials such as solvents, thinners, fuels, grain dust, etc.



ELECTRICAL - 115 Volt

Model: MR2000-115, MR1500-115

This machine is designed to operate on a standard 15 amp 120 volt 60 Hz AC circuit. Voltages below 105 volt AC or above 125 volts AC could cause serious damage to the motor.

ELECTRICAL - 240 Volt

Model: MR2000-220, MR1500-220

This machine is designed to operate on a standard 3 amp type L fused 230 volt 50 Hz AC circuit. Voltages below 200 volt AC or above 250 volts AC could cause serious damage to the motor.

GROUNDING INSTRUCTIONS:

This piece of equipment must be grounded. Should an electrical malfunction occur, grounding provides a path of least resistance for electrical current- reducing the risk of electric shock. This piece of equipment is furnished with a cord that has a grounding conductor and grounding plug. The grounded plug must only be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

WARNING:

Connecting the equipment to an improperly grounded outlet can result in an increased risk of electric shock. A qualified electrician should be consulted if you are unsure that the outlet is properly grounded. Do not modify the plug provided with the equipment. If it will not fit the outlet, have a proper outlet installed by a qualified electrician.

This appliance is designed for use on a 120-volt circuit. The grounding plug provided looks like the plug illustrated in Figure 1. Replace the power cord if the grounding pin is damaged or broken.

Extension cords connected to this machine should be 12 gauge three-wire cords with three-prong plugs and outlets. DO NOT use extension cords more than 25 feet (7.6 m) long

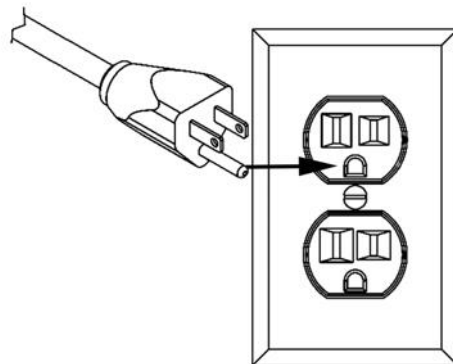


Figure 1

MAINTENANCE:

This BURNISHER has been engineered and built to require minimum maintenance. But like any machine it does require some care to keep it in optimum working condition. Careful attention to these maintenance instructions will give you maximum operating performance and life expectancy of the machine.

CAUTION: Disconnect the power cord from the outlet before doing any clean up or maintenance on the machine

- Keep the machine clean. Do not allow dust to accumulate on external surfaces, the motor or near any moving parts.
- After every job, wipe down the surface of the machine with a clean damp cloth.
- Inspect cord for damage. Do not use machine with a damaged cord.

CORD STORAGE:

While not in use, storage can be accomplished by winding cord around handle assy. Cord should be completely unwound during operation.

CORD SAFETY

- Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors or dropped into water, return to service center for inspection and repair.
- Do not pull or carry by cord, use cord as handle, close a door on cord or pull cord around sharp edges or corners. Do not run this BURNISHER over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Always unplug the machine when removing brush.
- This equipment should be stored indoors and not exposed to rain.

CLEAN UP & STORAGE


- Unplug and wrap it under the cord hook and around the left side handle grip. Clean the cord and inspect it for cuts, gashes and loose prongs.
- Wipe down the machine and store in clean dry place.

WARNING: Do not store the machine with the drive block, pad driver or brush on the machine.

PAD INSTALLATION:

1. To install pad, tilt the machine back on the rear wheels until machine is resting on handle.
2. Center the pad on the pad holder and insert pad center lock by twisting clockwise. Make sure the center lock is tight.

To remove: Twist the center lock counterclockwise

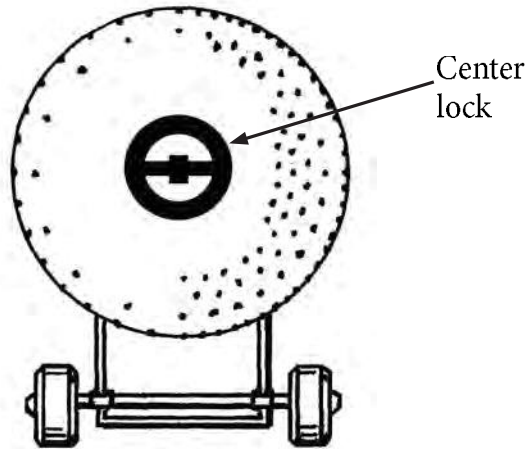


MACHINE OPERATION:

This equipment is equipped with a trigger safety interlock. Refer to Diagram 1 for steps 5, 6, and 7.

1. Install the pad driver and pad or attachment.
2. Plug in machine.
3. Adjust the handle to the desired operating position.
4. Lean the machine back, with all four wheels on the floor, so the pad is not making contact with the floor when you turn the motor on.
5. Place both hands on the handle grips with your fingers around the on/off lever (Refer to B on Diagram 1) which extends from one side to the other, underneath the handle grips.
6. The safety "lock-out" lever (Refer to A on Diagram 1) is located underneath the right side handle grip and switch lever. To unlock the "lock-out" lever, use your right hand forefinger to press the lever down toward the back of the switch box.
7. With trigger safety interlock in the unlocked position, pull up on either side of the ON/OFF lever (Refer to B on Diagram 1) to power the motor. Pull up on only one side of the ON/OFF lever.

- ☒ Once the motor is at full speed☒carefully lower the pad onto the floor.

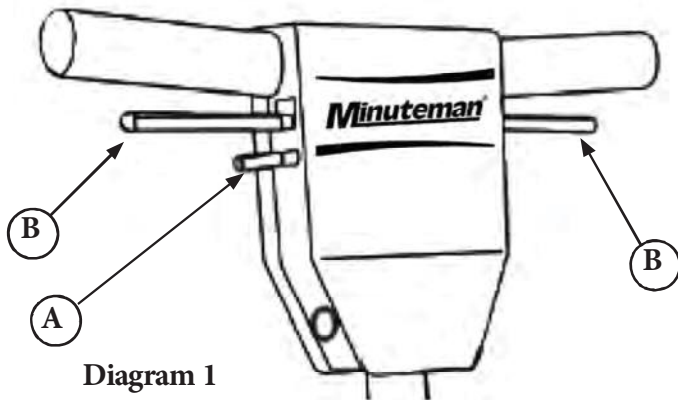


TO MANEUVER THE MACHINE

1. Raise the handle slightly and the machine will go to the right. The higher you raise it☒the faster it will go.
2. Lower the handle and the machine will go left. The more you lower it☒the faster it will go.
3. Practice on a smooth surface until you gain experience in operating the unit.

TO ADJUST THE HANDLE-LOCK MECHANISM:


1. Unloc☒ the handle and place it in the upright position.
2. Tighten the ad☒usting nut until there is ☒ist a slight drag when the handle is raised or lowered. Do not o☒vertighten.
3. Place the handle grip into the down ☒locked☒ position to chec☒ for proper loc☒ing function.

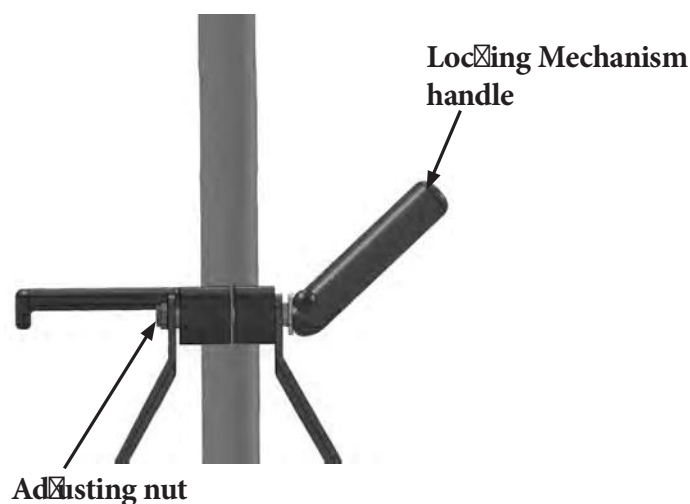

TO ADJUST A DRIVE BELT

1. Loosen but do not remove the 4 bolts that hold the motor to the frame.
2. Tighten the 2 screws at the back of the frame until the belt is tight.
3. Test and re-adjust the belt until the belt does not slip. Re-tighten the four motor bolts.

WARNING: DO NOT OVER-TIGHTEN THE BELT

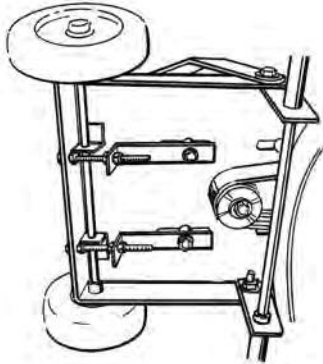

SERVICING:

In the event that your BURNISHER requires service please contact MINUTEMAN:

USA Phone 630- 627-6900 Fax 630- 627-1130

www.minutemanintl.com

No user serviceable components are employed in this equipment. Do not attempt repairs yourself. MINUTEMAN will assist you in locating an independent service contractor.