



TASKI® ergodisc 1200

Preparation



Display warning signs.



Check equipment, especially plug and cable. Report any fault or damage to a supervisor. Label as faulty and do not use.



If spray burnishing fill dosing bottle with required solution.



Dust control floor area with mop sweeper.

Operation



Do not plug in and switch on at socket until machine is ready for use.



Tip machine back to put handle on floor and fit pad. Turn pad retainer anticlockwise to lock



Hold cable over handle, NOT over shoulder.



Keep cable flat on the floor, NOT taut.

Straight Line Burnishing



Where possible, start at side nearest plug socket.



Turn away from the socket at the end of each pass so cable lies on the area already cleaned. Allow 2" overlap.





Press dosing button briefly once every 5 – 10 paces (depending on soiling). Avoid over wetting pad. Cover whole area.



Check pad/brush regularly for clogging. Unplug and turn/change as required.



Change to fresh, dry pad and repeat procedure – buffing only.



Put handle in upright position when not in use. Unplug if left unsupervised.



When changing socket, coil cable from machine to plug, not plug to machine, to avoid twisting.





Unplug.



Wind cable back into handle, wiping clean with a damp cloth as you do.



Wipe machine clean with a damp cloth.



Empty dosing bottle and rinse bottle and pipe with warm water.



Do not store machine with pad fitted.

ATTENTION! Do not use the machine before you have read and understood the operating instructions!

Questions: 1-800-558-2332