

Taski Ergodisc 175 and 200	Difficulty	Minutes	System
Check and clean solution filter	LOW	5	Solution
Check the hose between the filter and pump	LOW	5	Solution
Replace the solution filter	LOW	5	Solution
Check pump outlet tube	Low	5	Solution
Check the pump outlet hose for flow	LOW	5	Solution
Check the solution discharge nozzle	LOW	5	Solution
Replace the solution output nozzle	LOW	5	Solution
Replace the hose between the filter and pump	MEDIUM	30	Solution
Replace the pump outlet hose	MEDIUM	30	Solution
Check the tank/bottle outlet hose for leaks	LOW	5	Solution
Check the pump for leaks	LOW	5	Solution
Check the pump output hose	LOW	5	Solution
Replace the pump output hose	MEDIUM	30	Solution
Replace the pump	MEDIUM	30	Solution
Replace the tank/bottle outlet hose	MEDIUM	30	Solution
Check the brush	LOW	5	Brush
Replace the brush	LOW	5	Brush
Check the power indicator light	LOW	5	Brush
Check the flange coupling	LOW	15	Brush
Replace the flange coupling	MEDIUM	15	Brush
Check Belt	MEDIUM	15	Brush
Replace the belt	MEDIUM	30	Brush
Check the belt tension	MEDIUM	15	Brush
Check the belt tensioner	MEDIUM	15	Brush
Adjust the belt tensioner	HIGH	15	Brush
Check flange coupling and belt for free movement	MEDIUM	15	Brush
Replace the pulley bearing	Medium	45	Brush
Replace the belt tensioning roller's bushing	Medium	30	Brush
Replace the motor	Medium	60	Brush
Check the power cord	LOW	5	Electrical
Replace the power cord	MEDIUM	5	Electrical
Check Main Power Socket	HIGH	5	Electrical
Replace the main power socket	MEDIUM	10	Electrical
Replace the power indicator light	MEDIUM	10	Electrical
Check for power output on auxillary socket	HIGH	5	Electrical
Replace the auxillary power socket	MEDIUM	10	Electrical
Check for power to the solution switch	HIGH	10	Electrical
Make sure wires are connected well	MEDIUM	15	Electrical
Test the solution switch	HIGH	5	Electrical
Replace the solution switch	MEDIUM	10	Electrical
Check for power to the pump	HIGH	20	Electrical
Replace the pump	MEDIUM	30	Electrical
Check wiring quick disconnect and connection	MEDIUM	10	Electrical
Replace wiring and/or quick disconnect	Medium	15	Electrical
Check for power to the brush switch	Medium	10	Electrical
Make sure wires have good connection	MEDIUM	10	Electrical

Check the brush switch	Medium	5	Electrical
Replace the brush switch	MEDIUM	15	Electrical
Check for power to the relay and capacitors	HIGH	15	Electrical
Test the Relay	HIGH	5	Electrical
Replace the relay	Medium	15	Electrical
Replace the start and run capacitors	MEDIUM	15	Electrical
Check and/or replace capacitor wiring	Medium	15	Electrical
Replace brush motor	Medium	60	Electrical