



FaST Injector Assembly Kit

Models: T5/T5e



This kit is intended for T5/T5e machines that are manufactured without scrub heads installed.

The purpose of this kit is to ensure the machine is equipped with the correct FaST injector assembly (see chart below).

INSTALLATION INSTRUCTIONS:

Installation Time: 15 minutes

TOOLS REQUIRED: Standard Screwdriver, 10mm Socket Wrench.

FOR SAFETY: Before installing kit, stop machine on level surface and remove key.

1. Remove the front shroud from the machine if installed (Figure 1).

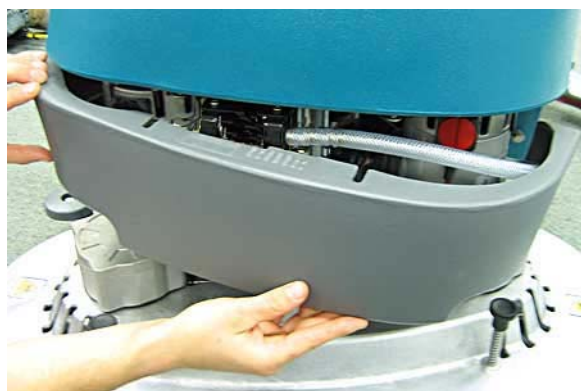


Fig. 1

2. Locate the three FaST injector solution hoses at the front of the machine near the FaST injector mounting bracket (Figure 2).



Fig. 2

3. Position the FaST injector assembly as shown and connect the hoses using the two clamps provided (Figure 3).

FaST Injector Assembly Kit Usage Chart

Scrub Head Size & Type	Kit Req.
24 in/600mm Disk	1025258
26 in/650 Cylindrical	1025258
28 in/700mm Disk	1025266
32 in/800mm Disk	1025266
32 in/800mm Cylindrical	1025266



FaST Injector Kit 1025258 is marked with the No. "26" which represents a .026 orifice.



FaST Injector Kit 1025266 is marked with the No. "31" which represents a .031 orifice.

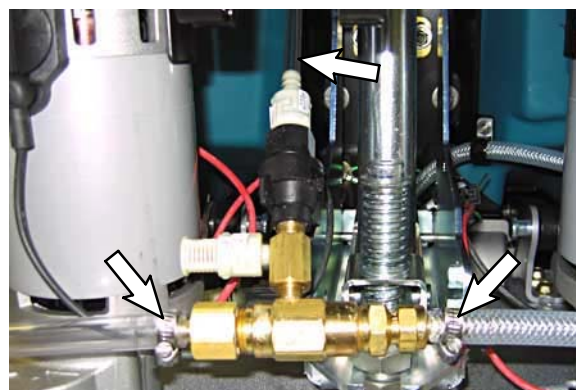


Fig. 3

4. Secure the FaST injector assembly into the mounting bracket (Figure 4).



Fig. 4