

KIT NO. 9004459

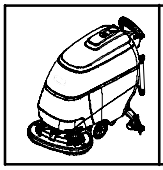

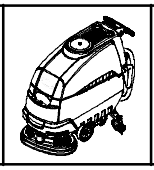

Bumper Wheel Kit

Models: T5, T5e, Speed Scrub 24-32

INSTALLATION INSTRUCTIONS:

Installation Time: 1 Hour

TOOLS REQUIRED: Drill with 3/8 or 9 mm bit, 13 mm Wrench, 3/16 and 5 mm Hex Wrenches, Phillips Screwdriver

FOR SAFETY: Before installing kit, stop on level surface, turn off machine, and remove key.

1. Assemble the new bumper wheels as shown below (Figure 1).

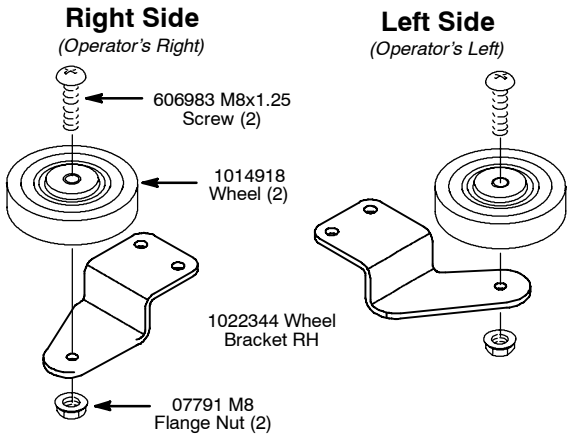


Fig. 1

2. Remove the squeegee from the machine.
3. Position the right side of the machine parallel to a wall, leaving a one inch (25.4 mm) gap between the wall and the scrub head skirt (Figure 2).

   Lower the scrub head, turn off the machine and remove the key.

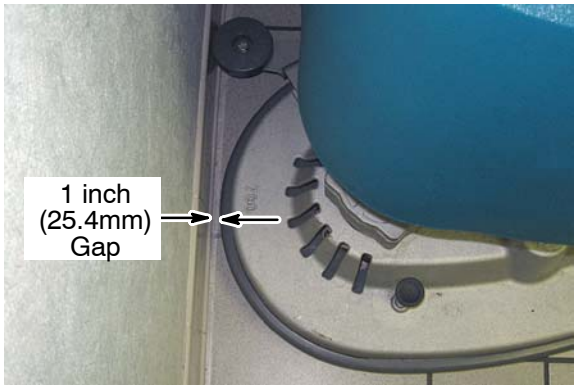


Fig. 2

4. Place the right side bumper bracket on the scrub head so the wheel just touches the wall (Figure 3a). Make sure to allow enough clearance for skirt to move up (Figure 3b).

Kit Contents

Part No.	Description	Qty.
1023268	Bracket, Roller, Wall, Scb Head	1
1022344	Bracket, Roller, Wall, Scb Head	1
393135	Screw, Btn, M8 X 1.25 X 20, Blk	4
08713	Nut, Hex, Lock, M8 X 1.25, NL, SS	4
1014918	Wheel, 03.0D 0.88W 0.31B, W/ Bshg, Rbr	2
606983	Screw, Trs, M8 X 1.25 X 40, Phl, PL	2
07791	Nut, Hex, Flng, M8 X 1.25	2
614317	Wheel, 04.0D 1.00W 0.38B, Rbr, Gray	2
600187	Bolt, Shld, .38D X 1.25, .31-18	2
01685	Washer, Flat, 0.38B 0.88D .08, SS	2
069762311	Washer, Flat, M7.9B X 19D X 1.7 SS	2
43952	Washer, Lock, Int, 0.31, SS	2
140506	Nut, Hex, Std, .31-18, SS	2

Using the wheel bracket as a template, mark the hole locations on the scrub head and drill two 3/8" (9mm) holes through scrub head.

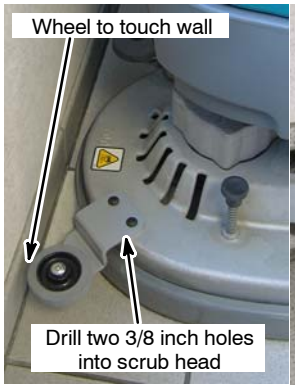


Fig. 3a

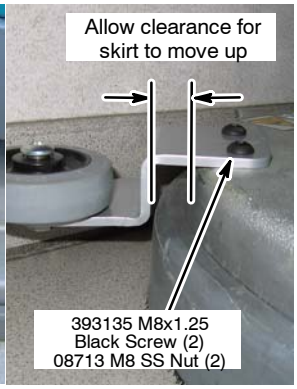


Fig. 3b

5. Repeat steps 3 and 4 for the left side wheel bumper assembly (Figure 4).

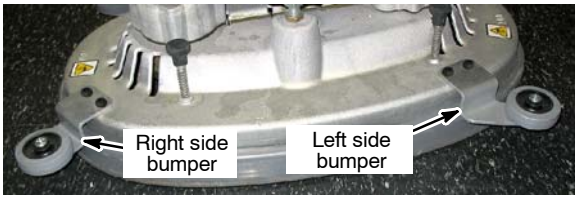


Fig. 4

7. Replace the existing squeegee bumper wheel assembly as shown (Figure 5).

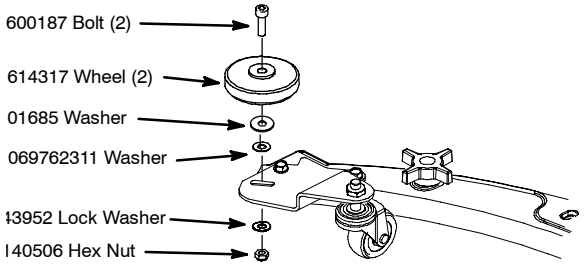


Fig. 5