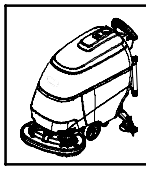
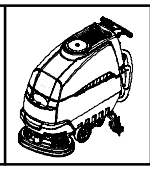
KIT NO. 9004903, 9004904, 9004909

OPTIONAL WHEEL KIT

For Models: T5, T5e, and Speed Scrub 24-32

NOBLES



TENNANT

INSTALLATION INSTRUCTIONS:

Installation Time: 1/2 hour

TOOL REQUIRED: 9/16", 13mm & 19mm Socket Wrench

FOR SAFETY: Before installing kit, empty tanks and disconnect positive (+) battery cable from batteries.

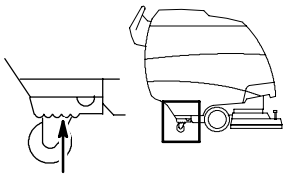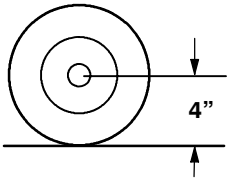Jacking Location	Air Filled Wheels
	
Position machine a level surface. Use a jack capable to support machine's weight.	Inflate air filled wheels to a rolling radius of 4".

AIR FILLED WHEEL KIT CONTENTS (p/n 9004903)

Part No.	Description	Qty.
630215	Wheel, Air Filled	2
1048125	Hub, Wheel [Tapered Shaft]	2
08712	Nut, Hex, Lock, M6 x 1.00 nl	8
140000	Washer, Flat, 0.28 0.62D .04	8


FOAM FILLED WHEEL KIT CONTENTS (p/n 9004904)

Part No.	Description	Qty.
600352	Wheel, Foam Filled	2
1048125	Hub, Wheel [Tapered Shaft]	2
08712	Nut, Hex, Lock, M6 x 1.00 nl	8
140000	Washer, Flat, 0.28 0.62D .04	8

SOLID WHEEL KIT CONTENTS (p/n 9004909)

Part No.	Description	Qty.
1020688	Wheel, Solid	2

AIR & FOAM FILLED WHEELS

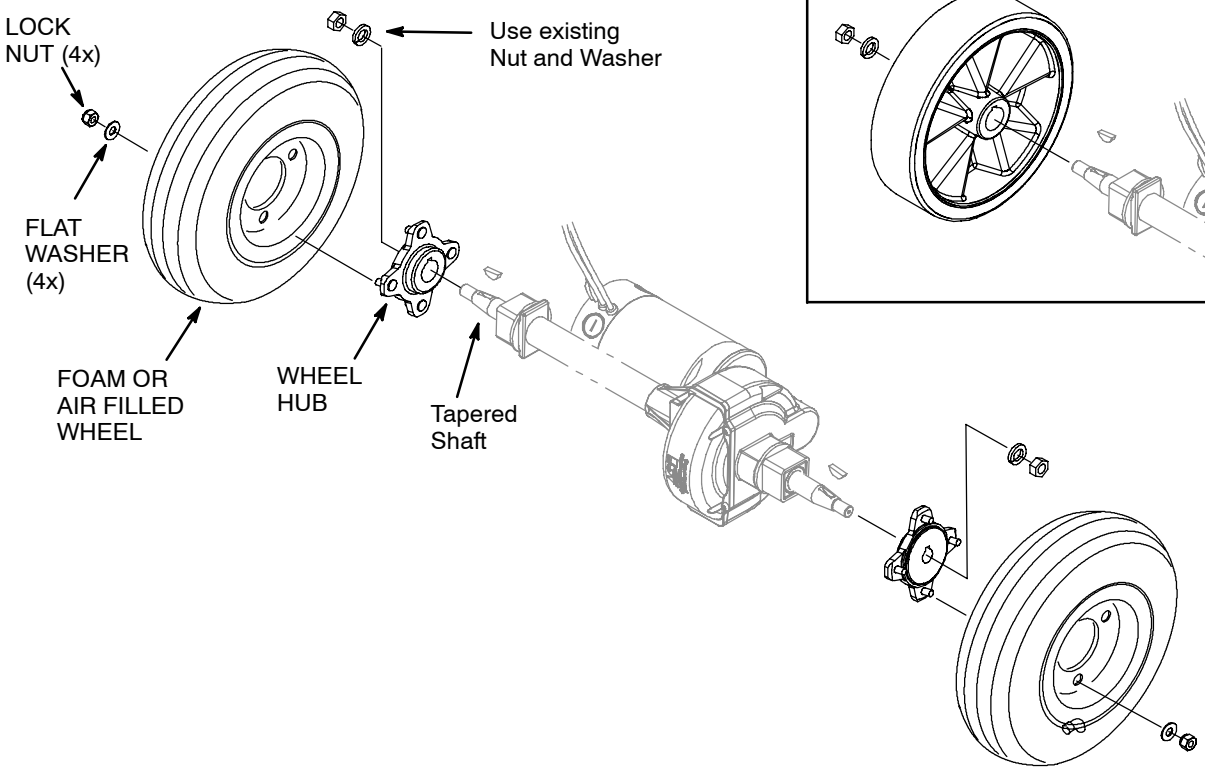

SOLID WHEELS