

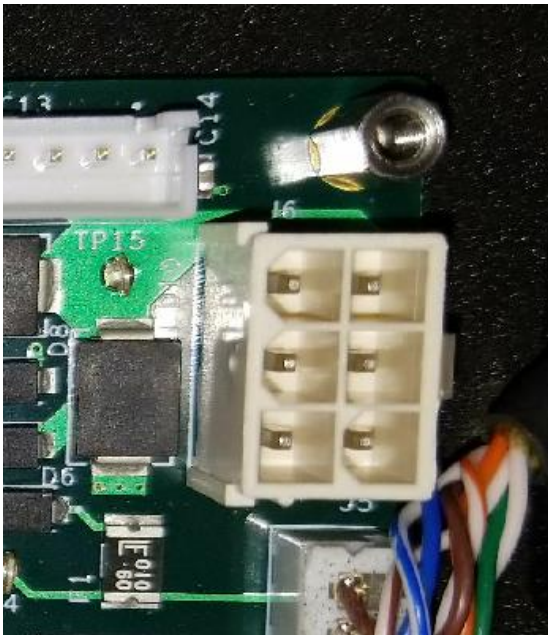


J6 Connector on VIB

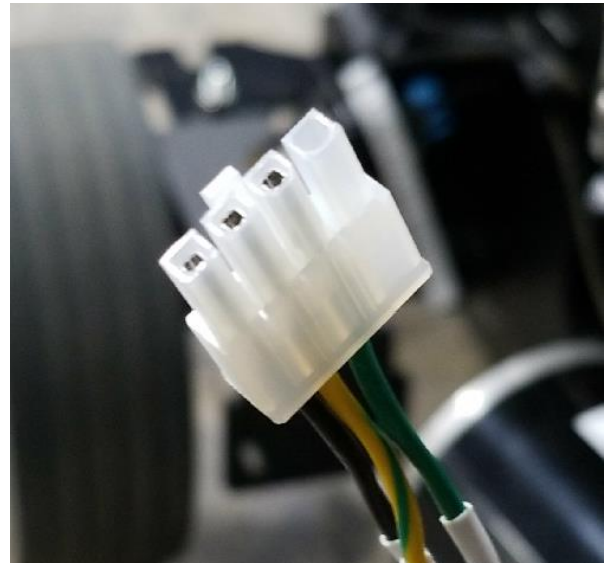

P4 Connector to Kinetek

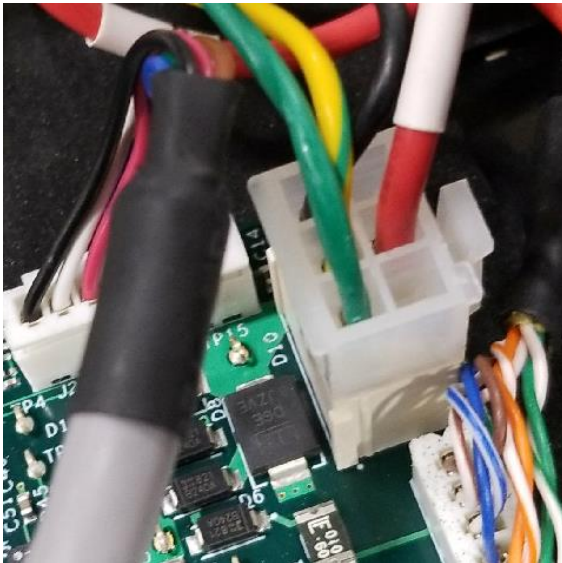

Testing steps needed:

1. Test continuity between the P4 and J6 connectors.
2. Take photos of the Kenner, LA scrubber's P4 connector and send to us at Brain Corp
3. Replace the P4 connector if possible
4. Re-seat the replacement P4 connector into the Kinetek and re-test the scrubber

SCRUBBER CONTROLLER

