

56323296 Vacuum Tool Kit

For Advance Carpetwin™ 14XP, 16XP, 20XP after 1991
Advance Carpetriever™ 28 / Nilfisk GU700A
Kent Champion™ 28 (after SN 1588572)

CONTENTS OF KIT

ITEM	PART NO.	QTY	DESCRIPTION
	56040626	1	Instruction Sheet
A	56701089	1	Crevice Tool
B	56323214	1	Adapter, Tool
C	56701088	1	Dust Brush
D	56002738	4	Scr, Pan Phil Plastite 8-15 x .62 (Carpetwin™ Only)
E	56392171	2	Clamp, Plastic
F	56001993	4	Scr, Pan Phil 10-24 x .50 (Carpetriever™ / GU700A / Champion™ Only)
G	56002832	4	Nut, Hex Nyl Loc-Thin 10-24 (Carpetriever™ / GU700A / Champion™ Only)

WARNING!

DISCONNECT POWER CORD BEFORE SERVICING.

CARPETWIN™ INSTALLATION INSTRUCTIONS

- 1 Remove from the machine the upper bag housing cover.
- 2 Reference Figure 1 for the tool clamp locations. Then layout, center punch and drill (4) 1/8 inch (3.17mm) mount holes (use the Plastic Clamps (E) as a template to mark the holes). **NOTE: Drill only through the outside cover wall thickness.**
- 3 Install the (2) (E) Clamps onto the cover using the (4) (D) Screws supplied, as shown in Figure 2.
- 4 Attach the Crevice Tool (A), Adapter (B) and Dust Brush (C) to the (E) Tool Clamps as shown.

FIGURE 1


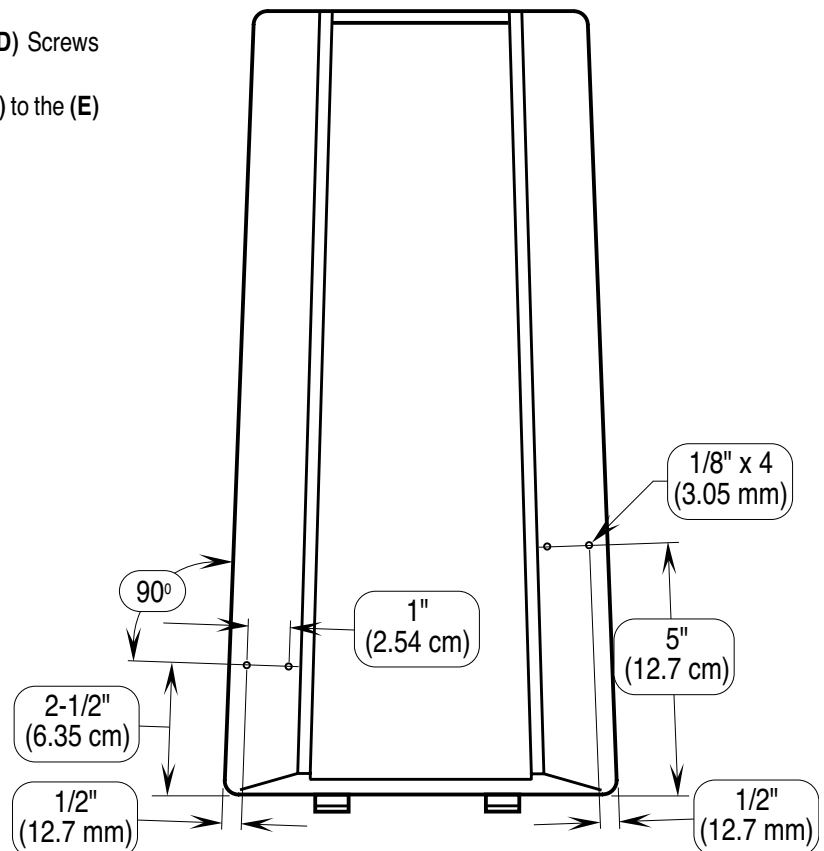


FIGURE 2

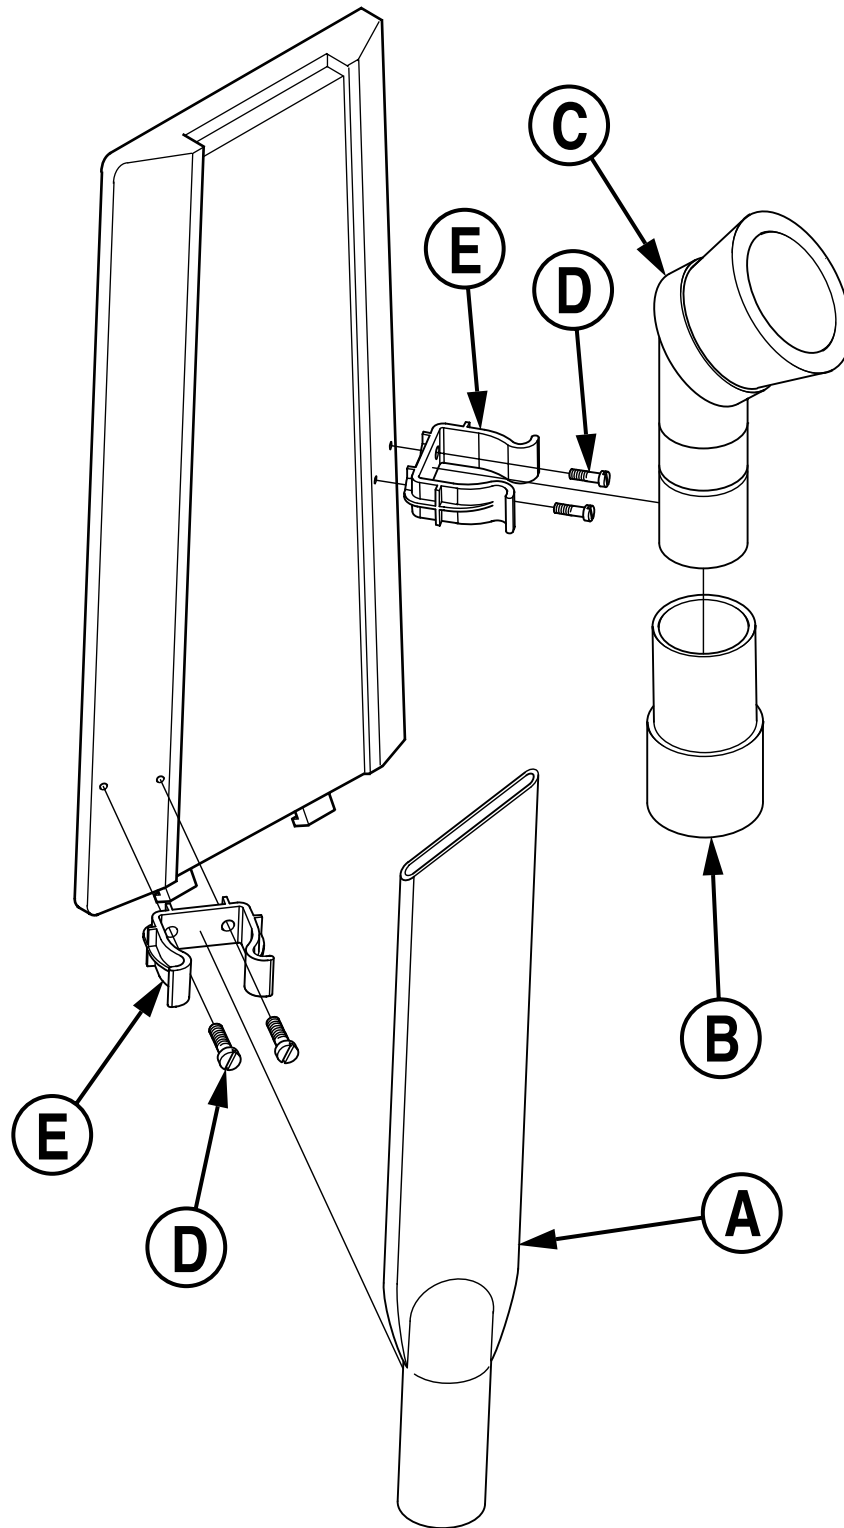

CARPETRIEVER™ / GU700A / CHAMPION™ INSTALLATION INSTRUCTIONS

- 1 Reference Figure 3 for the tool clamp locations. Then layout, center punch and drill (4) 7/32 inch (5.55mm) mount holes (use the Plastic Clamps (E) as a template to mark the holes).
- 2 Install the (2) (E) Clamps onto the cover using the (4) (F) Screws and (G) Nuts supplied, as shown in Figure 4.
- 3 Attach the Crevice Tool (A), Adapter (B) and Dust Brush (C) to the (E) Tool Clamps as shown.

FIGURE 3

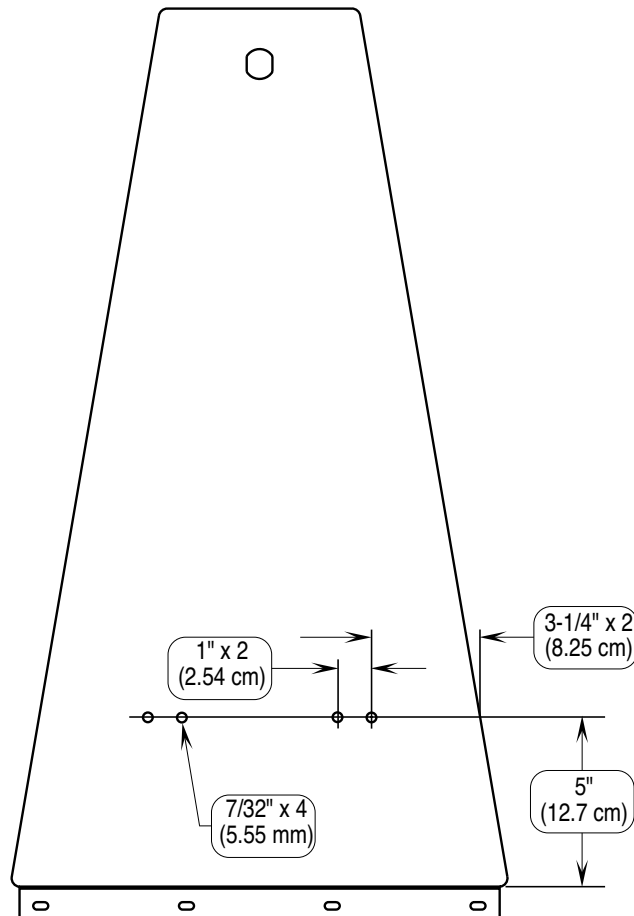


FIGURE 4

