

56122798 SQUEEGEE KNOBS KIT

Liberty SC50 Models: ALL & SC1500 Models: ALL

CONTENTS OF KIT

ITEM	PART NO.	QTY	DESCRIPTION
	[]	56090412	1 Instruction Sheet
1		4	Wsh-Flt .328 X .563 X .031
2		4	Retaining Ring
3		4	Knob-M6-1.0 X 30MM Long Stud
4		4	Washer Plain M6X18 SS ISO7093

[] = Not Shown

INSTALLATION INSTRUCTIONS

⚠ CAUTION!

When working on an SC50 and a battery disconnect is needed, ensure that the Autonomy Module is completely powered off before the power is pulled from the system. To verify that the Autonomy Module is completely powered down simply wait for both the safety LiDAR's and Dropoff lasers to power off, plus an additional 15 seconds after that. If this procedure is not followed when disconnecting the battery, there is a chance that the Autonomy Module could be permanently damaged and would need replacement

⚠ WARNING!

DISCONNECT BATTERIES BEFORE SERVICING.

INSTALL KNOBS AND HARDWARE

- 1 See Figure 1. Assemble Items (1-4) as shown.
- 2 Press Retaining Ring (2) on using a 5/16 or 7mm deep well socket until Washers (1 & 4) are snug against the Squeegee Cover.

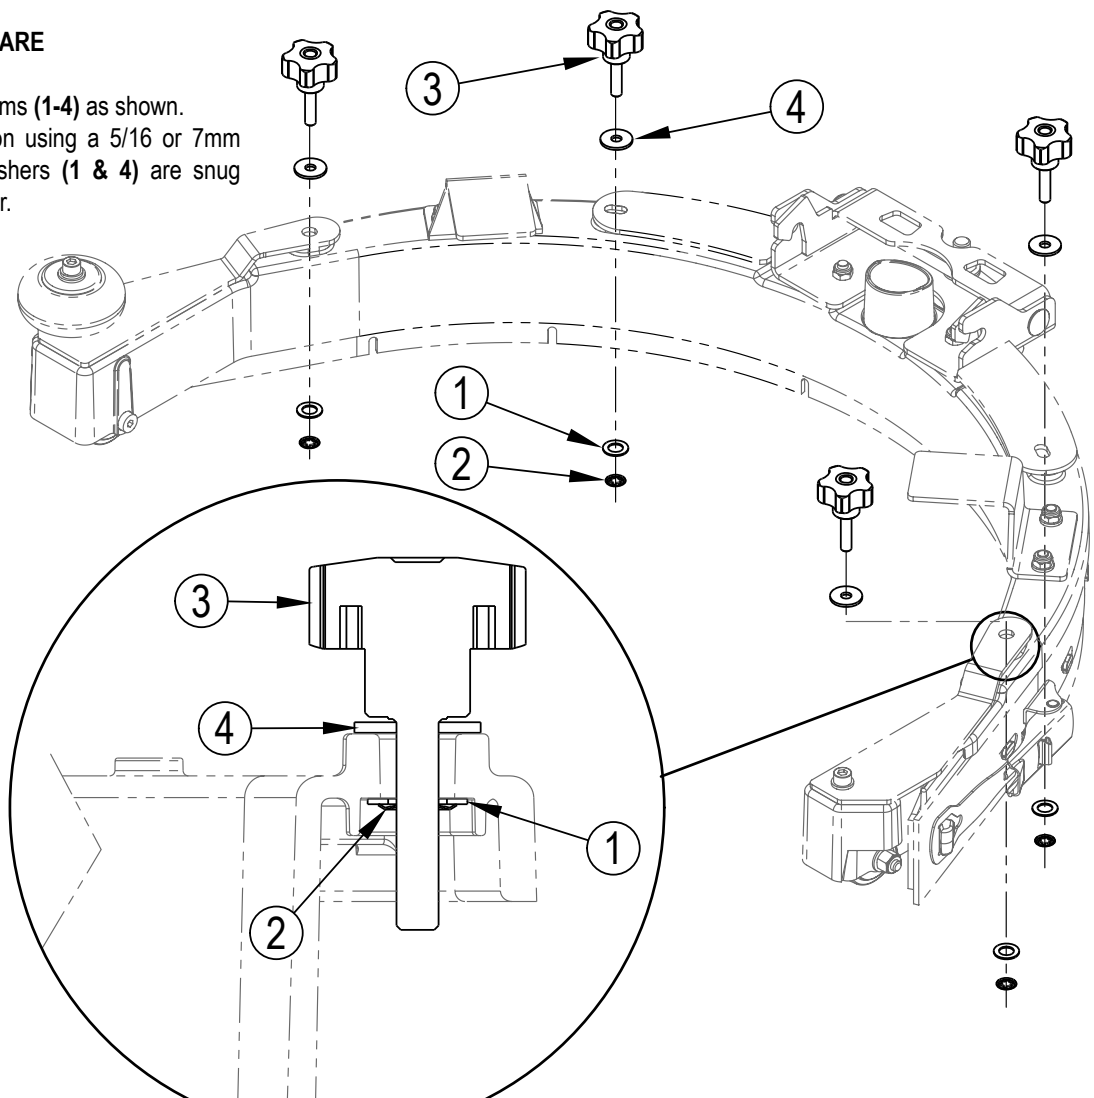


FIGURE 1