

56383240 SEAT KIT


Advenger™ Models: ALL
 2800ST, 3400ST Models: ALL
 BR 600S series Models: ALL
 Adgressor™ Models: ALL
 BR 850S series Models: ALL
 Aquaride™ Models: ALL
 BRX 700 series Models: ALL
 Advolution™ Models: ALL
 UHR 70-1700 series Models: ALL
 Adhancer Models: ALL
 Advenger™ Models(56601XXX): ALL
 BR 755 series Models: ALL
 VacRide Models: ALL
 BRV 900 Models: ALL
 ES4000 Models: ALL
 Focus II Rider Models: ALL (56114XXX series)
 Scrubtec R 6 Models: ALL

CONTENTS OF KIT

Item	Ref. No.	Qty	Description
[]	56090162	1	Instruction Sheet
1	7-82-00050	1	Switch
2	56001834	4	Scr-Hex 5/16-18 X 1.25
3	56315382	1	Clip, Conduit
4#	56394342	1	Seat-Mid Back-11.25in Mount
5	56383230	3	Flanged Bushing Seat
6	56601271	1	Knob, 5/16 Stud

[] = Not Shown

= Revised or new since last update

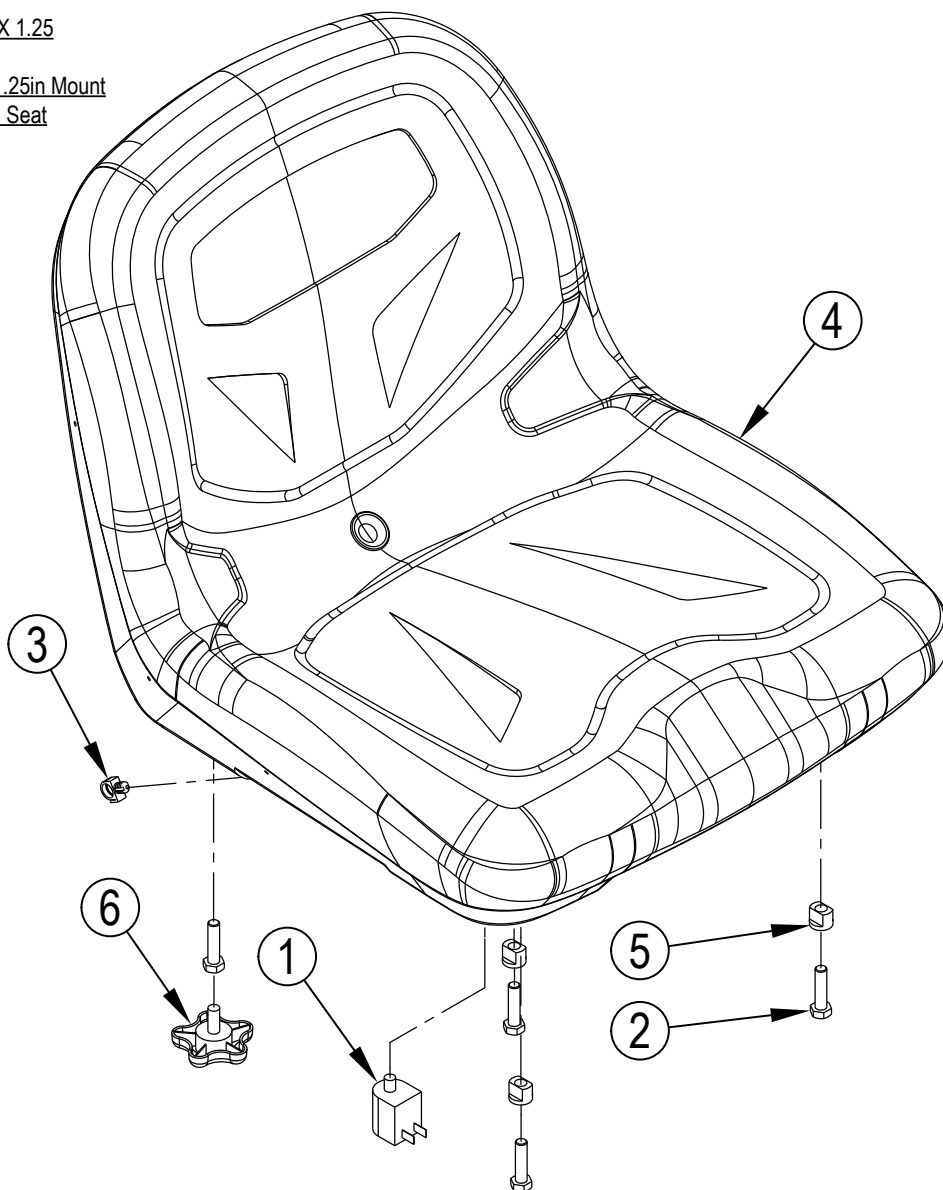

INSTALLATION INSTRUCTIONS

WARNING!

DISCONNECT BATTERIES BEFORE SERVICING.


SEAT REMOVAL

- 1 See Figure 1. Flip the seat panel (P) forward and set the prop rod.
- 2 Disconnect and remove the Seat Switch (A).
- 3 For machines referenced in **Detail 1**. Remove the (3) Socket Shoulder Screws (B), Washers (C) and the Knob (D) to remove the Seat (E). Remove and discard the Conduit Clip (F).
- 4 For machines referenced in **Detail 2**. Remove the (4) Socket Shoulder Screws (B) to remove the Seat (E).
- 5 For machines referenced in **Detail 3**. Remove the (4) Hex Screws (B), and Washers (C) to remove the Seat (E).

FIGURE 1


Detail 1

VacRide, BRV900 Models
ES4000 Models
Advenger, BR755 series Models
Focus II Rider, Scrubtec R6 Models

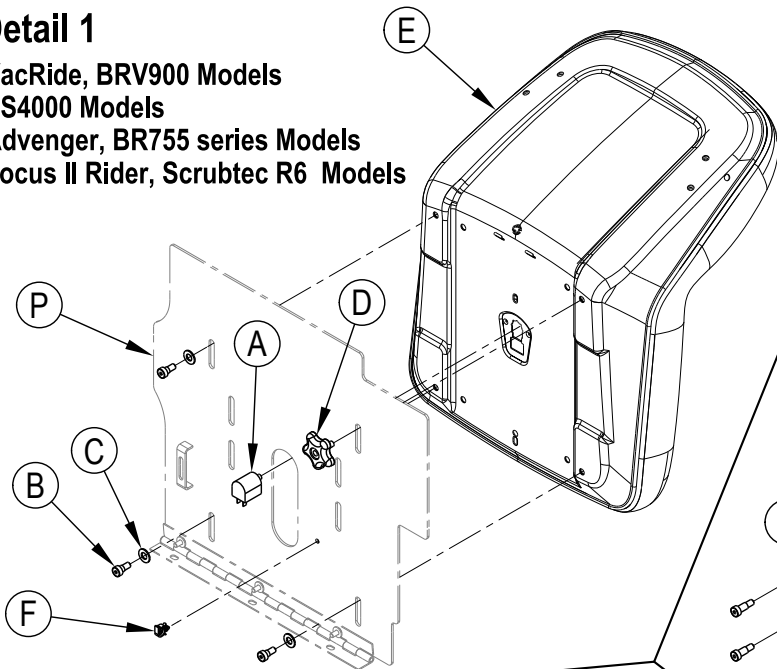


Detail 2

2800ST, 3400ST Models

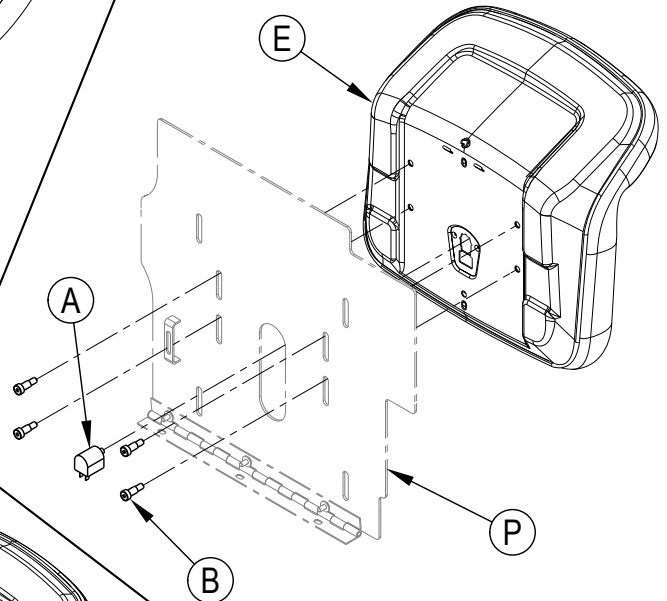

Detail 3

AuqaRide, BRX700 Models
Adhancer Models
Adgressor, BR850S series Models
Advolution, UHR70-1700 Models

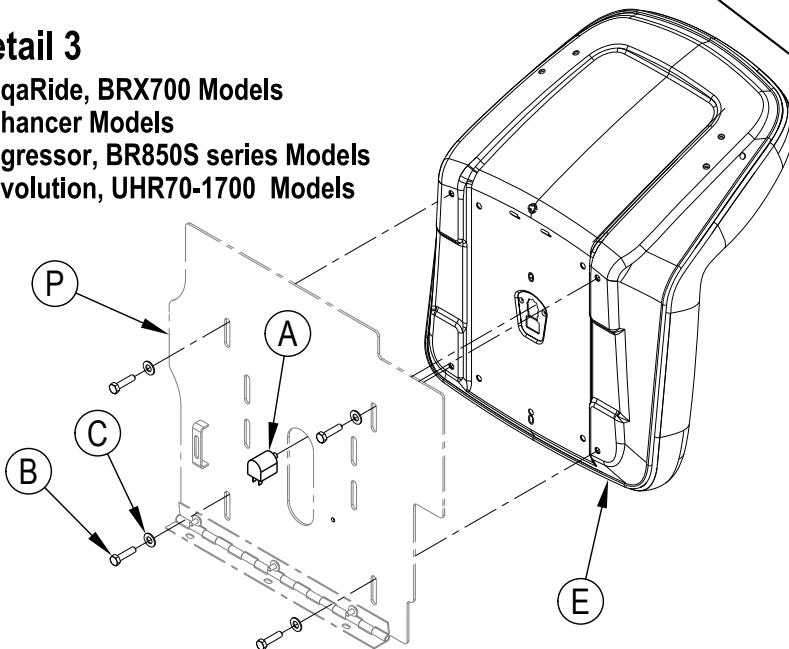


SEAT INSTALLATION

This seat kit has been designed to replace the seat on many machine models and is divided into two variants that use Seat Kit 56383240.

- 1 See Figure 2. For seat assembly used on the following machines listed in Figure 2.
- 2 Install the new Seat (4) to the seat panel (P) using the (3) Seat Flanged Bushings (5), Hex Screws (2), and the Stud Knob (6).
NOTE: Fastener torque: 80 IN-LB $\pm$ 15 IN-LB. not to exceed 180 IN-LB for Hex Screws (2).
- 3 Install and reconnect the Seat Switch (1) and Conduit Clip (3) from the seat kit to the Seat (4) as shown.

FIGURE 2

VacRide, BRV900 Models
ES4000 Models
Advenger, BR755 series Models
2800ST, 3400ST Models
Focus II Rider, Scrubtec R6 Models

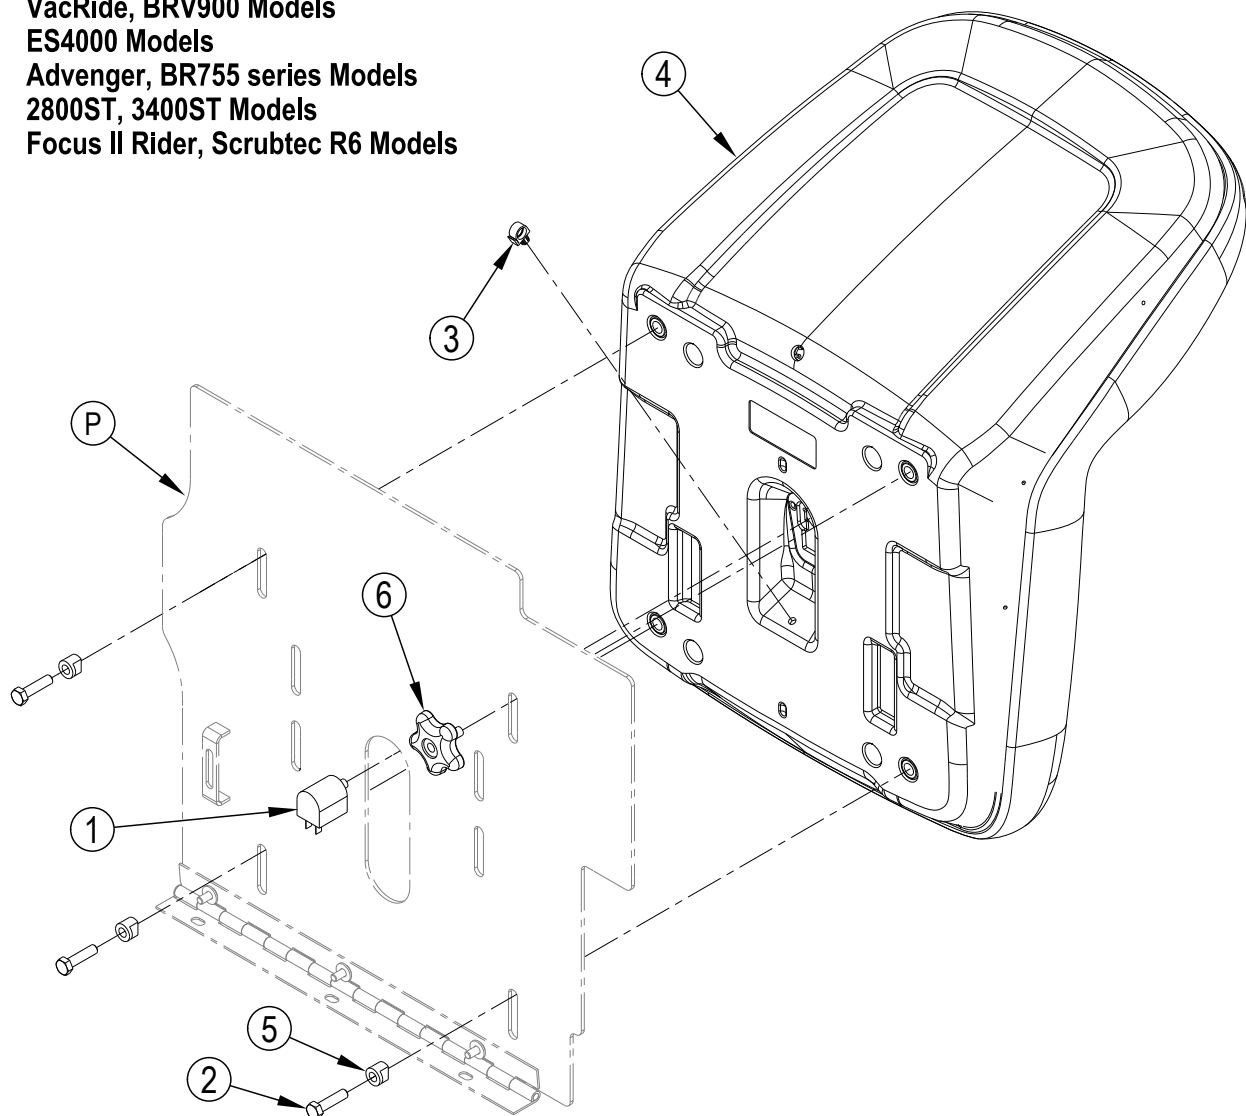

SEAT INSTALLATION CONTINUED

This seat kit has been designed to replace the seat on many machine models and is divided into two variants that use Seat Kit 56383240.

- 1 See Figure 3. For seat assembly used on the following machines listed in Figure 3.
- 2 Install the new Seat (4) to the seat panel (P) using the (4) Hex Screws (2).
NOTE: Fastener torque: 80 IN-LB $\pm$ 15 IN-LB. not to exceed 180 IN-LB for Hex Screws (2).
- 3 Install and reconnect the Seat Switch (1) from the seat kit to the Seat (4) as shown.

FIGURE 3

