

56601085 BEACON KIT

Advenger Models: ALL (56601XXX series)

BR 755 / 855 Models: ALL


ES4000 Models: ALL

CONTENTS OF KIT

Item	Ref. No.	Qty	Description
[]#	56040978	1	Instruction Sheet
1#	56459883	1	Conduit, 16in.
2#	56002896	2	Scr. Pan Phil SS 10-24 x .62
3#	56307166	1	Beacon Assembly
4#	56486112	1	Clamp, P
5#	56249946	2	Insert-Brass 10-24

[] = Not Shown

= Revised or new since last update

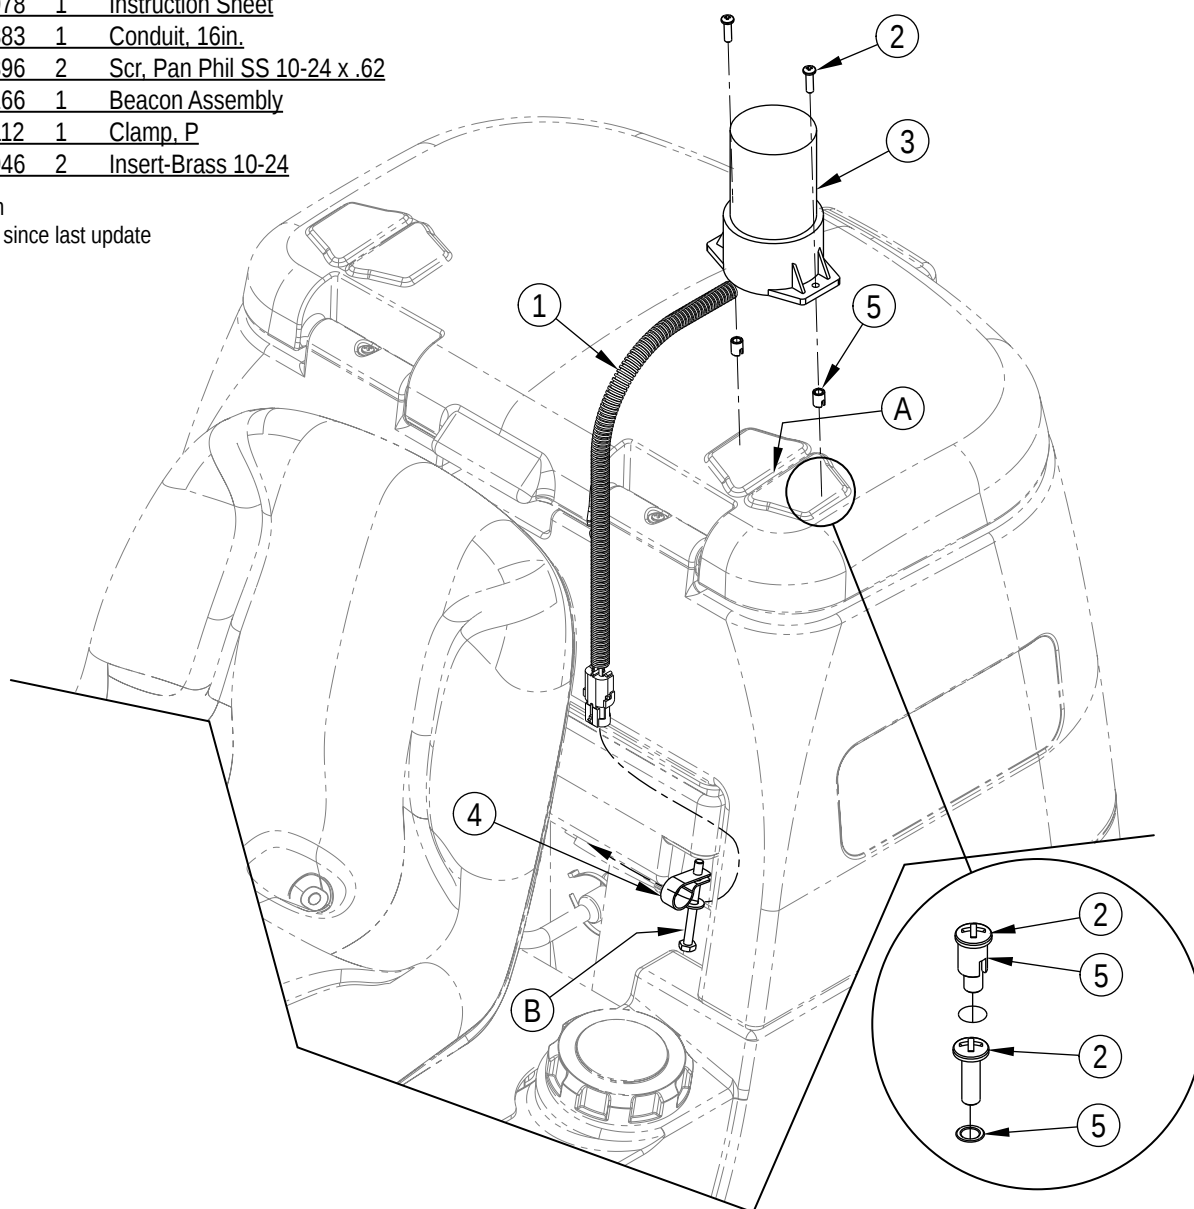

⚠ WARNING!

DISCONNECT BATTERIES BEFORE SERVICING.

BEACON INSTALLATION

- Using the Beacon (3) as a template, mark and drill (1) of the two mounting holes to a diameter of .265(6.74mm).
- Thread one of the Screws (2) into one of the Brass Inserts (5) and then thread the Insert into the tank lid until flush. Remove the Screw. Loosely mount the Beacon (3) with one screw (2) and once again using the Beacon as a template mark the second mounting hole location. Drill the second hole to the same diameter and install the second Insert (5).
- Mount the Warning Beacon (3) on top of the recovery tank lid using the (2) Screws (2) as shown. NOTE: Make sure the wiring from the underside of the Beacon (3) is lying in the Channel (A) between the (2) mounting pads.
- Remove the Screw & Washer (B) from the corner of the vacuum housing and install the P-Clamp (4) as shown. NOTE: The Beacon wiring should be routed through the P-Clamp (4).
- Plug the Beacon wiring connector into the unused main harness connector behind the seat with the green weatherpack seals.

Thread Screw into Brass Insert and then thread the Insert into the tank lid until flush. Remove the Screw.