



ec-H2O NanoClean Module Plumbing Kit

Models equipped with ec-H2O NanoClean Technology



INSTALLATION INSTRUCTIONS:

Installation Time: 1 Hour


Kit Contents: ec-H2O Module Plumbing Assembly

Special Tools Required: None


FOR SAFETY: Before servicing machine, stop on level surface, turn off machine and set parking brake if equipped.

1. Drain the solution and recovery tank.
2. Park the machine on a level surface, turn off machine and set parking brake if equipped.
3. Remove the ec-H2O NanoClean module (black box) from machine.

4. Replace the defective plumbing assembly as shown below. Four screws fasten the plumbing assembly to the controller assembly. Discard the defective plumbing assembly.
5. For specific machine models, cut the module inlet hose as described below.
6. Reinstall module. Make sure the hose connections are properly clamped.

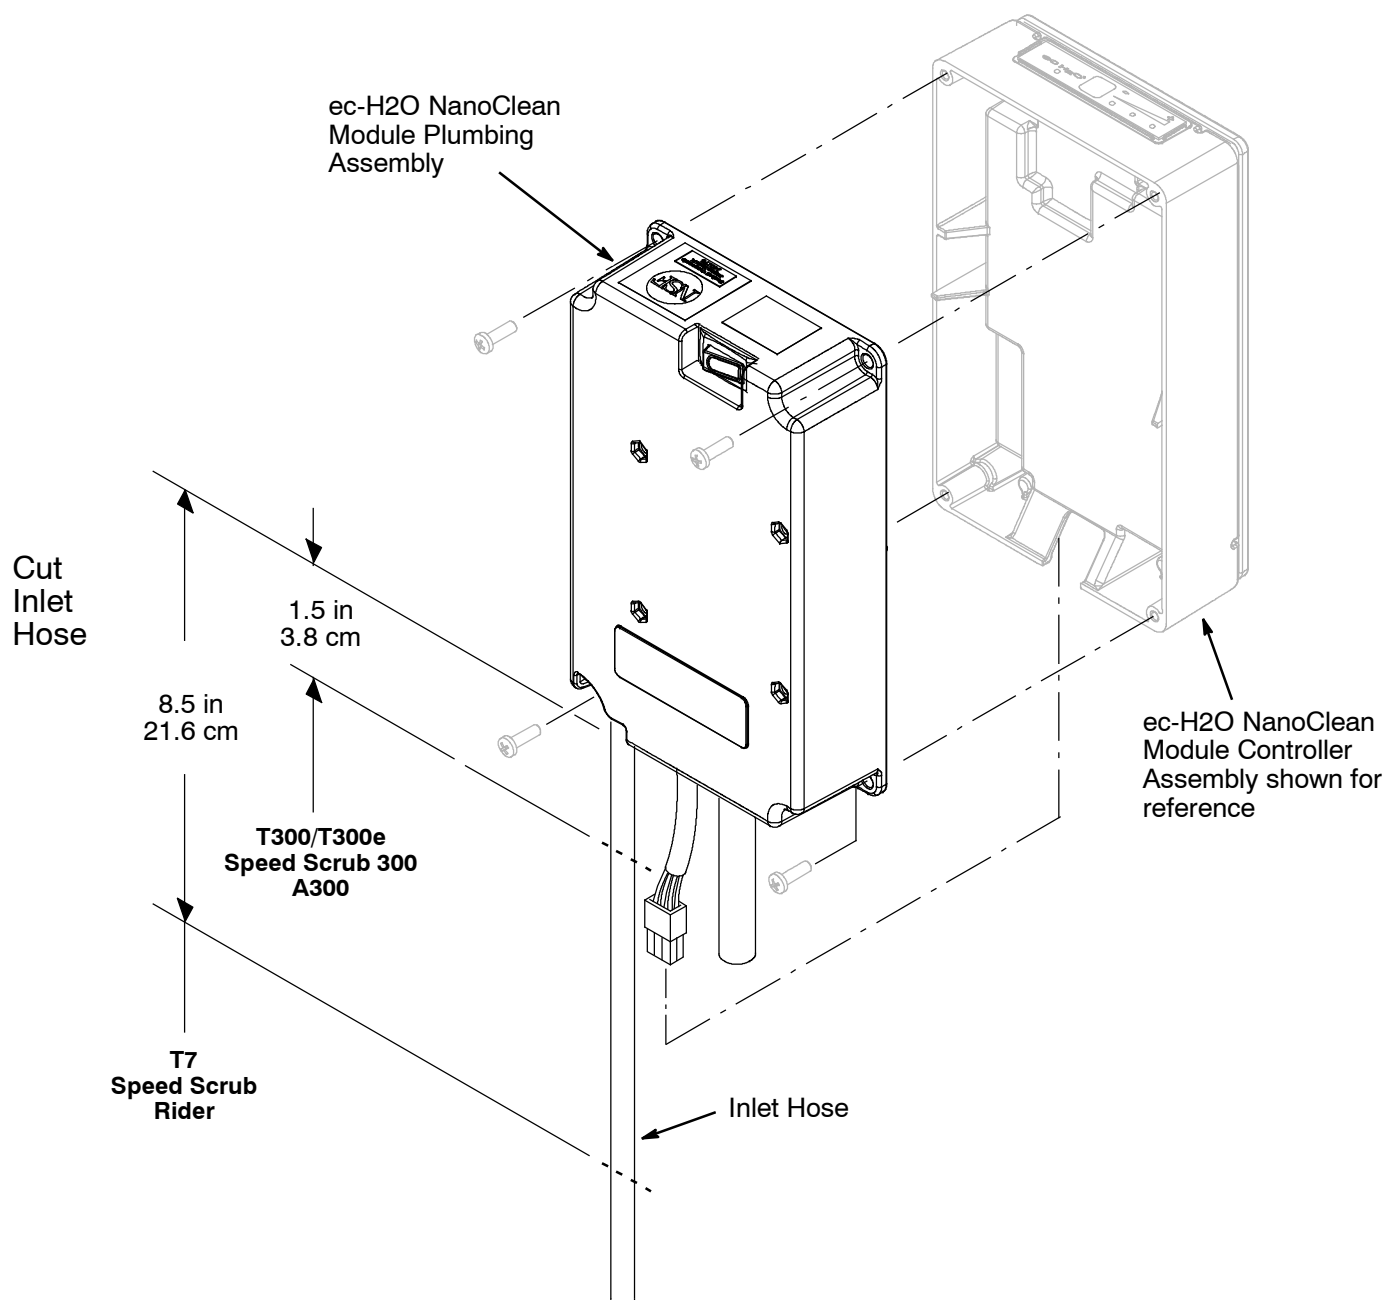

ec-H2O NanoClean Module Plumbing Kit Parts List

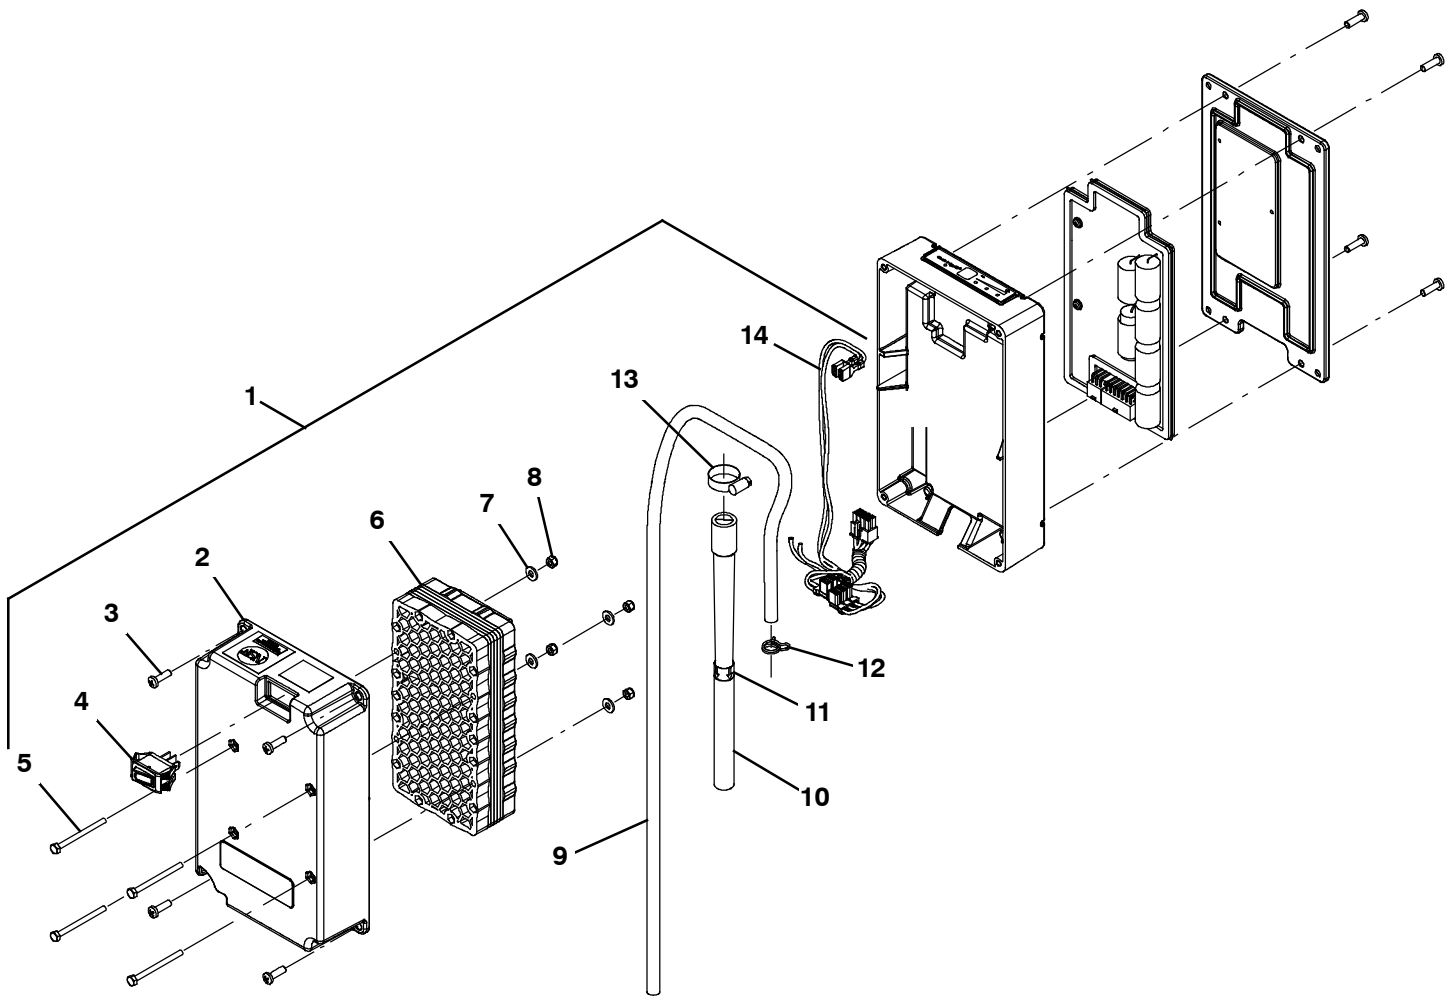

Ref.	Part No.	Description	Qty.
▽	1	9014126 ec- H2o Nc Kit [Module B, Plumbing]	1
▲	2	1208823 Housing, Module, Upper, Ec- H2o	1
▲	3	1015506 Screw, Pan, Phl, M5 X 16, Tcut [Plastic]	4
▲	4	1044393 Switch, Rocker, Spst, Mom	1
▲	5	32509 Screw, Hex, M4 X 0.70 X 50, Ss	4
▲	6	1208164 Electrode, 5 Plate, High Flow	1
▲	7	41579 Washer, Flat, 08, Ss	4
▲	8	33932 Nut, Hex, Lock, M4 X 0.70, NI, Ss	4
▲	9	1006415 Hose, Afmkt, Pvc, Clr, 0.25id, 03ft	1
▲	10	1208526 Hose, Molded, Bm08/Bm06	1
▲	11	1049637 Label, Direction [Ec- H2o]	1
▲	12	613735 Clamp, Hose, Wir, .40 - .42, Yel	1
▲	13	54333 Clamp, Hose, Wormdrive, 0.31- 0.88d, .31w	1
▲	14	1073286 Harness, Ele, Module B2 [ec- H2o]	1

▽ KIT ASSEMBLY

▲ INCLUDED IN KIT ASSEMBLY