


Replacing the Vacuum Motor

Turn the key to power off the scrubber. Raise the seat and disconnect the red battery coupling.

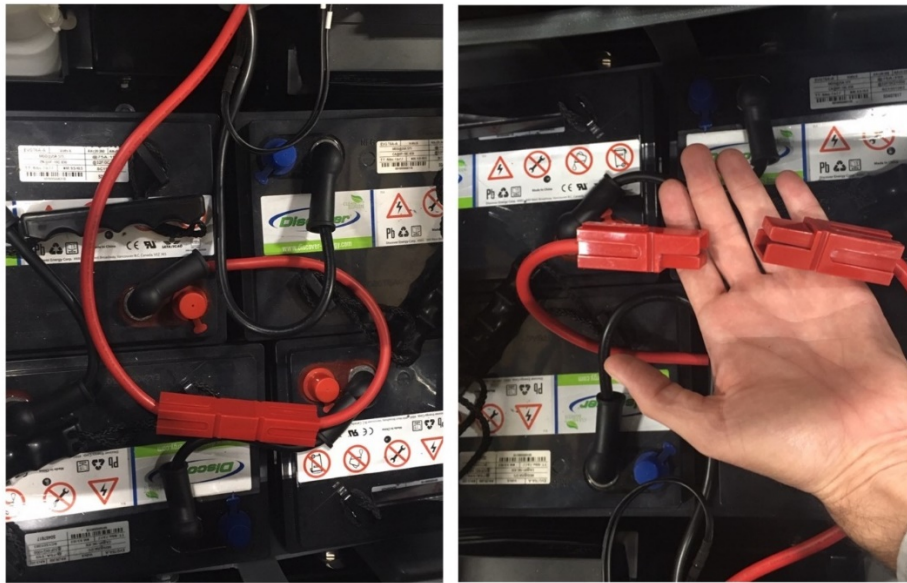


Leaving the seat in the lifted position, lift forward the cover to the recovery tank.


Use a 13 mm socket to remove the four bolts indicated in the photo.




Carfully position the vacuum motor deck to rest in the horizontal position, as shown.

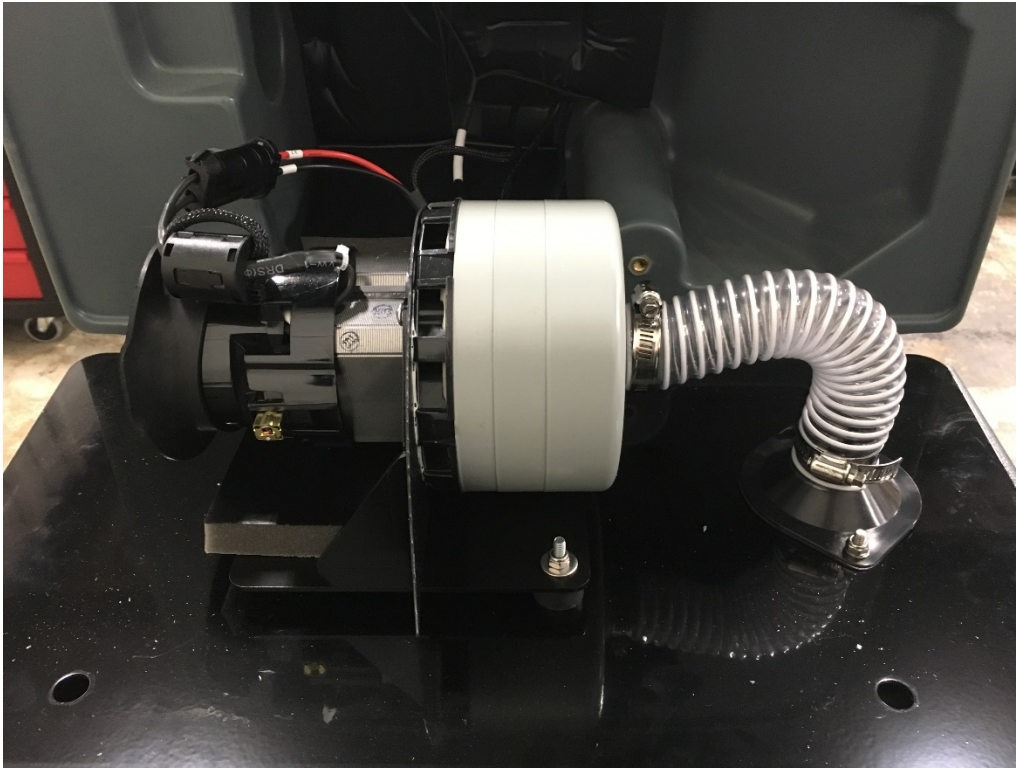


Disconnect the coupling as shown

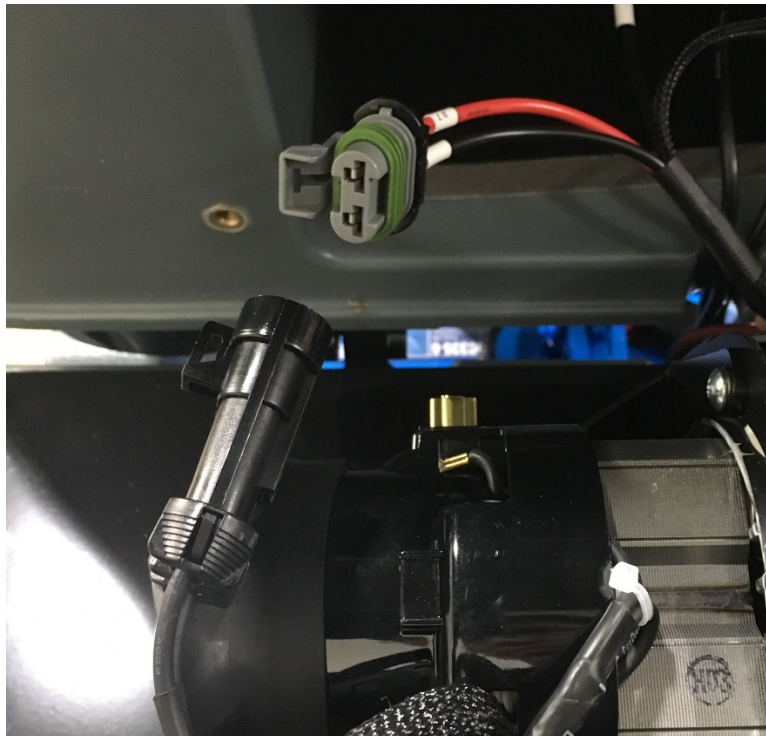

Using a slotted screwdriver, loosen the hose clamp and disconnect it from the vacuum pump.

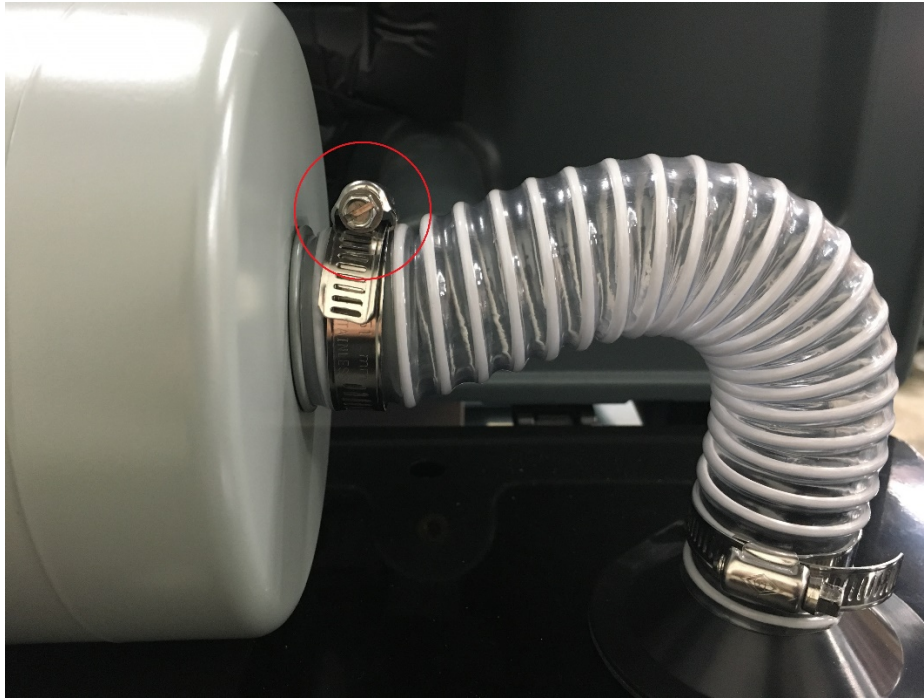

Remove the three nuts indicated below, which will free the vacuum pump.

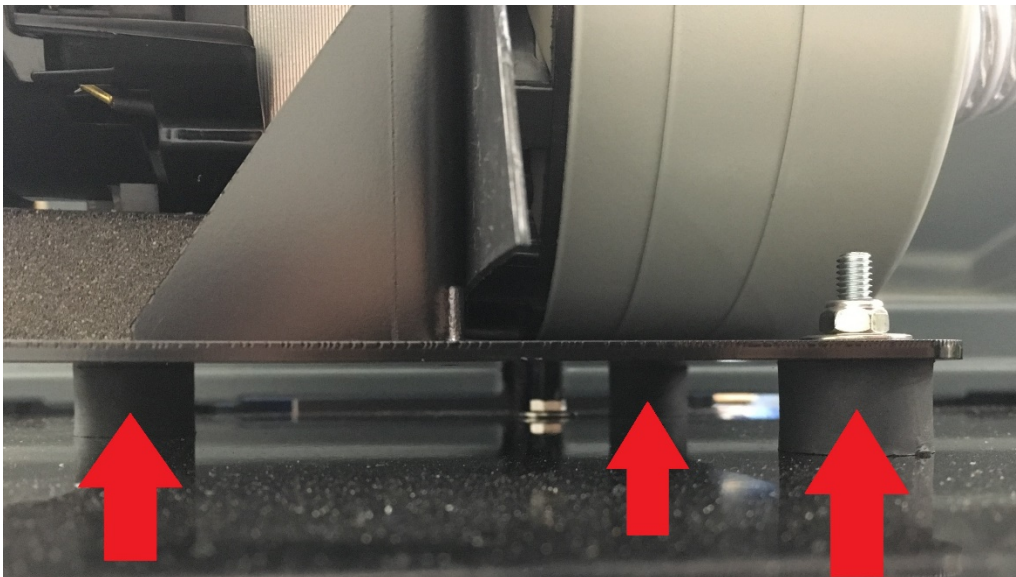

Replace the Vacuum motor. To reassemble the unit, follow these instructions in the reverse order.