

**Instruction
Guide with
Warranty**

RugDoctor^{PRO}.

QUICK DRY
Hot-Water Extraction
Carpet Cleaning Machines
Quick Dry Machines
with Hand Tool



Patents: 5,473,792 & 5,513,415 & 6,216,313 & Des. 364,947
Foreign and other patents pending.

CE

THIS MACHINE IS
APPROVED TO
CE/IEC 60335-2-68

CONTENTS

IMPORTANT SAFETY INSTRUCTIONS.....	2-3
GETTING STARTED Inspect your new machine at delivery	3
TO OBTAIN SERVICE	3
ABOUT YOUR MACHINE	4
OPERATING INSTRUCTIONS Carpet Cleaning	5
Upholstery Cleaning.....	5
TROUBLESHOOTING	6
MAINTENANCE Normal care and storage	7
Clean up	7
SERVICE	7
PARTS ORDERING	8-10
WARRANTY	11

- This appliance is suitable for institutional and commercial use; for example: in apartment complexes, hotels, motels, schools, hospitals, restaurants, clubs, shops, offices and furniture rental businesses.
- These carpet cleaning machines have factory measured sound emissions of 80-81 dB (A).

When using an electrical appliance, basic precautions should always be followed, including the following:

READ THESE WARNINGS FULLY BEFORE USING YOUR RUG DOCTOR MACHINE

WARNING—to reduce the risk of fire, electric shock, or injury:

1. Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
2. Use indoors only.
3. Do not allow to be used as a toy. Close attention is necessary when used by or near children.
4. Use only as described in this manual. Use only manufacturer's recommended attachments.
5. Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, consult the authorized service center nearest you for repair.
6. Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
7. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
8. Do not handle plug or appliance with wet hands.
9. Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
10. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
11. Do not use to pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
12. Do not use without filters in place.
13. Turn off all controls before unplugging.
14. Use extra care when cleaning on stairs.
15. Do not use to pick up flammable or combustible liquids such as petrol or use in areas where they may be present.
16. Connect to a properly earthed outlet only. See "Earthing Instructions."
17. Use only on surfaces moistened by the cleaning process or small spills. Do not place machine in standing water or try to clear flooded areas.
18. Do not clean over floor electrical outlets.
19. Do not use without upper (white) tank in place.
20. The use of an extension cord is not recommended.

SAVE THESE INSTRUCTIONS

Important Safety Instructions

Earthing Instructions

This appliance must be earthed. If it should malfunction or breakdown, earthing provides a path of least resistance for electric current to reduce the risk of electric shock. This appliance is equipped with a cord having an equipment-earthing conductor and earthing plug. The plug must be plugged into an appropriate outlet that is properly installed and earthed in accordance with all local codes and ordinances.

DANGER — Improper connection of equipment-earthing conductor can result in a risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly earthed.

This appliance is for use on a nominal 230-240 volt circuit.

Note: No adapter is to be used with this appliance.

Additional Precautions

- If you use the Rug Doctor machine for cleaning surfaces other than carpet and upholstery (see optional attachments), be sure to drain and rinse the lower tank of liquid or residue before changing cleaning applications.
- Do not attempt repair on a warranted machine or you may void the warranty. Contact the manufacturer or distributor listed on the back of this manual for information on where to send the machine for repair.
- Do not use replacement parts other than those available through Rug Doctor. Proper performance of the machine could be affected if substitutions are made.
- Always use Anti-Foam with Upholstery Cleaner or when otherwise needed to prevent excess sudsing in the upper (white) tank. Foam should never be ingested through the dome filter. Damage to the vacuum motor could result.
- Avoid picking up hard, sharp objects with the carpet cleaning machine. They may damage the machine.
- Do not use the machine for dry vacuuming. This machine is not outfitted with a fine dust filter and it will damage the vacuum motor.
- Do not use the machine to vacuum liquid (For example: a flooded basement or large spill). This machine is not equipped with an automatic overflow shutoff.
- Do not continue to press the spray (pump) switch when the solution tank is empty.
- Store in a dry place. Do not expose machine to rain or freezing temperatures.
- Do NOT put bleach, dye or products other than Rug Doctor cleaners in this machine. Use of inappropriate products may cause this machine to malfunction and may result in carpet damage. Read instructions carefully. Rug Doctor, Ltd., its parent company, and affiliates are not responsible for damage due to misuse of this machine.
- Failure to comply with the warning instructions will void the warranty.

Getting Started

WHEN THE MACHINE IS DELIVERED

Check the carton carefully for signs of rough handling. Remove machine from carton. If the machine is damaged, notify the carrier immediately and request an inspection. Be sure to keep the carton, packing inserts, packing lists and carrier's receipt until an inspector has verified your claim.

Damage occurring in transit is the carrier's responsibility. Should damage occur, contact your Rug Doctor authorized distributor for any information needed for the claim and to expedite repair of the machine.

Obtain a return authorization number by calling the phone number listed on the back of this manual before returning the machine for repair or service.

Before Operating the Machine

Read the manual carefully and completely before attempting to operate. This manual has important information for the use and safe operation of the machine. Keep this manual handy at all times. This machine will ensure years of satisfactory service if operated and maintained according to recommendations in the manual. If additional information is needed, please contact your local distributor or the customer service number listed on the back.

All information and specifications printed in this instruction manual are current at the time of printing; however, because of Rug Doctor's policy of continual product improvement, we reserve the right to make changes at any time without notice.

To Obtain Service

1. Register your new carpet cleaner by completing and returning the attached Rug Doctor Product Registration Card. **THIS IS IMPORTANT.** The registration entitles you to service work and replacement parts during the warranty period should your cleaner need repairs. Without this registration, repairs your unit could require may not be covered.
2. If you experience an operational problem, call the Customer Service phone number listed on the back of this manual. Basic replacement parts can be ordered through Customer Service.
3. All shipping costs for warranty covered repairs will be taken care of by Rug Doctor. Malfunctioning or defective parts will be repaired or replaced and your carpet cleaner will be returned to you. Shipping costs for out of warranty machines or damage not covered by the warranty will be your responsibility.
4. The warranty entitles the owner of a Quick Dry machine to specific legal rights. You also may have other rights which vary from country to country.
5. Rug Doctor's liability is limited to the cost of the unit. Some countries do not allow the exclusion or limitation of incidental or consequential damages, so this limitation or exclusion may not apply to you.

About Your Machine

Before You Begin

Carpet Cleaning

The Quick Dry System

Quick Dry is a patent-pending product and machine system allowing you the unique option to choose ultra fast drying OR deep cleaning.

In Quick Dry mode – Cleaning solution is used at a higher concentration level and less water is applied than in Deep Clean mode. The additional quick dry formula provides added surface agitation and wider dispersal sheeting action to stimulate cleaning and accelerate evaporation. The result is that carpet is dry to the touch in less than half the time – often in only 1-2 hours. Quick Dry mode is ideal for routine maintenance cleaning and spot cleaning high traffic areas more often.

In Deep Clean mode – For deeper penetration on heavily soiled carpets, the recommended dilution rate in Deep Clean mode contains a higher water content and more of the mixture is applied. This higher flow rate and greater volume of water flushes dirt and contaminants out from deep within carpet fiber and pad.

To complement the Quick Dry Carpet Cleaner, Rug Doctor manufactures a complete line of other cleaning products including Upholstery Cleaner and Traffic Lane Cleaner for ground-in dirt, plus solutions for problem areas like spots or odors from spills, pets or other sources. Contact your Rug Doctor distributor for information on these products.

IMPORTANT

Rug Doctor Pro machines and Rug Doctor Pro cleaning products are safe for most carpets and many fabrics, even delicate fibers. **HOWEVER**, you risk damage to carpets and fabrics not intended for water extraction method cleaning. **DO NOT use the Rug Doctor Pro machine or cleaning products on:** Natural fiber oriental rugs (silk or wool), hand-loomed wool rugs, braided rugs, sisal or jute carpets, silk, Haitian cotton, velour, brushed corduroy, leather or non-colorfast fabrics. Do not use on upholstery fabric with cleaning codes S or X. (Some stains require professional treatment.) Use cool water when cleaning wool, wool blends or delicate fibers.

Rug Doctor Pro Quick Dry machines can be used with optional attachments and products for cleaning ceilings, walls, hard surface floors and upholstery. If you use the Quick Dry machine for more than one cleaning application, every care has been taken to ensure safe, effective products and top quality results when applied correctly. **ALWAYS** use Rug Doctor Pro products to assure compatibility of cleaning products across the variety of possible applications and to achieve proper results.

IMPORTANT: Whenever using the machine for more than one type of cleaning application, you should always drain and rinse the machine's lower tank of liquid or residue before mixing another solution.

Test for colorfastness: Whenever cleaning carpet for the first time using the Quick Dry system, test for colorfastness first. Wet an inconspicuous area with a small amount of cleaner/water solution. After 1-2 minutes, blot with a white paper towel and check for color transfer. If color shows on the towel, the carpet is probably not meant for water extraction cleaning.

Read Instructions Completely Before Using


Cleaning guidelines: If cleaning an entire room, move furniture to center of the room. Begin cleaning where furniture was, then return furniture to its original location. Avoid staining carpet by blocking up or by placing aluminum foil under furniture legs until carpet is completely dry.

For faster drying in Deep Clean mode: Ventilate area. Open doors and windows or place fans pointed downward on carpet. Turn on heat in damp or cold weather. Turn on air conditioner in humid or hot weather.

1. If desired, move furniture. Use a normal dry vacuum cleaner to sweep area and remove loose dirt before using the Quick Dry machine. This helps keep the brushes and water vacuum system efficient for better results.
2. Pre-treat any special problem areas with appropriate Rug Doctor Pro cleaners.
3. Choose setting (Quick Dry or Deep Clean) by turning selector knob to correct position at machine back (ILLUS. 1). Mix hot tap water in a clean bucket with product (ILLUS. 2). Water should not be so hot as to scald or burn skin.


In Quick Dry Mode - Mix 30 to 60 mL of Rug Doctor Pro Quick Dry Carpet Cleaner product per litre of water.

In Deep Clean Mode - Mix 15 to 30 mL of Quick Dry Carpet Cleaner per litre of water.

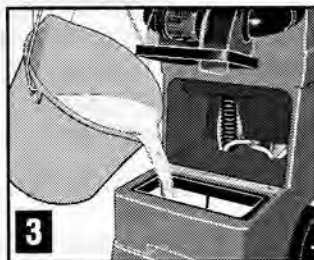

4. Lower restraining wire **A** and remove white UPPER tank **B**.
5. Fill LOWER tank **C** with the cleaning solution you just mixed by pouring through the white filter screen (ILLUS. 3). Machine is full when liquid halfway covers filter screen.
6. If using **Rug Doctor Pro Anti-Foam**, add 60 to 120 mL to white UPPER tank **B**. Slip tank back in place and seal tank and clear dome **D** securely by replacing restraining wire **A**.

7. Check the back of the machine to ensure hose connections are secure and set up to clean carpet instead of upholstery (ILLUS. 1).
8. Plug power cord in and position machine. Refer to labels on top of machine for additional instructions **E** and on handle **F**. Press the switch for "CARPET" cleaning on the top of the machine, then press the "VACUUM ON" switch.
9. While depressing the red button on the handle **G**, pull machine slowly and steadily backward in a straight line, keeping vacuum slot **H** against the carpet surface (illus. 4). You will begin to see soiled solution entering the clear dome **D**. (If you don't, stop and refer to the Troubleshooting section.) **IMPORTANT:** When depressing handle button keep machine moving so vibrating brush does not agitate in one place.

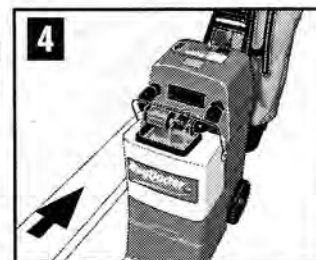

- Release button 12 to 30 cm before ending each pass to stop cleaning solution. Tilt machine backward and move it forward to position it for another backward cleaning pass. Continue cleaning in this manner, slightly overlapping each pass. When lower tank runs out of solution, the pump sound will increase in volume slightly and dirty water will stop entering dome. Turn off "VACUUM ON" switch, remove and empty white UPPER tank **B**. Rinse the upper tank and refill LOWER tank **C** with clean solution/water mixture. Replace upper tank **B** and continue the cleaning process until area to be cleaned is covered.

Cleaning Tips/Cautions

If some areas require additional cleaning, make the second pass at a right angle to the first.

Avoid over-wetting carpet. Don't go over a heavily-soiled spot more than 2-3 times. **Berber, Multi-level or Looped carpets** retain more liquid. When cleaning these types of carpets in Deep Clean mode, do not repeat cleaning passes. If additional cleaning is desired, allow carpets to dry before attempting to reclean heavily-soiled areas.


You should recover 2/3 to 3/4 tank of dirty solution for each tank of clean solution used (depending upon carpet type). Improper dome seal will create loss of vacuum. If you do not recover at least 2/3 of the used solution, refer to "Vacuum System" in the **E** Troubleshooting section.

In the event of excess foaming in the upper tank, switch off machine immediately and add 60 to 120 mL of **Rug Doctor Pro Anti-Foam** to the white upper tank. **DO NOT** add Anti-Foam to cleaning solution (lower tank).

WARNING: Excess foam can be drawn through the machine and may damage the machine.


Upholstery Cleaning

- Prepare surfaces for cleaning by thoroughly vacuuming or brushing. When cleaning and drying cushions, first spread sheets or towels on floor as a drying surface for the dampened cushions.

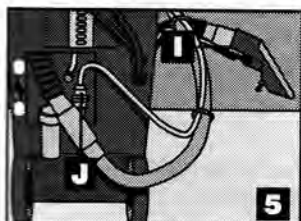

- Connect Hand Tool hoses to the machine. First disconnect the machine's large vacuum hose. Reconnect top portion to large vacuum hose of hand tool **1**. Slide down the ring of brass "quick coupler" and pull out the small solution hose. Slide down the ring again to insert metal end of hand tool solution hose **J** (ILLUS. 5). Release brass ring to secure. Tug gently on hose to make certain the connection is complete.
- Remove white UPPER tank **B**, mix **Rug Doctor Pro Upholstery Cleaner** in a clean bucket according to label directions and pour into LOWER tank **C**.
- Add 60 to 120mL of **Rug Doctor Pro Anti-Foam** to white UPPER tank **B**, then slip tank back in place and seal tank and clear dome **D** securely by replacing restraining wire **A**.
- Plug power cord in and position machine. Refer to labels on top of machine **E** and on handle **F**. Turn on machine by pressing the switch for "UPHOLSTERY/HAND TOOL" on top of the machine and then pressing the "VACUUM ON" switch.
- Test upholstery for colorfastness by first cleaning a small, hidden area, then rubbing the test area with a white paper towel. If no color appears, continue cleaning. A little color on the towel means there's some chance of color running, but it's likely you can still clean safely - try using cool or cold water and test again with a white paper towel.
- Working at a slow, steady pace - begin cleaning by squeezing hand tool lever as you pull the tool over fabric (ILLUS. 6). Overlap strokes slightly.
- As you clean, with the vacuum switch on, squirt a small amount of **Rug Doctor Pro Anti-Foam** into the small (vacuum) opening of the hand tool every few minutes to minimize suds buildup in the vacuum hose. If foam builds up around the hand tool, pull slightly faster or vacuum excess solution by passing over area a second time without squeezing lever on hand tool.
- When cleaning is complete, turn off "VACUUM ON" switch, empty any remaining solution from the machine. First disconnect both hand tool hoses from machine. Holding hose ends over a sink, squeeze hand tool trigger until all liquid is drained. To drain the machine, follow clean up instructions on page 7 to ensure machine is properly cleaned and ready for the next use.
- Reconnect machine vacuum and solution hoses.

NOTE: For velvet upholstery, fluff up damp pile with a soft brush or towel to keep from matting.

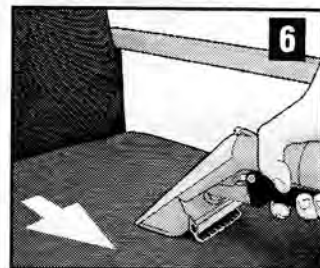

Trouble-shooting Electrical System

Vacuum System

Solution System

Foaming

Carpet Discoloration

Problem

No electrical power.

Possible Cause/Remedy

1. Make sure the electrical cord is plugged in. If electrical outlet is connected to a wall switch, be sure the wall switch is "on."
2. Check and, if needed, press the "Power Reset" button on machine.
3. Wall circuit breaker off or fuse blown. Turn circuit breaker on or replace fuse. Unplug any equipment using the same circuit.
4. Fuse in plug blown. (U.K./Ireland BS 1363 plug only.) Replace fuse.
5. Defective Power Cord.

Switch is turned on. Power is intermittent to all motors.

1. Faulty electrical cable, defective switches, or loose terminal connections.

Electrical shock.

1. Equipment not earthed. Locate and use an earthed outlet.

Machine on. Little or no vacuum at machine or hand tool vacuum slot.

1. Dome is not sealed. Secure with upper tank restraining wire.
2. Loose or no vacuum hose connection. Check the hose connection at back of machine and secure if necessary.
3. Accumulated dirt on dome filter screen. Clean filter inside dome.
4. Lint & dirt buildup at vacuum slot. Remove any accumulated debris and clean.
5. Defective vacuum hose assembly inside the machine.

Machine on, vacuum motor not working or runs intermittently.

1. Loose wiring connection.

Loss of water pressure

1. Low solution level. Check level and refill if necessary.

Machine on, spray button depressed, no spray at spray tip

1. Solution line not connected. Check the small hose at the back of machine and reconnect securely at quick coupler.
2. Check Quick Dry/Deep Clean knob at the back of the machine. It should be set on one or the other selection.
3. Clogged spray tip. Remove with wrench. Rinse clean and replace.
4. Clogged solution tank line strainer. Check screen inside lower tank (see maintenance section). Clean if necessary.

Machine on, hand tool lever squeezed, no spray.

1. Solution line not connected. Check the small hose at the back of machine and reconnect securely at quick coupler.
2. Clogged spray tip on hand tool. Clean.
3. Clogged solution tank line strainer. Check screen inside lower tank (see maintenance section). Clean if necessary.

Uneven or weak spray from tips.

1. Clogged or dirty spray tips. Clean.
2. Accumulated dirt on solution tank line strainer. Check screen inside lower tank (see maintenance section). Clean if necessary.

Excessive foaming.

- Foam caused most often by Upholstery Cleaning Solution or cleaning carpets where spray foams or shampoo has been used previously.
1. Add 60 to 120 mL Anti-Foam to the white UPPER tank for carpet cleaning.
 2. Add 60 to 120 mL Anti-Foam to the white UPPER tank and small amounts at the hand tool vacuum slot periodically when cleaning upholstery.

Carpet Discoloration (Yellowing)

1. Carpet may have been overwet or excessive amounts of cleaning product were used. Spray a light application of Rug Doctor Stain Remover directly on affected area and brush it in. Allow to dry.

Carpet Discoloration (Stained areas appearing after cleaning)

1. Old, deep spills "wicking" up to surface as carpet dries. Allow to finish drying. Spray a light application of Rug Doctor Pet Stain Remover directly on the affected area and brush it in. Allow to dry.
2. Old, deep spills "wicking" up to surface as carpet dries. Allow to finish drying. Make one light pass over area with machine using normal cleaning solution avoiding deep wetting. (Stain may continue to appear in subsequent cleanings) Always avoid overwetting.

Streaking

1. Clogged spray tip. Remove with wrench. Rinse clean and replace.

Maintenance Procedures

Care and Periodic Maintenance of Your Machine

1. Keep the machine stored indoors out of dusty, wet and freezing areas. This will prolong the use of your Rug Doctor Pro Quick Dry machine and help keep it trouble free.
2. Always use recommended cleaning agents. Do not use dye or bleach in this machine.
3. Use a light lubricating oil to deter corrosion of quick disconnect and other moving parts. Be sure to wipe all excess oil from lubricated areas.
4. Quick Dry machines have been designed for rugged use; however, avoid mishandling such as dropping the unit or transporting it in an open van or vehicle. Jarring from sudden vehicle starts or stops can cause damage. Use care when transporting.
5. Store power cord on the machine by winding it onto the machine cord wrap located on the handle. Regularly inspect cord for signs of damage. A damaged power cord should be replaced.



Freezing Temperatures

Rug Doctor recommends that Quick Dry machines never be stored or remain for a prolonged period of time in freezing temperatures. Damage to the pump and solution hoses caused by water in the machine system could occur. If it becomes necessary to store the machine where temperatures could drop below 0°C (32°F) you should take precautions to protect the pump and solution hoses.

Clean Up

1. Drain the machine: If you use the Rug Doctor Pro Quick Dry machine for cleaning surfaces other than carpet and upholstery (see optional attachments), you should always drain and rinse the lower tank of liquid or residue before changing cleaning applications.
2. Clean the Vibrating Brush: After each use (with machine unplugged from power source), remove any debris from the vibrating brush. Use your finger and/or an old comb for this purpose.
3. Clean the Vacuum Filters: After each use, inspect the cylindrical filter screen located inside of the clear plastic dome on the front of the machine. If debris is present, remove the filter screen by pushing it right and compressing the spring until the filter end is clear of the dome. Clean by running water through from the inside to the outside of the screen. Replace by compressing the spring wire and inserting the black end securely into place in the hole inside the dome.
4. Clean the Solution Tank Filter Screen: After each use, inspect the rectangular filter screen located in the fill opening of the solution (lower) tank. If debris is present, remove screws that hold the filter in place and remove filter from the solution tank opening. Clean filter by holding it under a water faucet and letting the water run through the filter in the opposite direction from the normal filling flow. Replace the filter screen and fasten it in place with the two mounting screws.
5. Clean the Solution Tank Line Strainer: Whenever the solution tank filter screen is removed for cleaning (refer to #4), inspect the cylindrical filter mounted on the end of the solution line inside of the tank. (The larger capacity 3.7G machine has two filters.) If debris is present, remove the filter by pulling it off the solution line. Clean by holding the filter under flowing water. Replace filter by pushing over the end of the solution hose.
6. Remove carpet fibers from Vacuum Slot: Periodically check vacuum slot on the bottom front of machine for debris. Remove any fiber, hair or other debris that may be caught in the slot using a stiff wire with a hook on the end (a wire coat hanger can be used). Make sure the machine has the "VACUUM ON" switch turned off, unplugged and the tanks are empty of water.

Parts Ordering

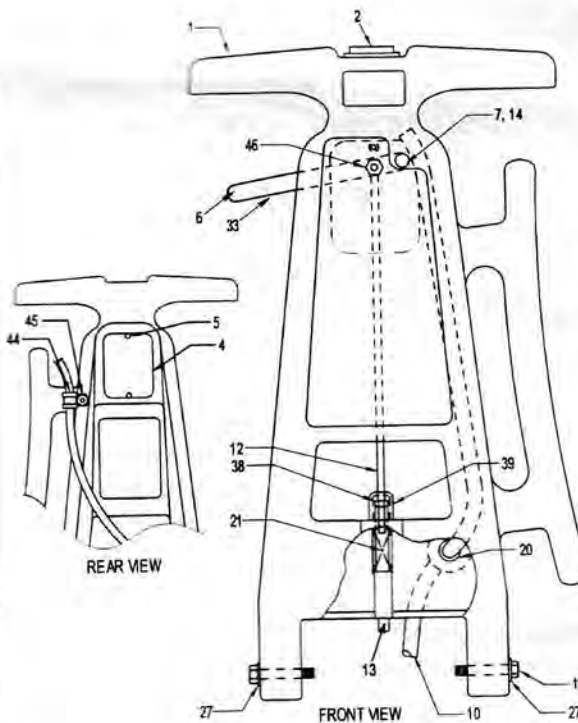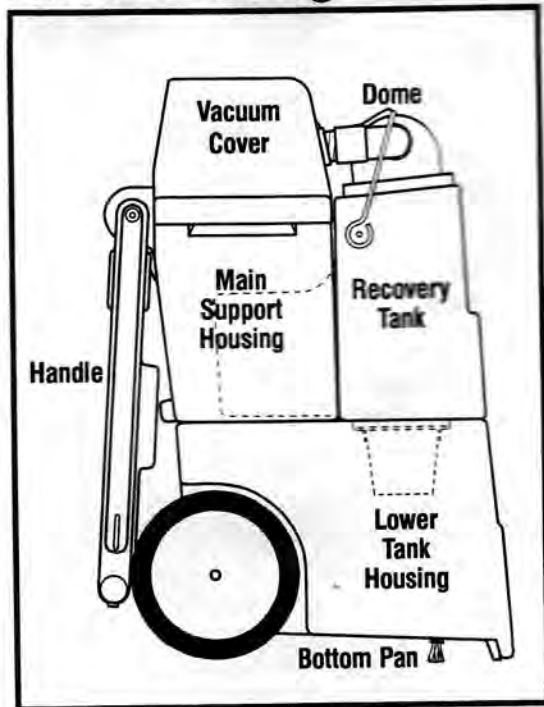


Handle Assembly

- | | | | |
|----|-------|-------------|----------------------------------|
| | 92610 | 3.7G | Entire Assembly |
| | 92607 | 2.6G | |
| 1 | 60448 | | Handle, black w/molded cord wrap |
| 2 | 51060 | | Switch, red |
| | 60189 | | Clear Boot |
| 4 | 60636 | | Access Panel |
| 5 | 20934 | | Screw |
| 6 | 45107 | | Lever |
| 7 | 60181 | | Spacer |
| 10 | 55388 | | Power Cord |
| 11 | 20372 | | Bolt |
| 12 | 20369 | | Rod, plunger |
| 13 | 20376 | 3.7G | Plunger |
| | 20368 | 2.6G | |
| 14 | 20370 | | Binding Post + Screw |
| 20 | 50992 | | Bushing |
| 21 | 20373 | | Spring, Third Plunger |
| 27 | 20881 | | Washer |
| 33 | 60146 | | Rubber Boot |
| 38 | 20371 | | Hex Nut |
| 39 | 60180 | | Sleeve, black vinyl boot |
| 44 | 51055 | | Cord Clamp |
| 45 | 20911 | | Rivet |
| 46 | 20231 | | Nut |


Vacuum Cover Assembly

- | | | | |
|----|-------|-------------|-------------------------------------|
| 1 | 60453 | 3.7G | Vac Cover |
| | 60476 | 2.6G | |
| 2 | 51073 | 3.7G | Rocker Switch |
| | 51014 | 2.6G | |
| 3 | 50995 | | Circuit Breaker |
| 6 | 60167 | | Pocket Pull, 1-pc, snap-in |
| 7 | 60716 | | Grommet, split back |
| 8 | 50243 | | Vac Motor |
| 10 | 20853 | | Washer, 2.6G only |
| 12 | 60635 | | Gasket |
| 14 | 60726 | | Coupling, threaded |
| 17 | 11842 | 3.7G | Baffle |
| | 11839 | 2.6G | |
| 18 | 65141 | | Gasket |
| 19 | 20534 | | Screw, 3.7G only |
| | 20422 | | Screw, 2.6G only |
| 22 | 20231 | | Elastic Stop Nut, 2.6G only |
| 23 | 20375 | | Screw |
| 27 | 60181 | 3.7G | Spacer, nylon |
| | 60722 | 2.6G | |
| 29 | 20932 | | Nut, 2.6G only |
| 30 | 75496 | | Label, ground symbol, international |
| 31 | 20652 | | Cable Tie |
| 34 | 51074 | 3.7G | Rocker Switch |
| | 51053 | 2.6G | |
| 35 | 11851 | | Clamp |
| 36 | 51081 | | Filter, EMI 1 Amp, |
| 38 | 51082 | | Filter, EMI 4 Amp, 2.6G only |
| 40 | 60174 | | Boot, clear |
| 41 | 75188 | | Label, Earthing Warnings |
| 42 | 11847 | | Baffle Insert, splash guard |
| 44 | 20932 | | Nut, Keps, 2.6G only |

3.7G Vacuum Cover Assembly

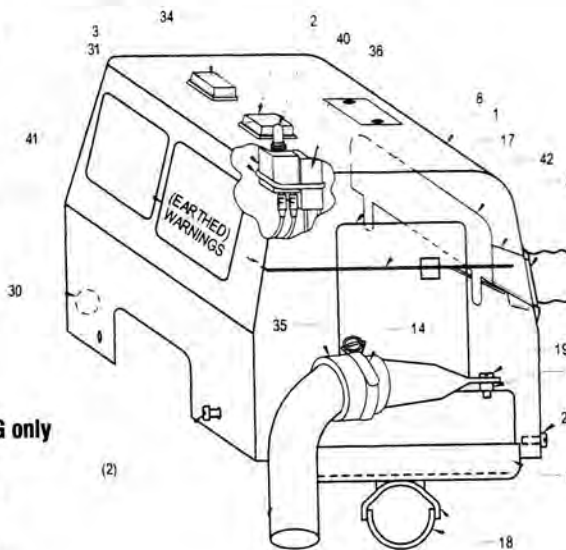

2.6G Vacuum Cover Assembly

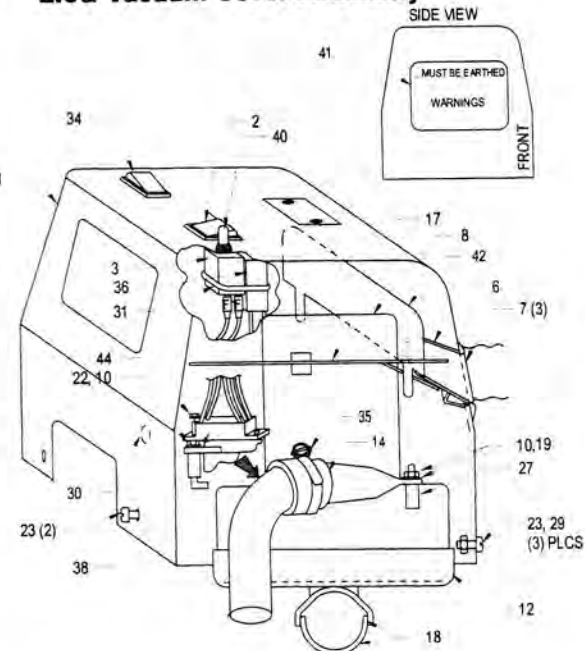


Hand Tool Assembly



- | | | | |
|----|-------|--|----------------------------|
| | 92396 | | Entire Assembly |
| 1 | 11177 | | Clamp |
| 2 | 10465 | | Compression Spring |
| 3 | 20913 | | Screw |
| 4 | 60183 | | Plunger, white |
| 5 | 60182 | | Cap, black, threaded |
| 6 | 60133 | | Valve Handle, black |
| 7 | 60134 | | Sight Cover, gray |
| 8 | 60155 | | Nozzle/Valve Body, gray |
| 9 | 60638 | | O-Ring |
| 10 | 20075 | | Washer |
| 11 | 60428 | | Brush, channel strip |
| 12 | 60639 | | O-Ring |
| 13 | 60731 | | Spray Tip, 95°, plastic |
| 14 | 80783 | | Nipple, standard hose barb |
| 16 | 60640 | | O-Ring |
| 20 | 85206 | | Solution Hose, braided |
| 24 | 60148 | | Screen, filter for jet tip |
| 25 | 60191 | | Spacer, nylon |
| 26 | 20348 | | Screw |

Hose Set Assembly

- | | | | |
|----|-------|--|---------------------------------|
| 1 | 11177 | | Clamp, Oetiker |
| 9 | 20652 | | Cable Tie, self-locking |
| 10 | 60388 | | Hose End |
| 14 | 80783 | | Nipple, standard hose barb |
| 15 | 80776 | | Vacuum Hose, gray, 2 cuffs |
| 16 | 85448 | | Solution Hose, braided 12' 3.5" |
| 17 | 80208 | | Quick Coupler Connector |
| 18 | 80219 | | Hose Barb |
| 20 | 60725 | | Rubber Washer |

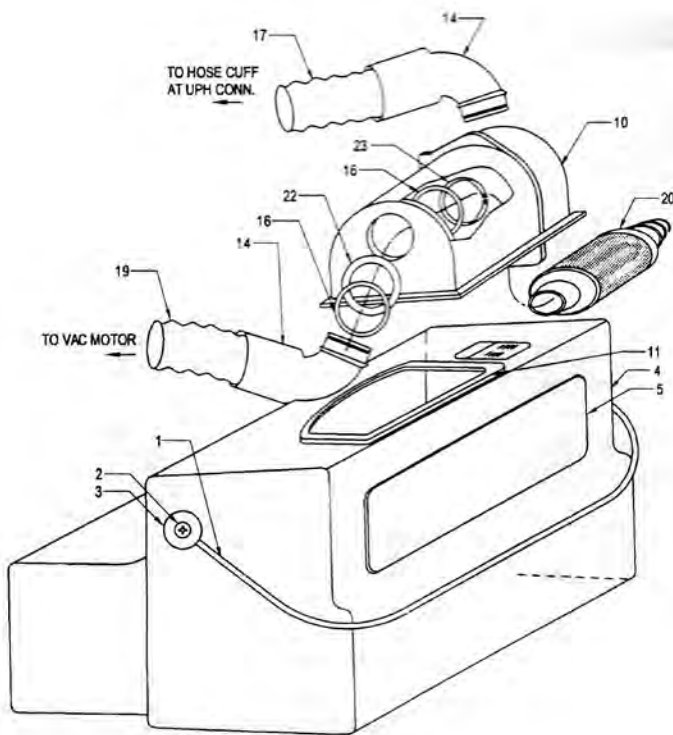

3.7G Main Support Housing Assembly

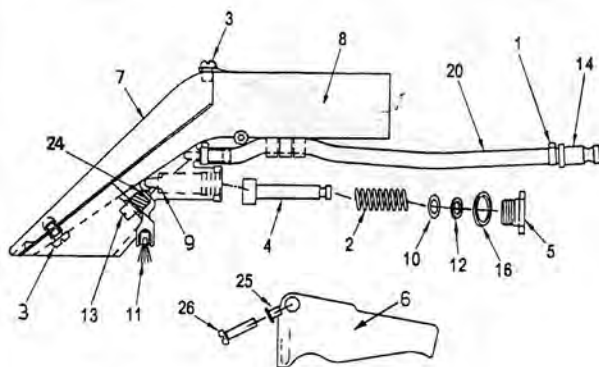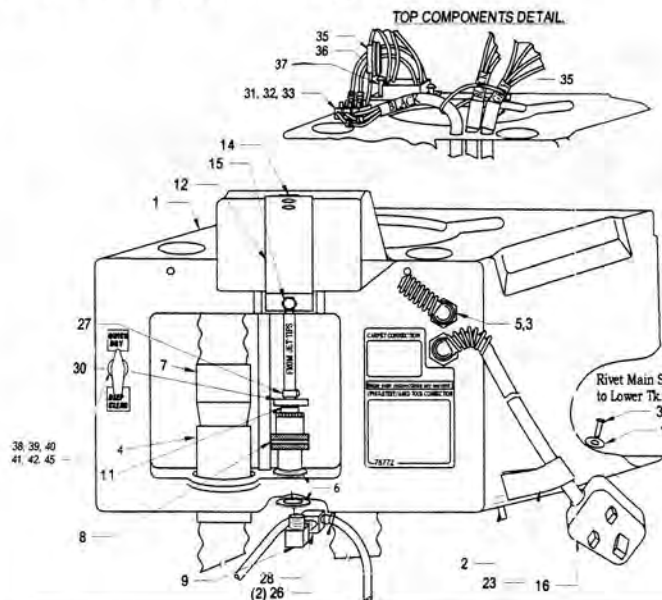

Recovery Tank Assembly

- | | | |
|---------|-------------|-----------------|
| 92591I | 3.7G | Entire Assembly |
| 92590I | 2.6G | Entire Assembly |
| 1 45104 | 3.7G | Bail Wire |
| 45147 | 2.6G | Bail Wire |
| 2 20378 | | Screw |
| 3 65704 | | Retainer, nylon |
| 4 60451 | 3.7G | Recovery Tank |
| 60473 | 2.6G | Recovery Tank |
| 5 76855 | 3.7G | Decal |
| 76856 | 2.6G | Decal |



Dome Assembly

- | | | |
|----------|--|----------------------------|
| 92416 | | Entire Assembly |
| 10 60717 | | Dome, Clear, skirtless |
| 11 60701 | | Gasket, dome seating |
| 14 60700 | | Elbow, 90° black |
| 16 60196 | | Washer, plastic, black |
| 17 85226 | | Vacuum Hose, black |
| 19 85225 | | Vacuum Hose, black |
| 20 10460 | | Filter, screen with spring |
| 11840 | | Spring only |
| 22 60591 | | Gasket, elbow |
| 23 20864 | | Retaining Ring |

Main Support Housing Assembly

- | | | |
|----------|-------------|--|
| 1 60492 | 3.7G | Main Support Housing |
| 60490 | 2.6G | Main Support Housing |
| 2 20375 | | Screw |
| 3 51022 | | Bushing |
| 4 80773 | | Hose End Enlarger |
| 5 51021 | | Nut, strain relief bushing |
| 6 20907 | | Washer |
| 7 80780 | | Hose End, tapered |
| 8 80208 | | Quick Coupler, brass |
| 9 80280 | 3.7G | Elbow, brass |
| 80775 | 2.6G | Elbow, brass |
| 11 80784 | | Nipple, plug, brass |
| 12 45112 | 3.7G | Striker Plate |
| 45102 | 2.6G | Striker Plate |
| 13 20911 | | Rivet |
| 14 20378 | | Screw, 3.7G only |
| 15 20892 | | Screw, 3.7G only |
| 16 ——— | | Cord With Plug, Call Customer Service for part information |
| 18 20266 | | Washer |
| 23 76789 | | Label, Caution |
| 26 11852 | | Clamp, 3.7G only |
| 27 11330 | | Clamp |
| 28 80459 | | Tee, brass, 3.7G only |
| 30 60725 | | Washer, rubber |
| 31 50545 | | Terminal Strip |
| 32 20518 | | Screw |
| 33 20706 | | Nut |
| 34 20356 | | Rivet |
| 35 51083 | | Bead, Ferrite |
| 36 51082 | | Filter, EMI (4 Amp), 3.7G only |
| 37 20504 | | Screw, 3.7G only |
| 38 80809 | | Valve, ball, 3-way |
| 39 60128 | | Elbow, 1/8 MNPT x 1/4" |
| 40 60743 | | Barb, NYL, 1/8 NPT, 1/4" |
| 41 85243 | | Hose, PVC, 1/4" ID, 14"L |
| 42 85237 | | Hose, PVC, 1/4" ID, 29"L |
| 45 11845 | | Clamp, hose, oetiker |


2.6G Main Support Housing Assembly

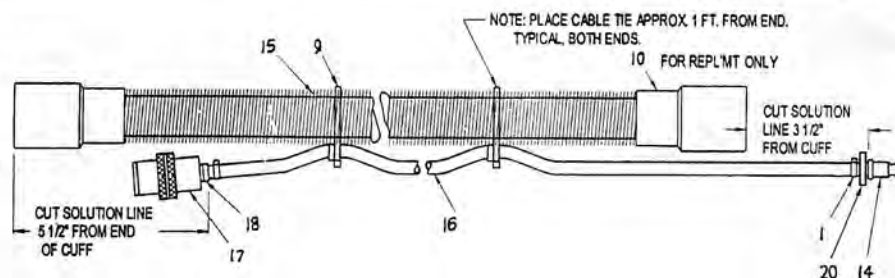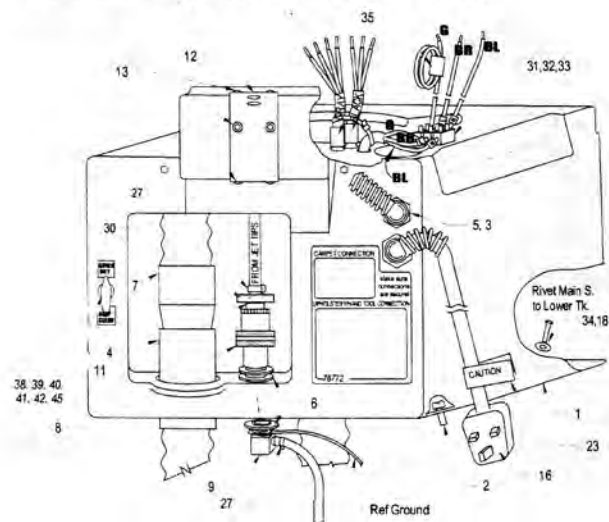

Lower Tank Assembly

- 2 45106 **3.7G** Vent Panel
- 45101 **2.6G**
- 3 20375 Screw
- 4 19466 Star Washer
- 5 85242 **3.7G** Hose, exhaust
- 85234 **2.6G**
- 6 60716 Grommet, split, black
- 7 85227 Vac Hose, nozzle tube
- 8 45161 **3.7G** Nozzle, floor
- 45160 **2.6G**
- 11 20517 Screw, **2.6G only**
- 12 10231 **3.7G** Wheel
- 10281 **2.6G**
- 13 45105 **3.7G** Axle
- 45151 **2.6G**
- 14 11183 Hubcap
- 15 60400 Filter, screen
- 16 20091 Screw
- 18 11987 **3.7G** Axle Sleeve
- 11182 **2.6G**
- 21 60463 **3.7G** Housing, blue
- 60477 **2.6G**
- 22 10461 Line Strainer, sump

- 23 10115 Hose Clamp
- 26 41114 Tinnerman Clip, threaded, **3.7G only**
- 20352 Rivet, **2.6G only**
- 29 60634 Gasket, rubber
- 31 20524 Screw, **3.7G only**
- 20266 Washer, **2.6G only**
- 32 20853 Washer, **3.7G only**
- 34 11850 Retainer, **3.7G only**

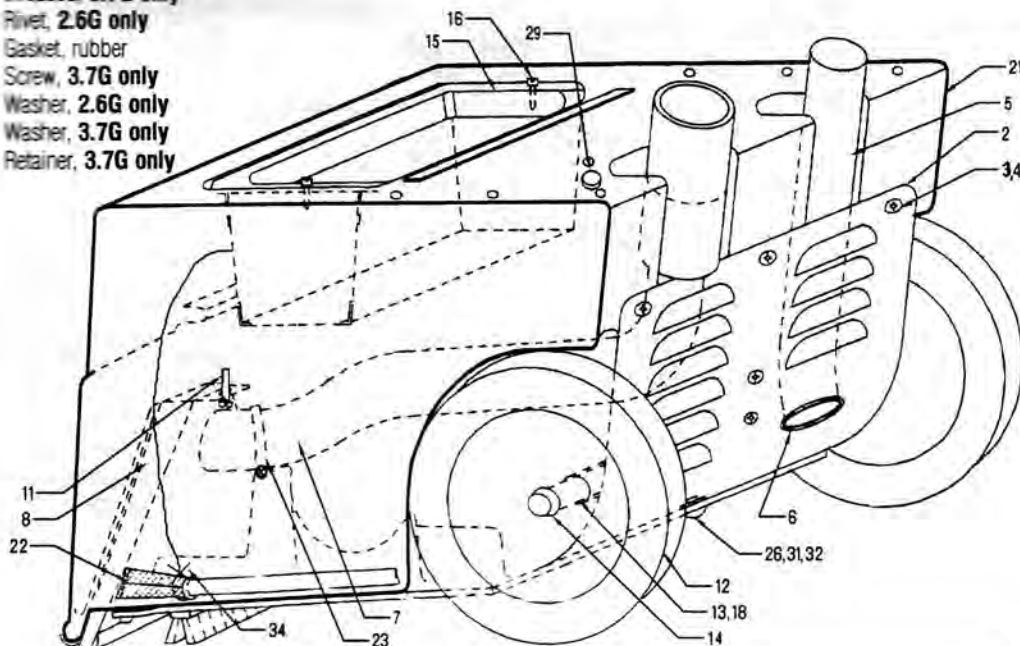


Bottom Pan Assembly


- 1 50251 Pump
- 3 90069 Cam Assembly
- 4 11845 Hose Clamp
- 5 60669 **3.7G** Bottom Pan
- 60670 **2.6G**
- 6 40352 Drive Arm
- 7 40353 Pillow Block
- 8 60723 **3.7G** Brush Strip
- 60719 **2.6G**
- 9 20375 Screw
- 10 60720 Pump Mount, rubber
- 12 60166 Motor strap
- 13 80790 **3.7G** Jet Tip
- 80771 **2.6G**
- 14 85237 **3.7G** Hose
- 85230 **2.6G**
- 15 20604 C-Clip
- 16 20771 Washer, nylon
- 17 45108 **3.7G** Brush Holder
- 45149 **2.6G**
- 18 20521 Screw
- 19 20241 Elastic Stop Nut
- 20 80597 Sleeve Holder
- 21 10341 Bearing, self-align
- 22 20840 Washer, felt
- 23 80596 Bushing, drive-arm
- 24 60138 Connector, "Y"
- 25 85231 Hose, reinforced
- 27 50262 Motor, brush drive
- 28 60128 Elbow/Barb, Nylon
- 29 60139 Fitting, 90°
- 30 20906 Screw
- 31 20534 Screw
- 32 20853 Washer
- 33 20249 Nut, Keps
- 34 85241 Hose, **3.7G only**
- 35 80791 Hose, **3.7G only**
- 38 60637 **3.7G** Seal Gasket
- 60599 **2.6G**
- 39 60598 Motor Gasket
- 40 85237 Hose, reinforced

- 41 80791 **3.7G** Hose
- 85235 **2.6G**
- 42 20652 Cable Tie, **3.7G only**
- 46 20356 Rivet
- 48 65508 **3.7G** Gasket
- 65507 **2.6G**
- 49 20266 Washer
- 51 10316 Washer, nylon
- 53 60744 Fitting, 90° minibarb
- 54 85222 Hose, PVC, 1/4" ID, 20" L
- 55 80794 Jet tip, Floodjet 2.5 **3.7G**
- 80793 Jet tip, Floodjet 1.5 **2.6G**
- 56 60739 Mounted block, spcl
- 57 20511 Screw, 6-32 x 3/4" PH
- 59 20706 Nut, keps, 6-32, SST
- 60 11330 Clamp, Oetiker, 11.8mm

3.7G Bottom Pan Assembly

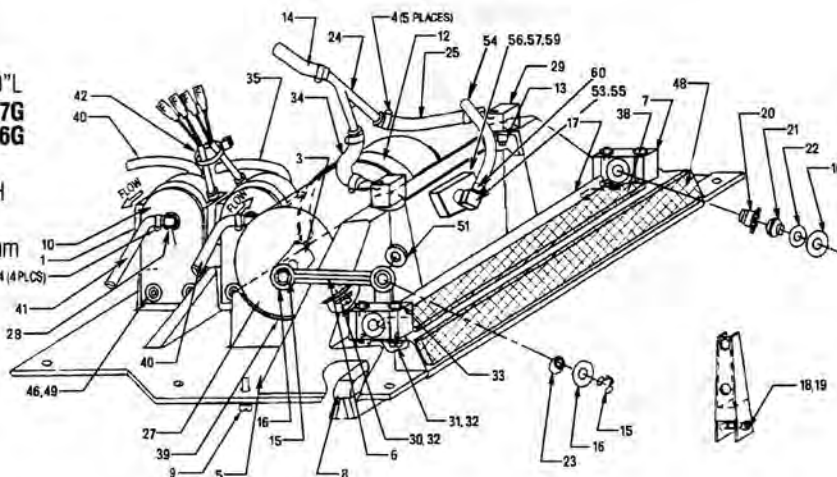

2.6G Bottom Pan Assembly

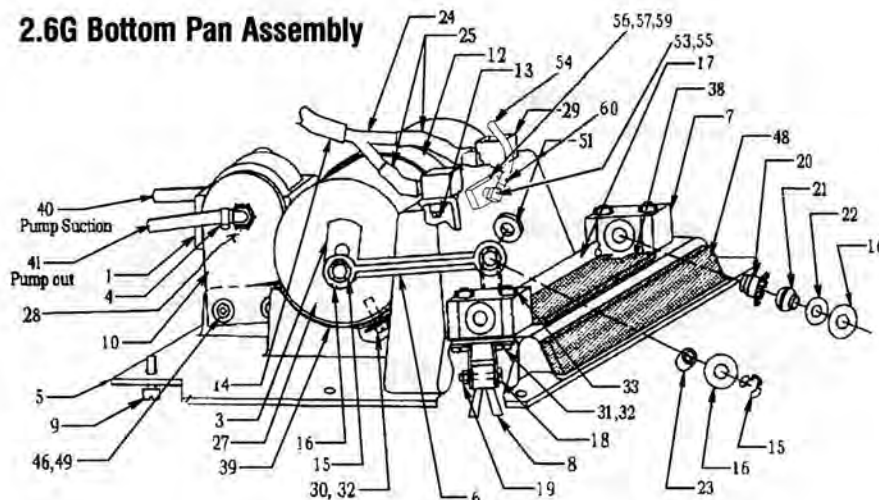

Thank you for buying a Rug Doctor Pro carpet cleaning machine.

Your Rug Doctor carpet cleaning machine has been manufactured, tested and inspected in accordance with Rug Doctor's high standards of quality. This offers you one of the finest carpet cleaning machines available today.

Please take a few minutes to read this informative instruction manual and return the enclosed owner registration card. Pay particular attention to the safety instruction provided for your protection.

We hope you enjoy your new machine. Should you have any questions about the operation of your unit, please call the phone number listed on the back of this instruction manual.



DURATION OF FULL ONE (1) YEAR WARRANTY AND TO WHOM EXTENDED In keeping with its high standards of quality, Rug Doctor provides purchasers, from purchase date, a full one (1) year Limited Warranty, referred to as The Warranty Period.

WHAT DOES THE WARRANTY COVER AND WHAT WILL RUG DOCTOR DO Rug Doctor will, without charge, during The Warranty Period, repair or replace, at its option, any component part which is defective or that malfunctions or that fails to conform with this Warranty, when the machine is returned. To exercise the Warranty provisions and before returning the machine, please call Rug Doctor or your authorized Rug Doctor distributor.

EXCLUSIONS FROM WARRANTY Every machine or component part returned to Rug Doctor shall be examined. Malfunctions, defects or failures of the machine or any component part(s) to conform to the Warranty, due to alterations made to the machine, improper or negligent use or abuse or the unlawful use of the machine for rental purposes are excluded under this Warranty. Any attempt to repair/tamper with the machine voids the Warranty.

Use of the machine for commercial purposes (other than rental) is covered by this Warranty to the extent that malfunctions, defects or failures of the machine or component part(s) to conform to the Warranty are not due to alterations made to the machine, improper or negligent use or abuse, or normal commercial wear and tear.

FURTHER LIMITATIONS In no event shall Rug Doctor Pro be liable for any consequential or incidental damages you may incur in connection with the purchase and use of the machine; including, without limitation, commercial loss or for any incidental expenses, loss of time or inconvenience.

Some countries do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusion may not apply to you.

UNAUTHORIZED USE Use of this carpet cleaning machine with Rug Doctor Pro trademarks for rental purposes is unauthorized and is in violation of 15 U.S.C. Section 1114 (l) and 15 U.S.C. Section 1125 (a).

TO OBTAIN WARRANTY ASSISTANCE For Warranty, service or other assistance, please call the phone number listed on the back of this manual. Rug Doctor will need the following information in order to assist you: Your name, address and telephone number

Product model and serial number

Date of purchase

Nature of the problem

Rug Doctor will review all the facts involved and advise you as to recommended procedure. We recommend you keep the original carton and packing materials. This Warranty gives you specific legal rights, and you may also have other rights which vary from Country to Country.

***Rug Doctor* PRO®**

Your Rug Doctor Pro Distributor or Representative is:

Customer Service U.K. 1(44) 01903 235558 / U.S.: 972-673-1580

www.rugdoctorpro.com