

GTS Newsletter

2008/17E


Machines

Machine	TASKI swingo XP
Subassembly	Tank


Induction Air Filter/Hinge

Due to safety related reasons we are forced to place a protection onto the tank cover, so it can no longer shut all of a sudden.

Furthermore an Induction Air Filter (c), which is easy removable, will be implemented. To secure that nobody is able to grasp into the turbine an additional protecting plate (b) needs to be mounted in between the turbine and the gasket.

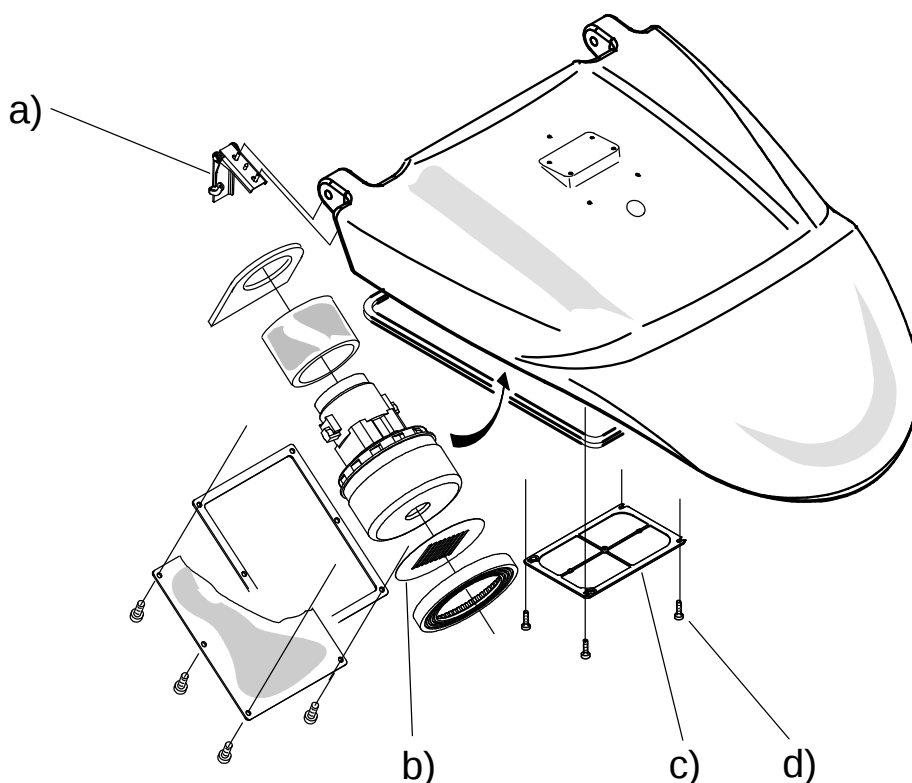

	Description	Old	New	Remarks
a)	Strap Shackle Axle Retaining Ring 8 A Screw Delta PT Torx 50x20 Pan Head Screw 3,9x13		4127904 (18603-33) 4127905 (18603-34) 4084090 (17582-87) 4020050 (2910/7) 4122947 (1840/109) 4046950 (1838/19)	2 pce 2 pce
b)	Protecting Plate		4128120 (18603-40)	
c)	Induction Air Filter	4126650 (18601-51)	4127914 (18603-37)	Old part not available anymore
d)	Screw Delta PT Torx 50x16 Screw Delta PT Torx 60x20		4122655 (1840/109)	4 pce
		4122639 (1840/050)		

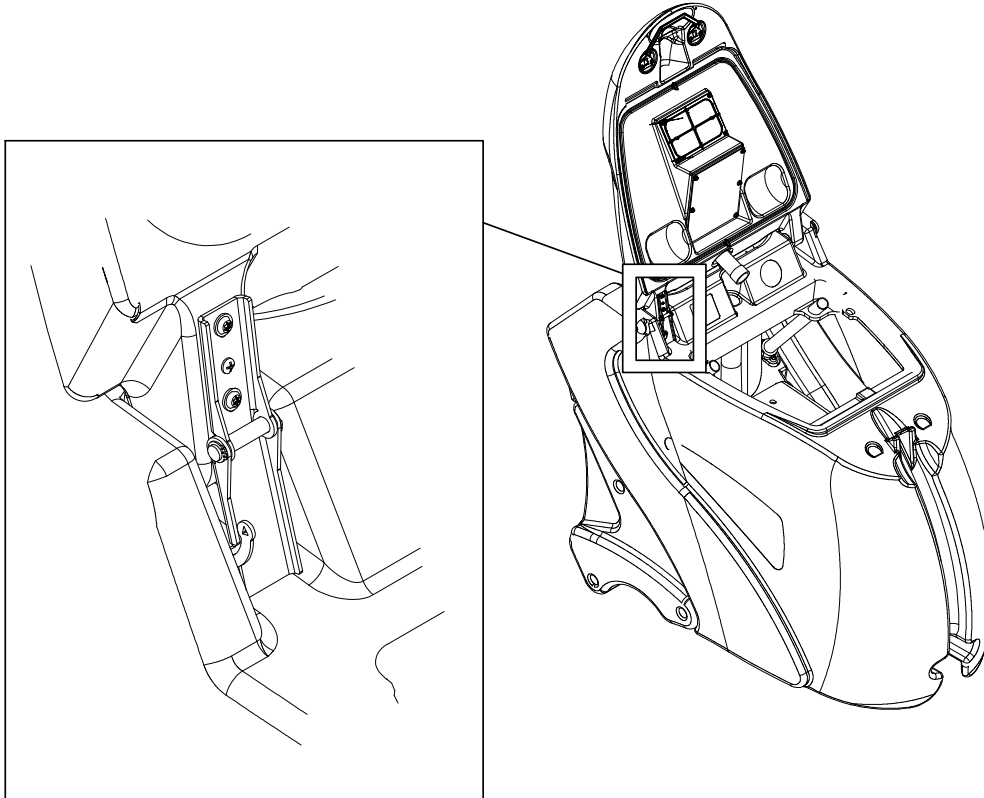

⚠ CAUTION

It has to be kept in mind when replacing the old induction air filter than the protecting plate has to be mounted between turbine and induction air filter

Service

The hinge/protection plate cannot be ordered as a set. The hinge/protection plate is not backward compatible because the strength of the lid is not designed according to that.

Production

TASKI swingo XP

as of machine number 02876