


1610



Strive

CARPET RAKE KIT

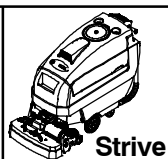

The purpose of this kit is to rake out wheel marks created in carpet when operating machine.

INSTALLATION INSTRUCTIONS:

Installation Time: 1 Hour

TOOLS REQUIRED: Phillips Screwdriver, 13mm and 9/16" Wrench.

1. Drain the solution tank and recovery tank.
2. Remove batteries from machine.

FOR SAFETY: Wear protective gloves and eye protection when handling batteries. Avoid contact with battery acid.

3. Carefully lay machine on left side.
4. Remove the two inside screws from both caster brackets (Figure 1). Save screws and washers.

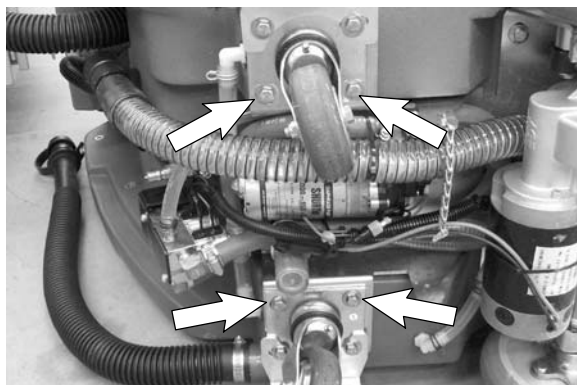


Fig. 1

5. Using the same screws and washers, mount the carpet rake assembly to caster brackets as shown (Figure 2).

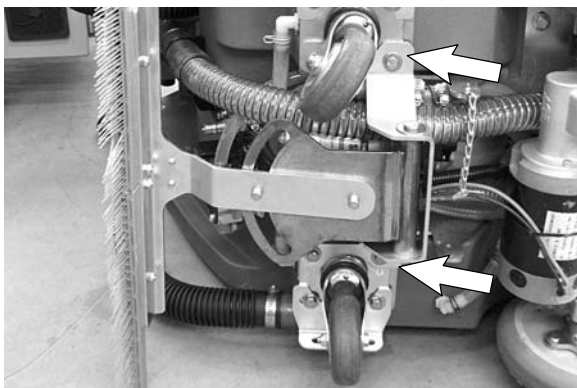


Fig. 2

6. Using two M8x1.25x20 hex screws, internal lock washers and flat washers, supplied with kit, mount the lift handle bracket to machine as shown (Figure 3).

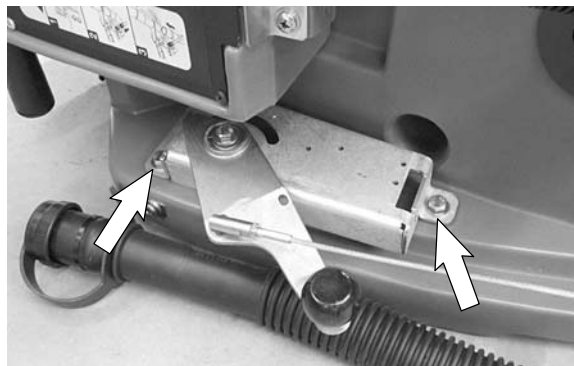


Fig. 3

7. Install spring between pivot bracket and mount bracket as shown (Figure 4).



Fig. 4

8. Remove the three screws that mount the vac hose manifold bracket to machine. Using three M6x1.00x40 phl head truss screws, flat washers and sleeves, supplied with kit, mount the cable guide bracket as shown (Figure 5).


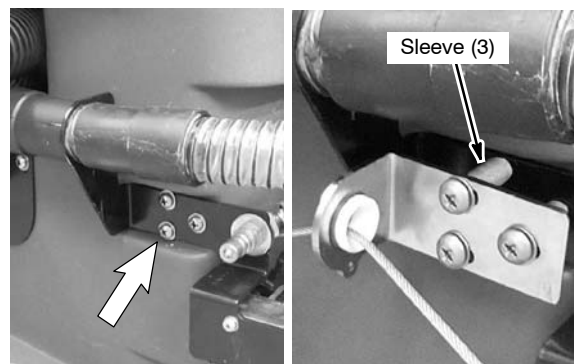


Fig. 5

9. Carefully stand machine upright and reinstall batteries.

CARPET RAKE KIT
PARTS LIST

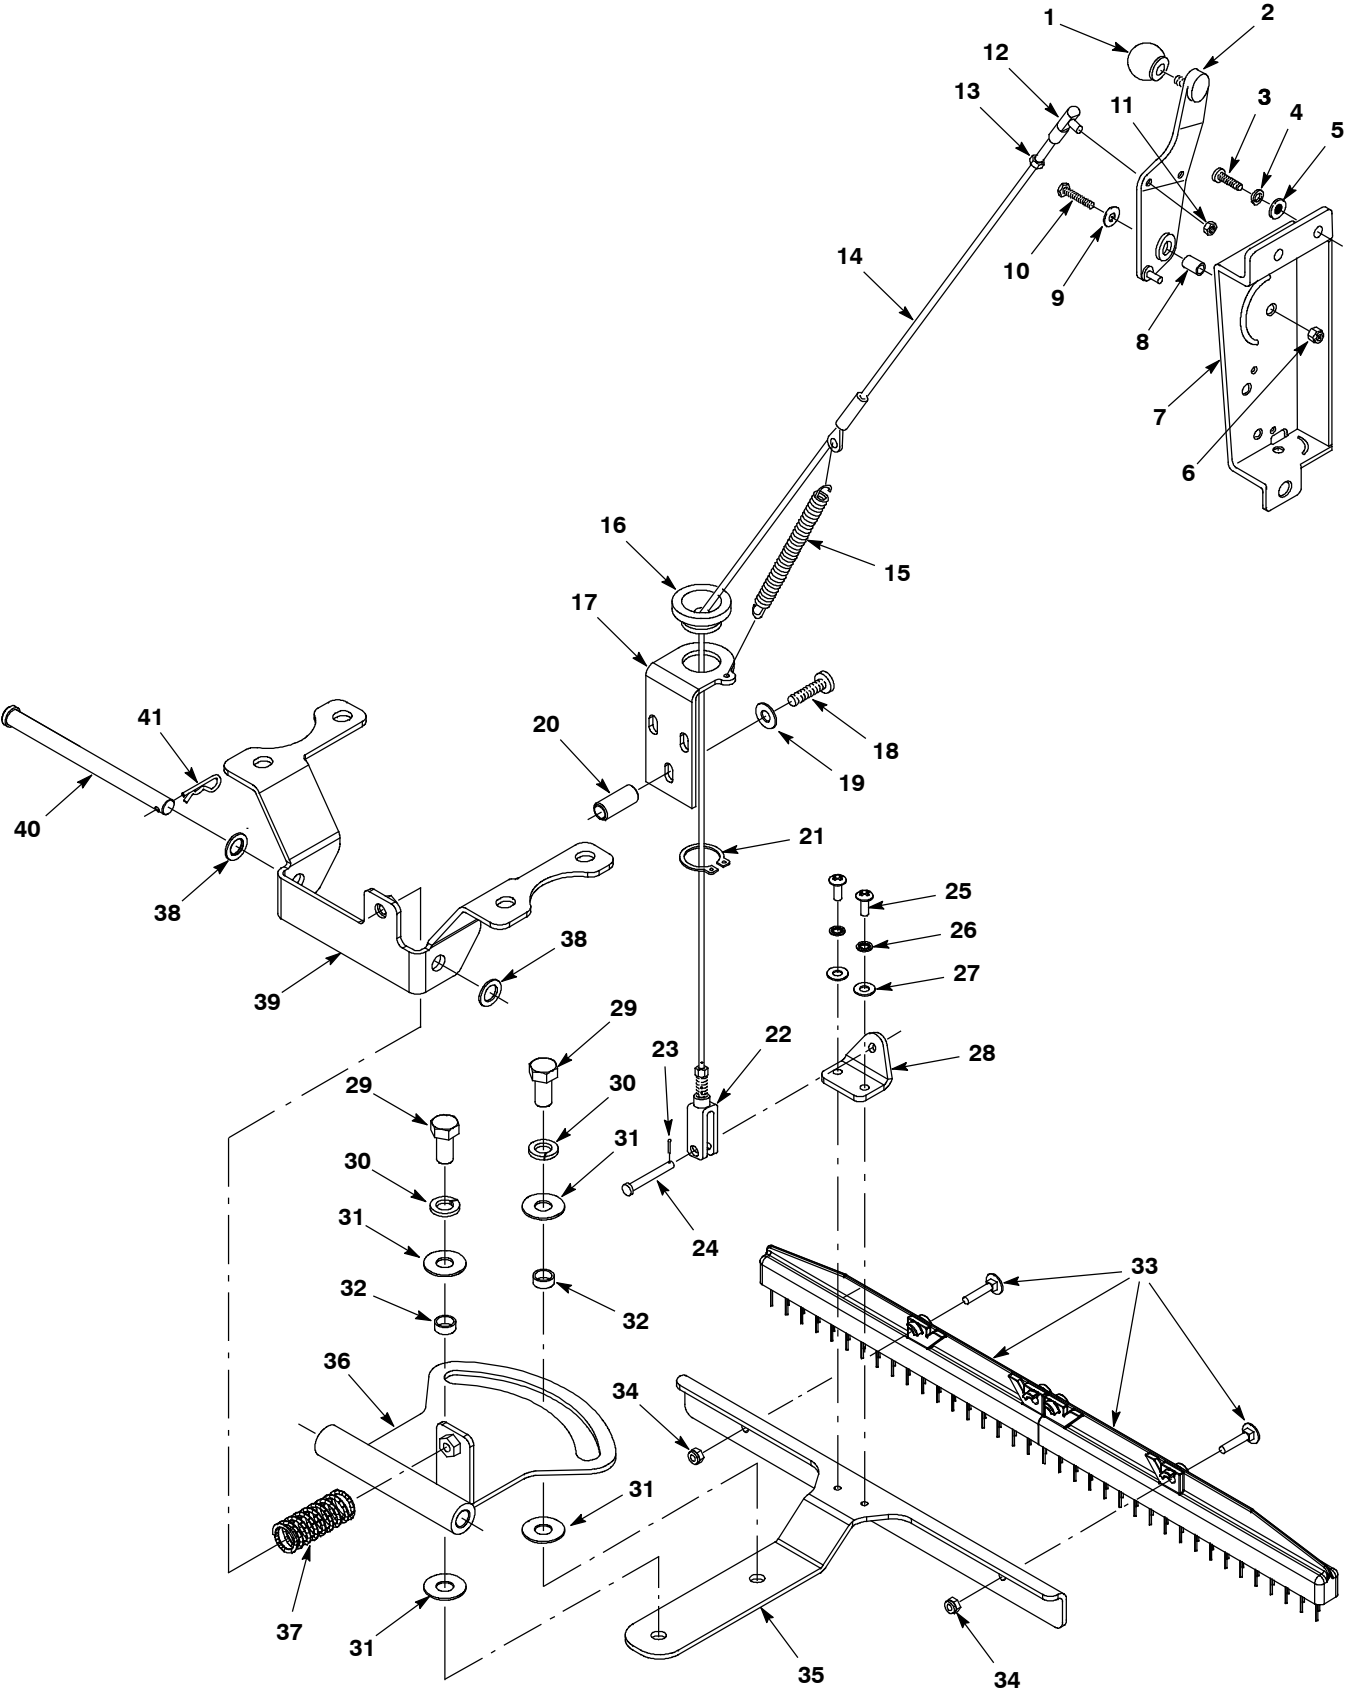

CARPET RAKE KIT PARTS LIST

Ref.	Part No.	Serial Number	Description	Qty.
▽	9008247	(00000000-	)● Kit, Rake, Carpet	1
▲	1 601425	(00000000-	)● Knob, Ball, 1.50d, .38-16 Fem	1
▲	2 1010221	(00000000-	) Lever, Sqge	1
▲	3 16931	(00000000-	) Screw, Hex, M8 X 1.25 X 20, 8.8	3
▲	4 32984	(00000000-	) Washer, Lock, Int, 0.31	3
▲	5 32491	(00000000-	) Washer, Flat, 0.31, Std	3
▲	6 08709	(00000000-	Nut, Hex, Lock, M8 X 1.25, NI	1
▲	7 612834	(00000000-	) Bracket, Lever, Sqge [5400]	1
▲	8 1014336	(00000000-	) Sleeve, P/M, 0.33b 0.50d 0.6l, PI	1
▲	9 25732	(00000000-	) Washer, Flat, 0.36b 1.25d .09, PI	1
▲	10 09011	(00000000-	) Screw, Hex, M8 X 1.25 X 30, Ss	1
▲	11 13513	(00000000-	) Nut, Hex, Lock, .25-28, NI	1
▲	12 069760371	(00000000-	) Ball Joint, 1/4-28 Unf	1
▲	13 32899	(00000000-	) Nut, Hex, Jam, .25-28	1
▲	14 1064154	(00000000-	)● Cable, Lift, Sqge	1
▲	15 605063	(00000000-	) Spring, Lever, Sqge	1
▲	16 1009363	(00000000-	)● Bushing, Cable	1
▲	17 1064152	(00000000-	) Bracket, Cable Guide	1
▲	18 608324	(00000000-	) Screw, Trs, M6 X 1.00 X 40, Phl, Ss	3
▲	19 140000	(00000000-	) Washer, Flat, 0.28b 0.62d .04, Ss	3
▲	20 383910	(00000000-	) Sleeve, P/M, 0.32b 0.44d 1.1l [430ss]	3
▲	21 621236	(00000000-	)● Ring, Retaining, Ext, 0.81d	1
▲	22 605068	(00000000-	) Clevis, Adj, 0.25pin, 0.25-28 PI	1
▲	23 08170	(00000000-	) Pin, Cotter, .062 X 0.50	1
▲	24 605070	(00000000-	) Pin, Clevis, 0.25d X 0.79l	1
▲	25 608322	(00000000-	) Screw, Trs, M6 X 1.00 X 16, Phl, Ss	2
▲	26 07515	(00000000-	) Washer, Lock, Int, 0.25, Ss	2
▲	27 140000	(00000000-	) Washer, Flat, 0.28b 0.62d .04, Ss	2
▲	28 1064153	(00000000-	) Bracket, Cable, Sqge Lift	1
▲	29 140237	(00000000-	) Screw, Hex, .50-13 X 1.00, Ss	2
▲	30 140024	(00000000-	) Washer, Lock, Split, 0.50, Ss	2
▲	31 140045	(00000000-	) Washer, Flat, 0.51b 1.25d .06, Ss	4
▲	32 140139	(00000000-	) Sleeve, P/M, 0.50b 0.63d 0.3l, PI	2
▲	33 1061617	(00000000-	)● Rake, Carpet (Includes Qty 4 Screws)	1
▲	34 32981	(00000000-	) Nut, Hex, Lock, .25-20, NI	4
▲	35 1062208	(00000000-	) Bracket, Rake, Pivot	1
▲	36 1062204	(00000000-	) Wldt, Pivot, Lift, Rake	1
▲	37 45261	(00000000-	) Spring, Cmpr, 0.97od .11wir 02.5l	1
▲	38 140058	(00000000-	) Washer, Flat, 0.54b 0.88d .06, Ss [Wand]	2
▲	39 1062219	(00000000-	) Bracket, Mount, Rake	1
▲	40 1064151	(00000000-	) Pin, Clevis, 0.50d X 7.00l	1
▲	41 140626	(00000000-	) Pin, Cotter, Hair, 0.25d .125 Wir	1

▽ ASSEMBLY

▲ INCLUDED IN ASSEMBLY

● RECOMMENDED STOCK ITEMS