Tech Bulletin TASKI swingo 455B Nexsys Battery Conversion

Tools Needed



A. T-15 Torx

B. 5mm Allen wrench



5. Using a T15 Torx remove cord bracket.





1. With a 5mm Allen wrench remove 2 front screws located on each side of the machine underneath the front side of the solution tank.


2. Unplug batteries from rear of machine.

3. Lift up front of machine, disconnect batteries and remove batteries to allow charging cord to be disconnected.

4. Disconnect power cord.



6. Remove power cord. Be sure to cut tie wrap on outside of machine before pulling plug through the rubber grommet. Otherwise you could damage the machine.

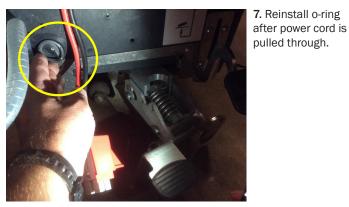

8. Reinstall batteries.

9. Reinstall 2 front screws.

10. Mount Nexsys charger in proper location. Unit will power up once plug is inserted into power source. Plug red end of TASKI machine into the gray end of charging unit.





12V 67Ah AGM Nexsys 162-6019

24V 20amp off board AGM Nexsys 162-6020

