

56317136 SCRUB-N-VAC TOOL KIT


For AquaPLUS™ / AquaPLUS™ AXP
Clean Track® L24

CONTENTS OF KIT

ITEM	PART NO.	QTY	DESCRIPTION
	56040913	1	Instruction Sheet
1	56220035	1	Hose Assembly
2	56314399	1	Coupler
3	56315311	2	Spacer, Stepped
4	56002292	2	Scr, Pan Phil 1/4-20 x 1.00
5	56402940	2	Bumper, .812 Sq. NOTE
6	56317137	1	Fitting Assy
7	56314402	1	Wand Assembly
8	56314403	1	Caddy NOTE
9	56407361	6	Clamp NOTE
10#	56009029	12	Scr Panphil Thd Form 10-24x.50 NOTE

NOTE: Items (5, 8, 9 & 10) are preassembled.


= Revised or new since last update

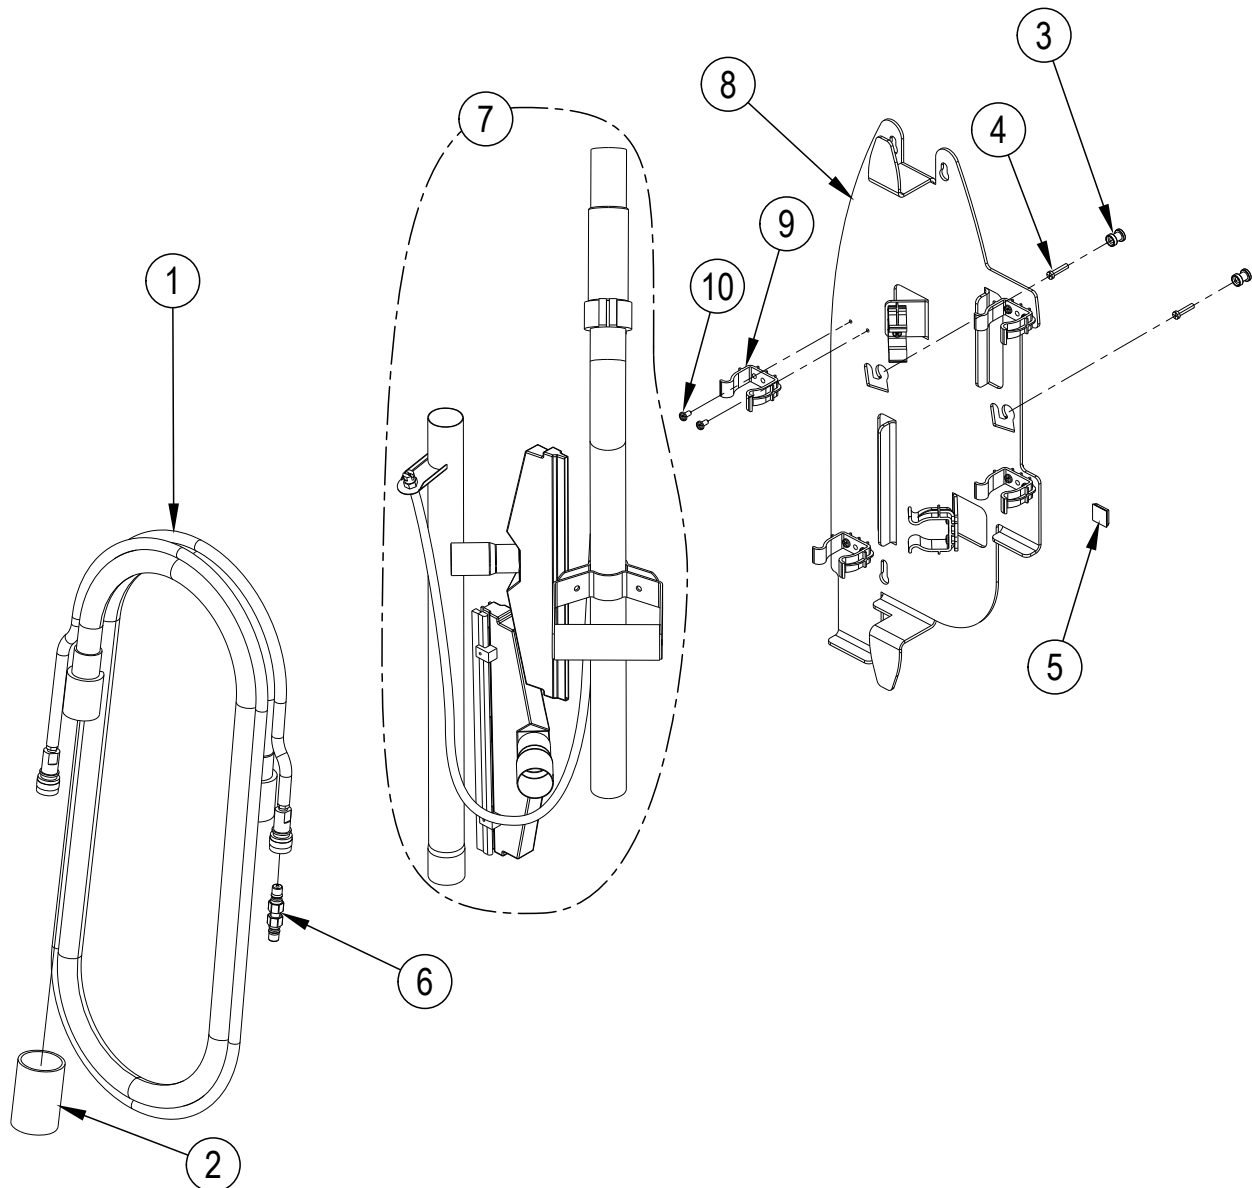

INSTALLATION INSTRUCTIONS

- 1 **See Figure 1.** Locate the (2) Nutserts (A) behind the model decal on the left side of the machine.
- 2 Cut through the decal to expose both nutserts (A).
- 3 Install the (2) Spacers (3) using the (2) Screws (4) as shown.
- 4 Install the Wand Bracket Assembly (5, 8, 9 & 10) onto the Spacers (4) as shown.
- 5 Assemble the Wand Assembly (7), Coupler (2), Fitting (6) and Hose Assembly (1) onto the Wand Bracket as shown.

FIGURE 1

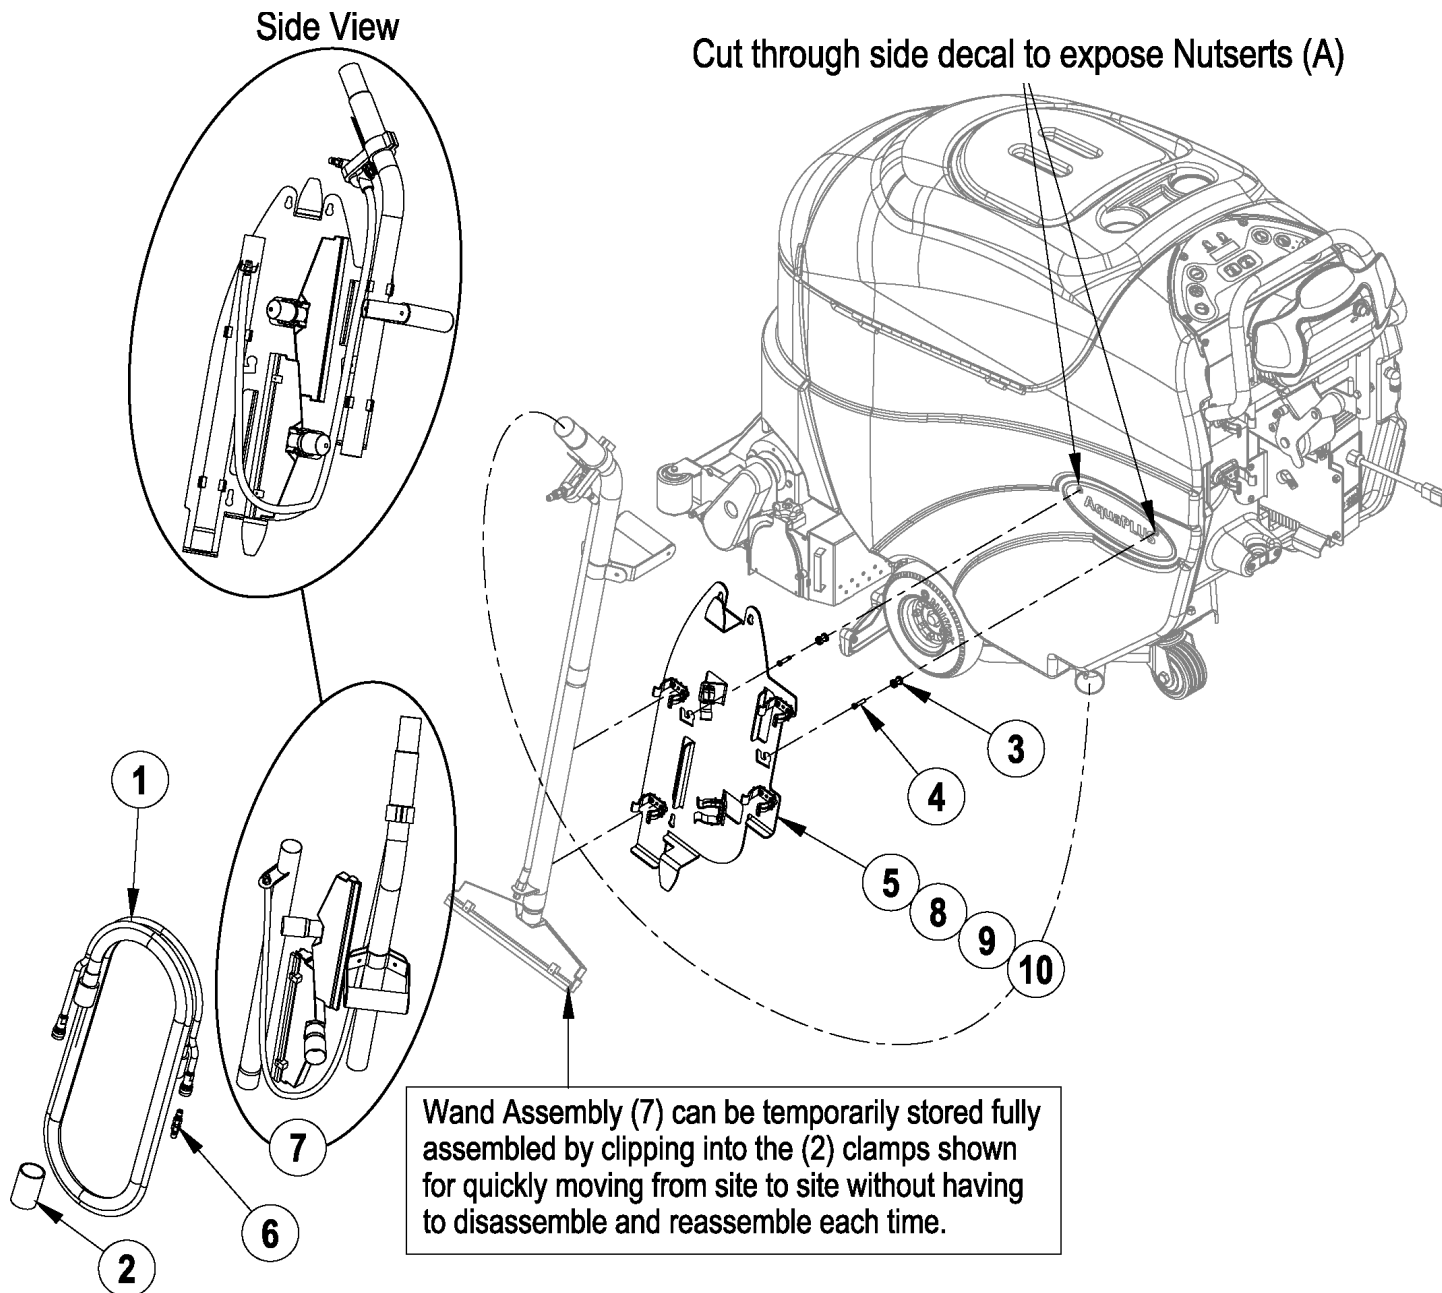

OPERATION INSTRUCTIONS

- 1 **See Figure 2.** Assemble Wand Assembly (7) and connect one end of Hose Assembly (1) to the Wand Assembly.
- 2 Disconnect the Recovery Hose (B) from the Y-Tube under the left rear corner of the machine and insert the Coupler (2) into the end of the hose, slip the other end of Hose Assembly (1) into the other end of the Coupler (2). Insert the Fitting Assy (6) into the quick disconnect coupler next to the Y-Tube and then connect the quick disconnect coupler from Hose Assembly (1) to the Fitting Assy (6).
- 3 Turn the Key Switch (C) ON and push the Wand Kit Button (D) on the touch pad control panel to turn ON the Vacuum and Pump Systems.

FIGURE 2

