


56344093 INTERFACE PANEL KIT

ES4000 Models: ALL

CONTENTS OF KIT

ITEM	PART NO.	QTY	DESCRIPTION
	56090071	1	Instruction Sheet
1	56344104	1	Membrane Switch
2	56601101	1	Interface Panel

[] = Not Shown

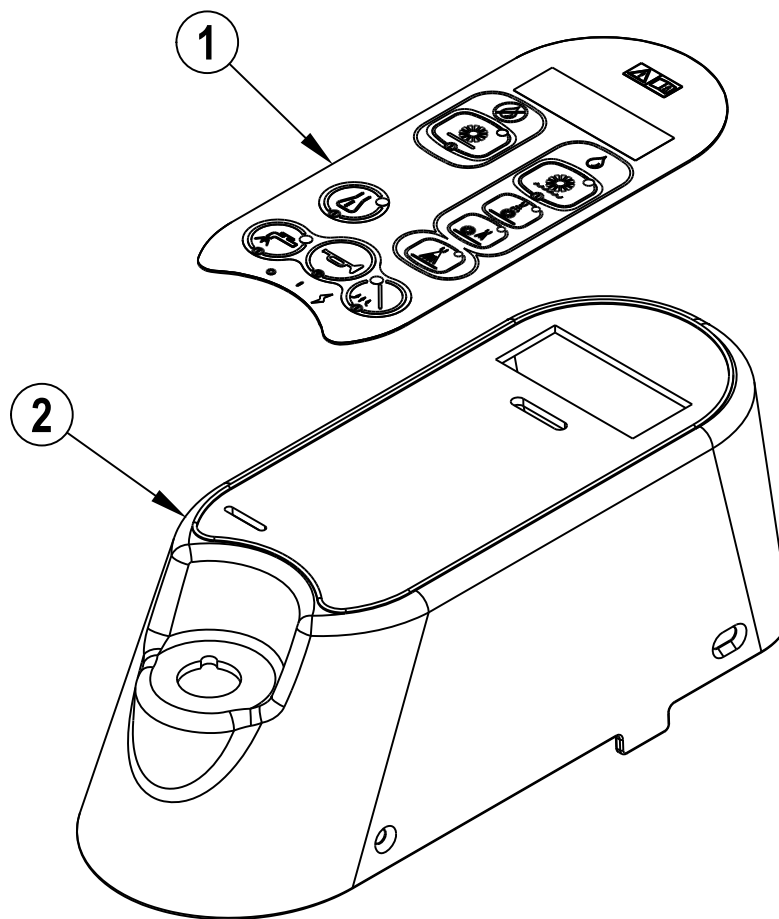

INSTALLATION INSTRUCTIONS



WARNING!


DISCONNECT BATTERIES BEFORE SERVICING.

Note: Refer to page 2 for installation instructions.

CONTROL PANEL REMOVAL

- 1 See Figure 1. Flip the seat forward and prop. Remove the (4) Screws (A) from the Control Panel Assembly (B) then lift and tilt the Control Panel Assembly (B) to access the underside.
- 2 Take note of the wiring connections for reassembly and then disconnect all wiring and the small clear hose. **NOTE! DO NOT** disconnect the small clear hose from the circuit board. It should only be disconnected from the fitting on the top of the tank.

FIGURE 1

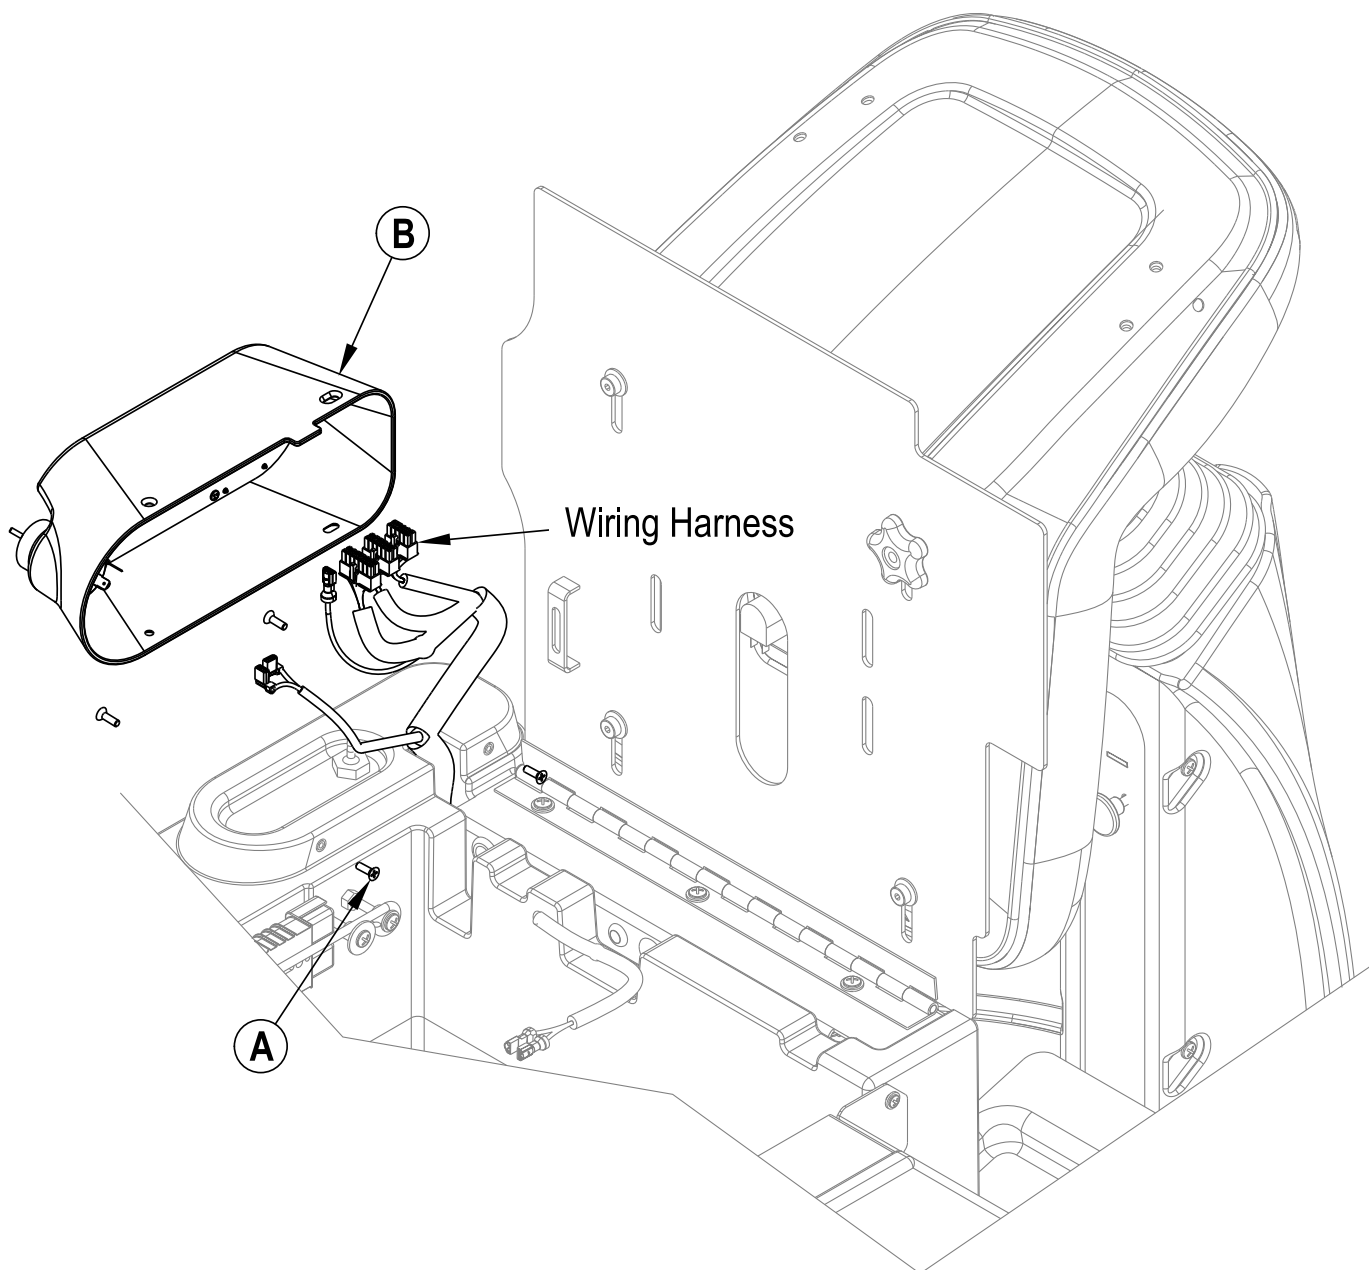

CONTROL PANEL DISASSEMBLY, ASSEMBLY AND INSTALLATION

- 1 See Figure 2. Remove the Key Switch (A) from the panel assembly (E).
- 2 Remove the (5) Screws (B), the Circuit Board (C) and the Tab (D) from the panel assembly. NOTE: Save Items (A-D) and discard the panel assembly (E).
- 3 Follow all previous steps in reverse order to reassemble and install the control panel assembly using the new panel assembly (1 & 2) from the Interface Panel Kit.
- 4 NOTE: If there is water in the solution tank when the small clear hose was disconnected, you will also need to drain the tank completely after re-installing the hose in order for the solution tank level indicator to read correctly on the display.

FIGURE 2

