



# GTS NEWSLETTER


## TASKI ergodisc – Dispensing unit

### Optimisation around the spray nozzle

1. Practical experience showed that the hose is often separated from the spray nozzle or then positioned differently. To simplify this separation you will now find a so-called “quick connector”\* **a)** order No. 4123157 (2744/081) behind the nozzle body. (Quick-release by pressing onto the face side)  
This new concept needs additionally a 50 mm long piece of hose 2/4mm, order No. 4049370 (8722/12), see **x)**.
2. Improved positioning/fixation of the spray nozzle by adding a distance disc **c)**  
Necessary parts:
 

<b>b)</b> Rubber ring	order No. 4037840 (14501-49)
<b>c)</b> Distance disc	order No. 4123156 (70016-45)
<b>d)</b> PT screw	order No. 4082610 (1840/012)

*Parts a) and c) are new in the TASKI spare parts programme !*

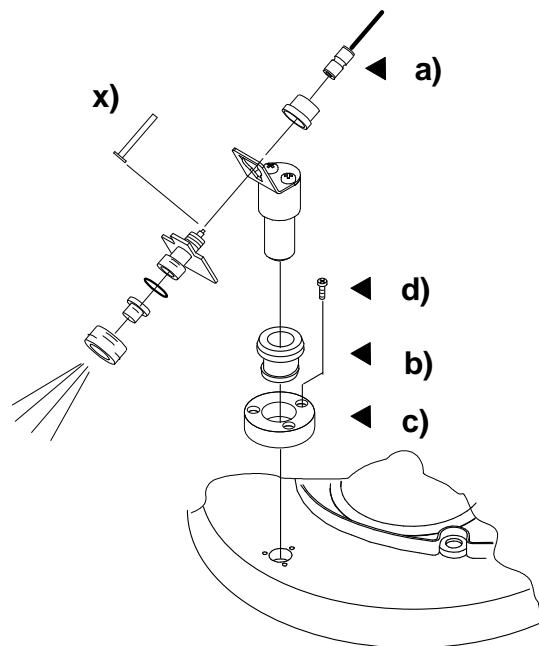

### Service

#### **Adding a „quick connector“ a) to existing dispensing units:**

Cut through the hose 50 mm behind the body of the spray nozzle (see **x)**), then push both hose ends into the connector **a)** – that’s it.

#### **New fixation of the spray nozzle c):**

Starting immediately, only executions with the new parts will be delivered. The new parts can, at any time, also be retrofitted to existing TASKI ergodiscs/dispensing units.