



Nilfisk

TECHNICAL SERVICE BULLETIN

Number: TSB-COM-VAC-2015-002

Symptom: Wheel spare part kit for VU500

Date: 25. November 2015

Urgency: General

Author: Per Balling

Urgency:



GENERAL: General
information

SYMPTOM:

The shaft in the kit are too short, which mean you cannot reinstall the new wheels to the base.

PRODUCTS:

All VU500 models

SYSTEM:

Wheels spare part kit

ISSUE:

The wheel shaft in spare part 147 0898 500 is too short for the VU500.

CAUSE:

Spare part lists was referring to the wheel shaft kit for GU 305/355/455 and Spectrum upright vacuum cleaners. The shaft in these kits are shorter then the one used in VU500.



Nilfisk

TECHNICAL SERVICE BULLETIN

Number: TSB-COM-VAC-2015-002

Symptom: Wheel spare part kit for VU500

Date: 25. November 2015

Urgency: General

Author: Per Balling

Urgency:



GENERAL: General
information

ECR / ECN #:

04311 / 1004442

PRODUCTION CORRECTIVE ACTIONS:

New shaft wheel kit 107416451 has been created including a longer shaft that fits VU500.

Spare part lists has been updated

PRODUCTION SOLUTION IMPLEMENTATION DATE and / or SERIAL NUMBER:

New spare part 107416451 WHEEL SHAFT KIT has already been opened for sale.

Urgency:



GENERAL: General
information

FIELD CORRECTIVE ACTIONS:


Locally made and distributed spare part list must be updated.

SPARE PARTS or Kits Needed:

Correct spare part for VU500:

107416451 WHEEL SHAFT KIT

Correct for VU500:

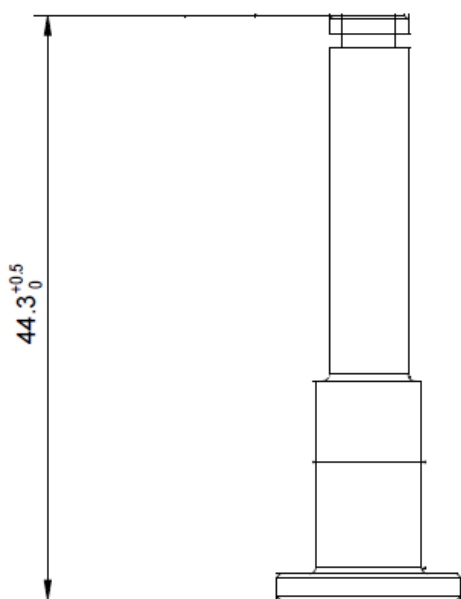

Wrong for VU500:

